

How to export GxR-xx configuration

- Open GeoDAS
- Login to the instrument you want to export the configuration
- Open "Instrument setup manager"

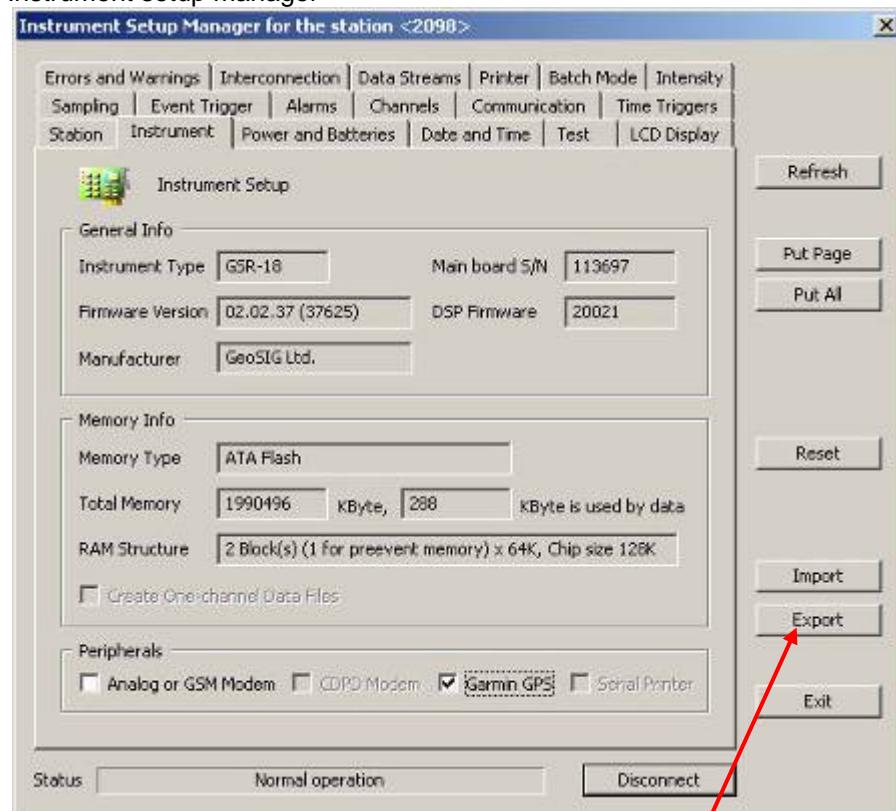


Fig 1. Instrument Setup manager

- Push button "Export" and store the file on your PC