



**GSR-12 / 16 / 18 / 24**

**AS-12 / 16**

**GCR-12 / 16**

**User Manual Appendix K**  
**Indoor Interconnected Recording Networks**

## Document Revision

Author	Mischa Sabathy
Checked	Alexandre Beaud
Approved	Talhan Biro

Version	Action
01.10.2009	First issue: Merged information's from STC into one appendix
20.10.2010	Update chapter 1 - MAE

### Disclaimer

GeoSIG Ltd reserves the right to change the information contained in this document without notice. While the information contained herein is assumed to be accurate, GeoSIG Ltd assumes no responsibility for any errors or omissions.

### Copyright Notice

No part of this document may be reproduced without the prior written consent of GeoSIG Ltd. The software described in this document is furnished under a license and may only be used or copied in accordance with the terms of such a license.

### Trademark

All brand and product names mentioned are trademarks or registered trademarks of their respective holders.

All rights reserved.

GeoSIG Ltd

Switzerland

# Table of Contents

- 1. Introduction..... 4
- 2. Description and Functionality..... 4
  - 2.1. Common Functionality ..... 4
    - 2.1.1. Type CCL: (Common Time, Common Trigger, Local Communication) ..... 4
- 3. Installation ..... 5
  - 3.1. Physical Interconnection ..... 5
  - 3.2. Interconnected Recorders..... 5
    - 3.2.1. CCL..... 5
    - 3.2.2. Software Configuration ..... 7
  - 3.3. Verification of the Installation ..... 8

## 1. Introduction

When interconnection is involved, more options are available in terms of connections, data flow, accessibility, and cost. This manual shows a drawing for an indoor interconnected recording network. This interconnection is for indoor installations only, where the danger of lightning is minimal.



***Use this interconnection for indoor applications only***



***The interconnection network is limited to a cable length of 1000 m and a maximum station number (Master and Slaves) of 10 instruments.***

## 2. Description and Functionality

### 2.1. Common Functionality

**Connections:** Several recorders with internal or external sensors are placed on site and are interconnected with one cable while galvanically isolated from each other.

**Common Timing:** One of the interconnected recorders (commonly referred to as the Software Master) is enabled to synchronise and update the internal clock of each of the other recorders (commonly referred to as Software Slaves) via the network to achieve Common Timing. All stations within the network use this common time information to synchronise their internal time. The time synchronisation is a permanent task for the Software Master. The stations within the network permanently check their synchronisation status. In case of not having the network time information available, the Slave stations base on their internal real time clock. The time of the last successful synchronisation is available in the status information of a Slave station and is written into every event header. A GPS time source can be connected to the Software Master to achieve the time synchronisation of the whole array to the absolute time, which allows easier correlation with recordings made by other arrays or recorders.

**Common Trigger:** Triggering functionality of each recorder can be controlled using three flags: 'Internal Trigger', 'Network Trigger Output' and 'Network Trigger Input'. By enabling or disabling these flags the behaviour of each station can be defined precisely as needed in the particular application. This functionality can be summarised as follows:

- **Enable / disable self trigger:**  
The station triggers if an internal trigger condition is fulfilled and the 'Internal Trigger' flag is enabled.
- **Enable / disable sending trigger to network:**  
The station transmits an active trigger message to the network if an internal trigger condition is fulfilled and the 'Network Trigger Output' flag is enabled.
- **Enable / disable accepting trigger from network:**  
The station triggers if an active trigger message arrives from the network and the 'Network Trigger Input' flag is enabled.

If a station is not synchronised to the network it records based on the specified internal trigger condition. An output for Local Communication is available at each recorder for local data retrieval and setting of parameters. The reliability of the monitoring network is high, because a malfunction of a recorder would affect only the location of malfunction in the array. If the network is interrupted, each of the recorders will perform as a stand-alone recorder by recording whenever the instrument's event-recording trigger level is reached.

#### 2.1.1. Type CCL: (Common Time, Common Trigger, Local Communication)

This type of array enables common triggering and common time in the simplest form. The data are stored locally in every recorder and have to be retrieved locally from each recorder separately, due to the

availability of Local Communication only. Similarly, the setting of parameters of each recorder has to be performed on the site of each recorder.

 | *A Cable with a single twisted pair is sufficient for this type.*

 | *This indoor type is only for the CCL! Do not use for CCC and CCM type!*

## 3. Installation

### 3.1. Physical Interconnection

To establish the interconnection between the recorders, connect the supplied cable to the “INTERCON” connector on the front of the recorder. The pin out of the cable is as follow.

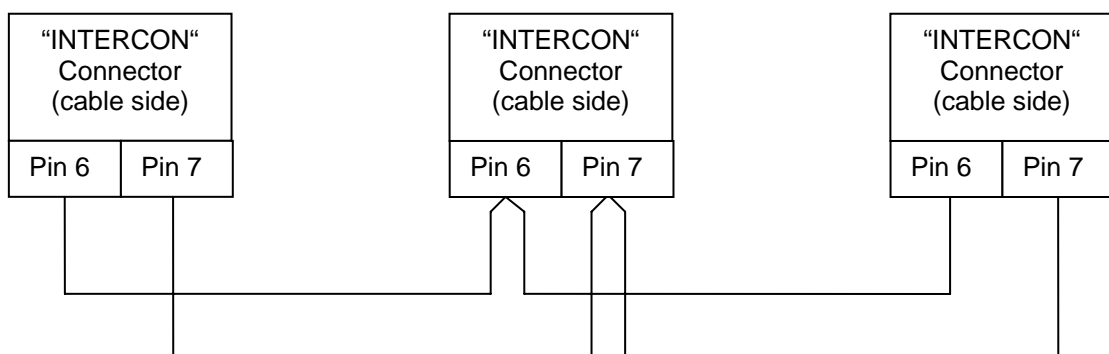


Figure 1. Pin out of the supplied interconnection cable for three recorders

### 3.2. Interconnected Recorders

In an Interconnection Network not all recorders are configured in the same way from the hardware and from the software point of view. The text in the Figures below each recorder describes its configuration and role in the network. The recorders themselves are identified with labels containing the same text. The following Chapters describe this issue for the different types of networks.

The individual recorders are pre-configured (hardware and software) in the factory.

 | *Do not change the interconnection network specific configuration as described below unless there is a strong reason to do so (check with GeoSIG Ltd.)!*

#### 3.2.1. CCL

The following different configurations are possible (see Figure 2):

- The first recorder in the bus is configured as Network Driver and has therefore jumpers J91 and J92 inserted on the internal interconnection card GS\_ICC\_V05. There can only be one Network Driver!
- The first recorder in the bus is configured as Software Master, whereas all the other recorders are configured as Software Slaves. Refer to Chapter “Software Configuration” below
- If a GPS is available it is connected to the Software Master (first instrument)

To summarise, there are two types of instrument configurations:

- GXR Interconnection Master (first)
- GXR Interconnection Slave (all, except first)

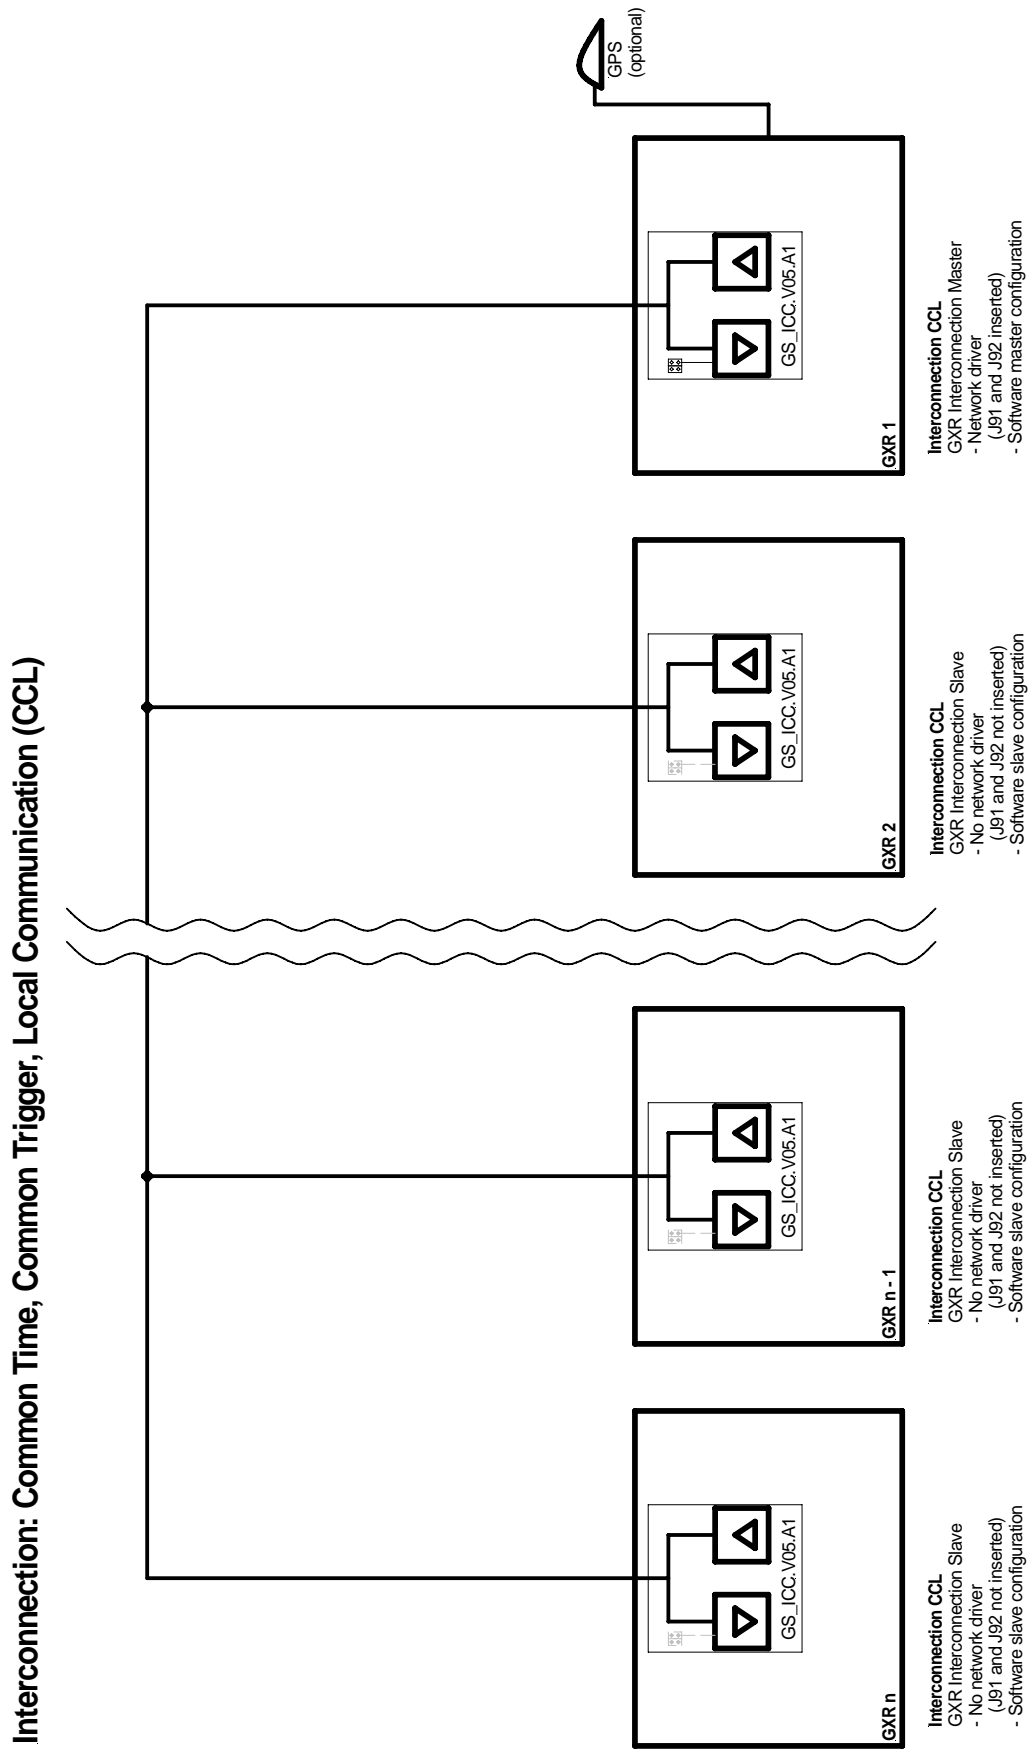


Figure 2. Interconnection Network setup CCL

### 3.2.2. Software Configuration

In order to allow Common Time and Common Trigger in the network the recorders need to be configured to this respect.

Figure 3 shows the configuration of the Software Master. The following ticks are fixed and cannot be changed.

Software Master:

- *Enable Network Synchronisation*
- *Network Master Mode*

Figure 4 shows the configuration of the Software Slave. The following ticks are fixed and cannot be changed.

Software Slave:

- *Enable Network Synchronisation*
- *Network Master Mode IS NOT TICKED*

Optional:

- *Input Network Trigger*
- *Output Network Trigger*
- *Synchronise Slave Clock to Network Clock*

For a description of the Synchronisation options please refer to Chapter 1. For more details on the use of GeoDAS please refer to the GeoDAS Software Manual.

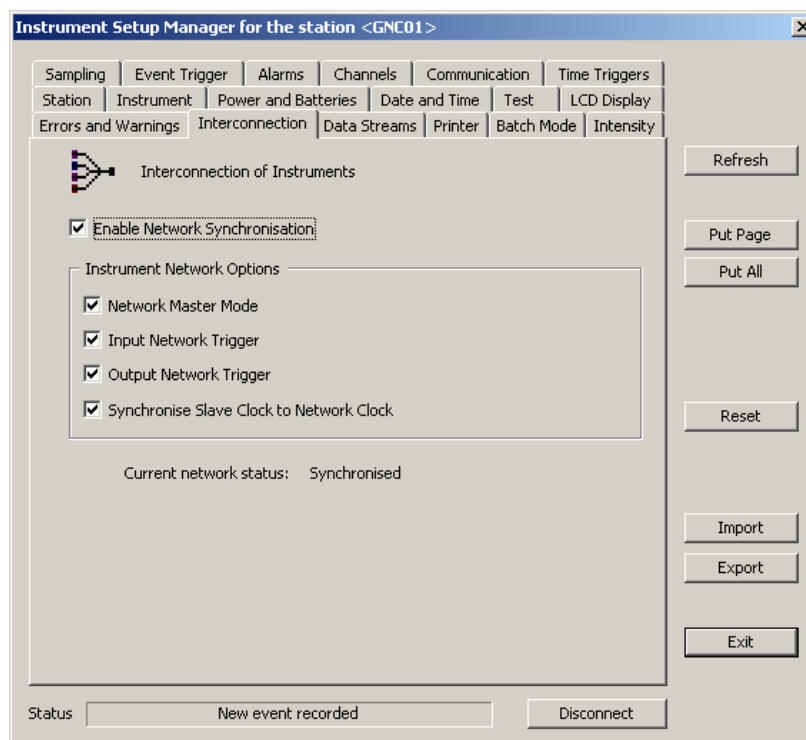


Figure 3. Software Master configuration in GeoDAS

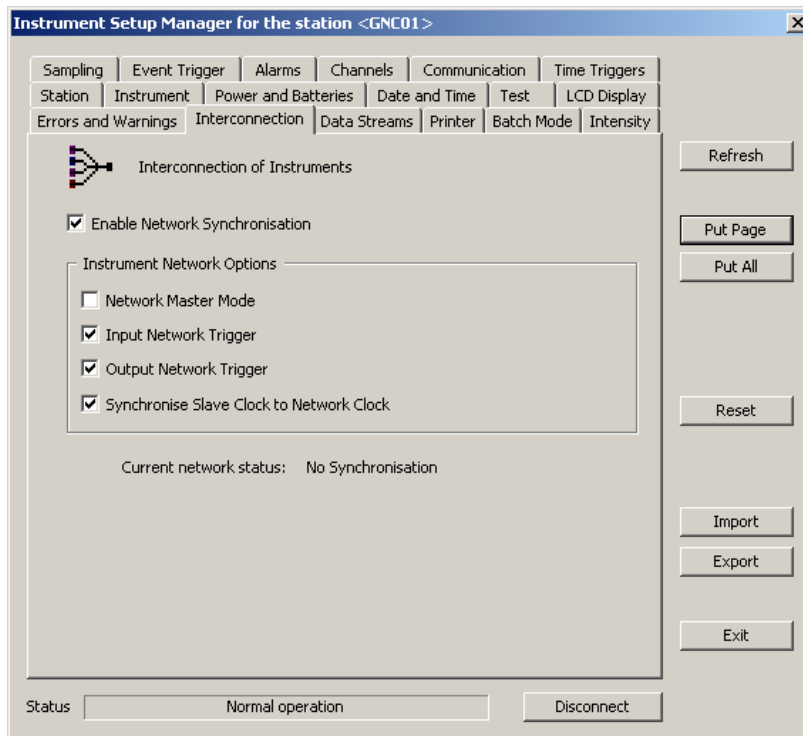


Figure 4. Software Slave configuration in GeoDAS

### 3.3. Verification of the Installation

If the network is synchronised (Common Time and Common Trigger are working) the network status of every recorder in the network, shows the word *Synchronised* (see above Figures 3 and 4 where the opposite is indicated) in GeoDAS. The synchronisation of the date and time of all Software Slaves to the Software Master should be verified and also the network triggering options. The update of the date and time of the slave stations can take several minutes.

A simple way to check the wiring during the installation is to verify the arrival of the network signals to an instrument. For this test the recorders need to be configured correctly. The following LED's can be found on the interconnection cards (GS\_ICC\_V5) inside the recorder (by removing the black plastic cover):



**Caution: High Voltage!**

***If you remove the black plastic covering the base part of the recorder housing do not touch any electronics inside.***

- LED90, yellow: Blinks in all recorders
- LED91, red: Blinks in the recorders configured as Network
- LED92, green: Blinks in the recorder configured as Software Master and during a trigger also in the corresponding Software Slave.

The communication option can be tested by simply trying to establish a connection to the instruments from a Computer running GeoDAS. The standard communication speed for Interconnection Networks is 38'400 Baud.