

FAQ GMS-scai How to Connect Serial Console with uCon

1. Introduction

- This procedure describes how to connect the serial console of a GMS-scai to a computer.
-

2. Required Tools

- Micro USB cable (Type-A plug to Micro-B plug)




- Windows Computer with installed terminal software, recommended is uCon (<http://www.umonfw.com/ucon/>)
Any other serial port terminal software may work as well




3. Connect GMS-scai

- Connect the Micro USB cable to the **USB** connector of your GMS-scai

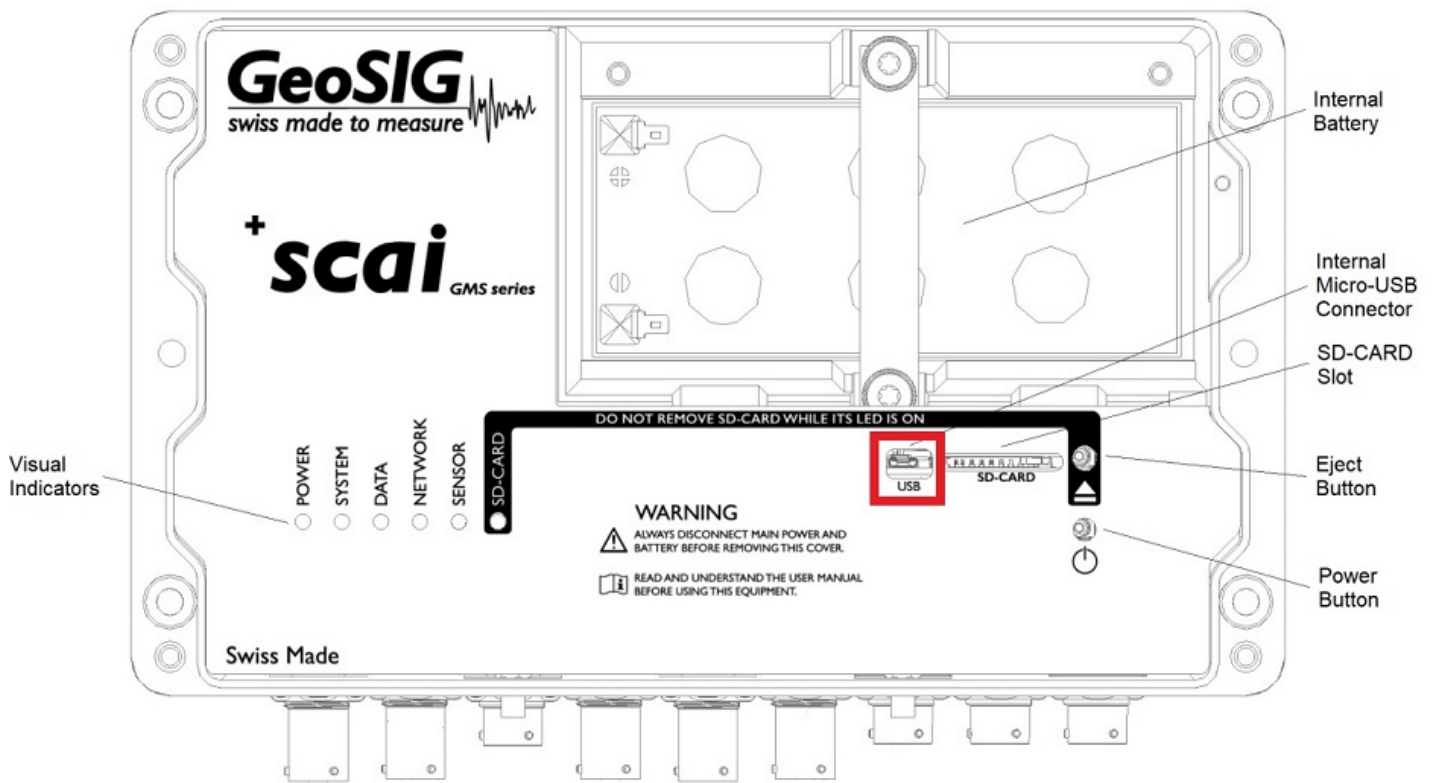


4. Find COM port in Windows

- Turn on your GMS-scai
- In Windows under **Device Manager**-> **Ports (COM & LPT)**, your GMS-scai appears as **USB Serial Port**
- Remember the COM port of the USB Serial Port

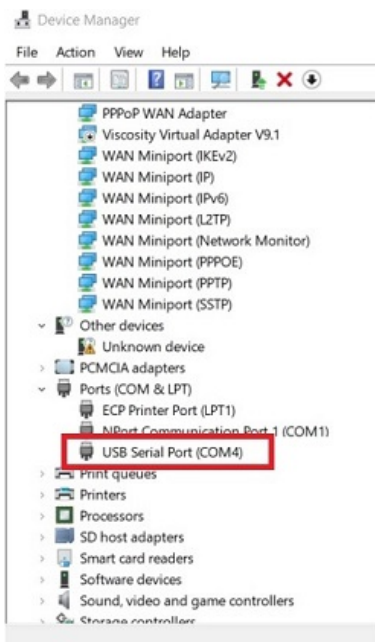

5. Connect with uCon

- Start uCon terminal software
- Choose the COM port of your USB Serial Port
- Choose baud rate **115.2K** from the dropdown
- Press **[OK]** to connect

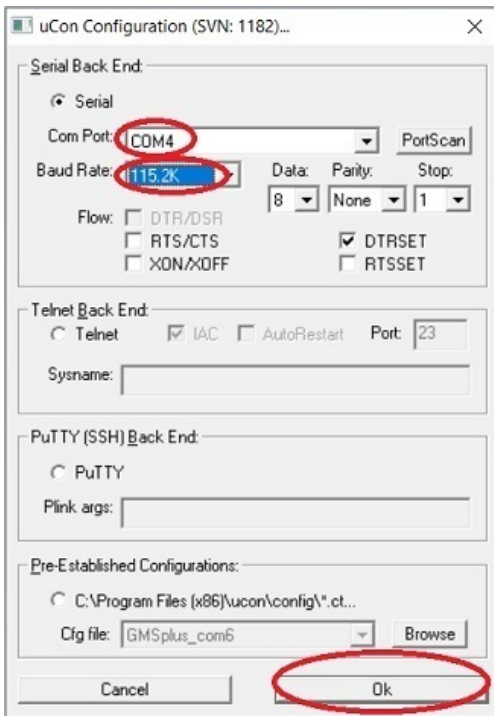

6. Navigating the console

- If the startup process of the instrument is finished, you can press **[ENTER]** key on your keyboard
- The main menu will appear

GMSplus s/n 102833 version 21.12.29

Main menu:

C - Configuration

```

M - Messages ->
S - Shell command
L - List firmware images
N - List network tunnels
X - Display errors (0) and warnings (0)
W - Clear errors and warnings
F - View/reset RTC trim values
T - File statistics
G - View RTC status
A - View Alarm status
P - View GPS information
H - Set RTC time
U - User request
R - Restart
Q - Quit

```

- Each menu point has a letter assigned
- Press the key of the menu you want to select (e.g. **[C]** to enter the configuration menu, press **[C]** again to edit current configuration)
- Always confirm your selection pressing **[ENTER]**

Main Menu

```

A) Station description ..... GMSplus (6ch) - GeoSIG Ltd
B) Station code ..... GSGMS
C) Location description ..... Switzerland
D) Seismic network code ..... GS
E) Number of Channels ..... 3
F) Number of Output Streams ..... 0
G) Number of Trigger Sets ..... 2
H) Number of Preset Triggers ..... 0
I) Channel Parameters ..... ->
K) Trigger Parameters ..... ->
M) File Storage and Policy ..... ->
N) Communication Parameters ..... ->
O) Miscellaneous Parameters ..... ->
P) Station Location ..... ->
S) GeoSIG Options ..... ->

```

Select <A>...<S>. <Esc> to exit

- At the bottom of each sub-menu, further navigation options are listed

7. Save and apply configuration changes

- Press **[Esc]** to exit the configuration menu
- Press **[C]** to save the configuration as "current"
- In the main menu, press **[R]** to restart the instrument
- After the restart, the configuration changes are applied

GMSplus s/n 102833 version 21.12.29

Main menu:

- C - Configuration
 - M - Messages ->
 - S - Shell command
 - L - List firmware images
 - N - List network tunnels
 - X - Display errors (0) and warnings (0)
 - W - Clear errors and warnings
 - F - View/reset RTC trim values
 - T - File statistics
 - G - View RTC status
 - A - View Alarm status
 - P - View GPS information
 - H - Set RTC time
 - U - User request
 - R - Restart**
 - Q - Quit
-