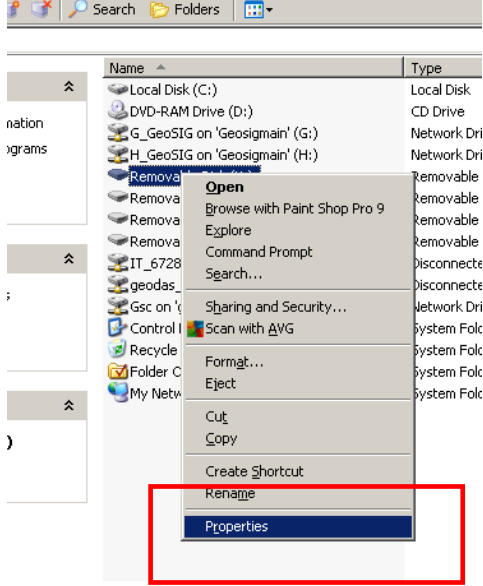
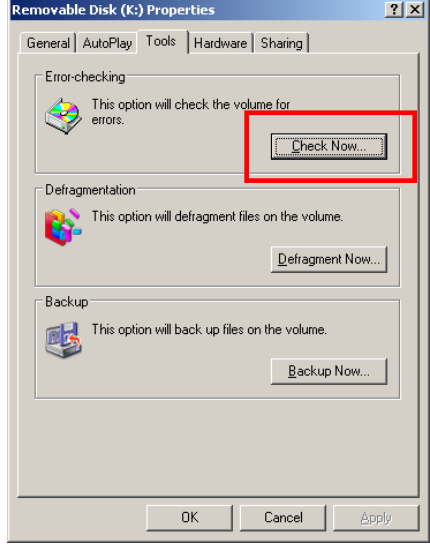
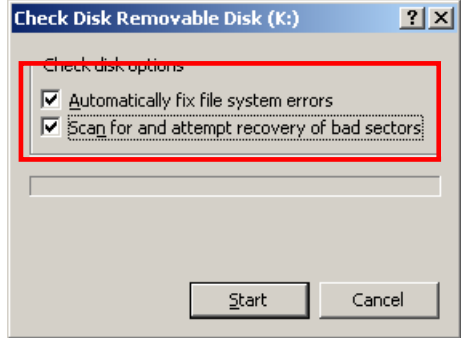
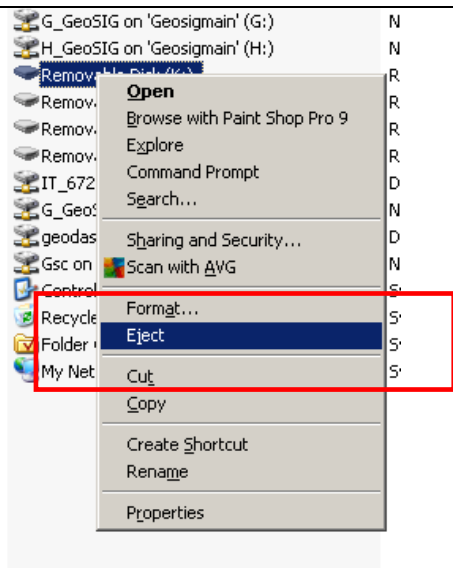


How to check and format the Compact Flash card

	Put the CF card into the card reader	
	Copy first the content of the card to your PC!	
	Right click on the specific drive Open "Properties"	
	Open the tab "Tools" Click "Check Now..."	
	Tick both options Press "Start"	

	<p>After check click "Eject"</p> <p>Wait a couple of seconds until Windows tells you "Save to remove"</p>	 <p>The screenshot shows a Windows Explorer window with a context menu open over a removable drive. The menu items are: Open, Browse with Paint Shop Pro 9, Explore, Command Prompt, Search..., Sharing and Security..., Scan with AVG, Format..., Eject (highlighted in blue and enclosed in a red box), Cut, Copy, Create Shortcut, Rename, and Properties. The drive letter 'S:' is visible to the right of the menu items.</p>
--	---	--