


## Direct connection between GMS and PC

GMS-xx does connect every 10 sec. (default) to the GeoDAS server, to see if there is a request for him.

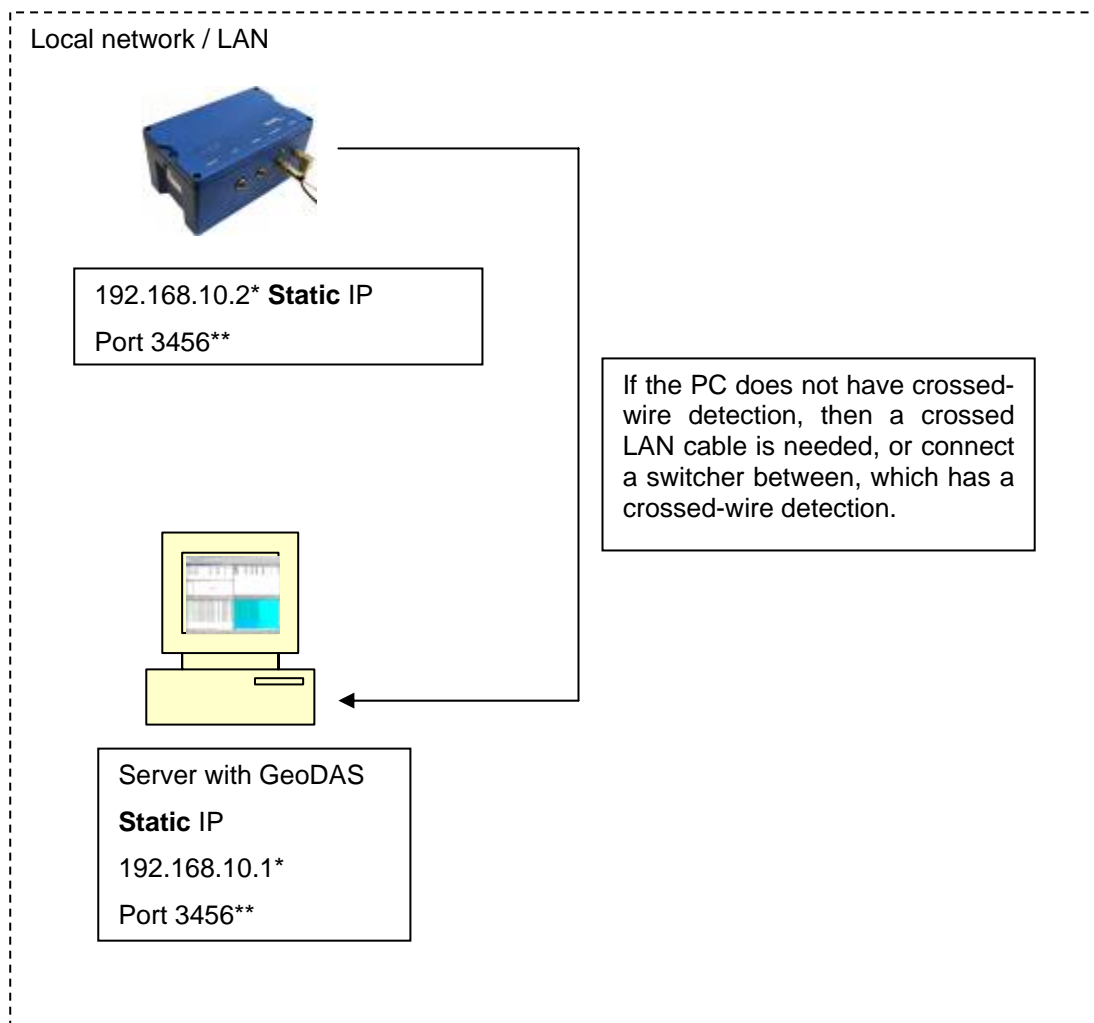


\* *only examples*

\*\* *default*

**Connection through Ethernet**

GMS-xx does connect every 10 sec. (default) to the GeoDAS server, to see if there is a request for him.

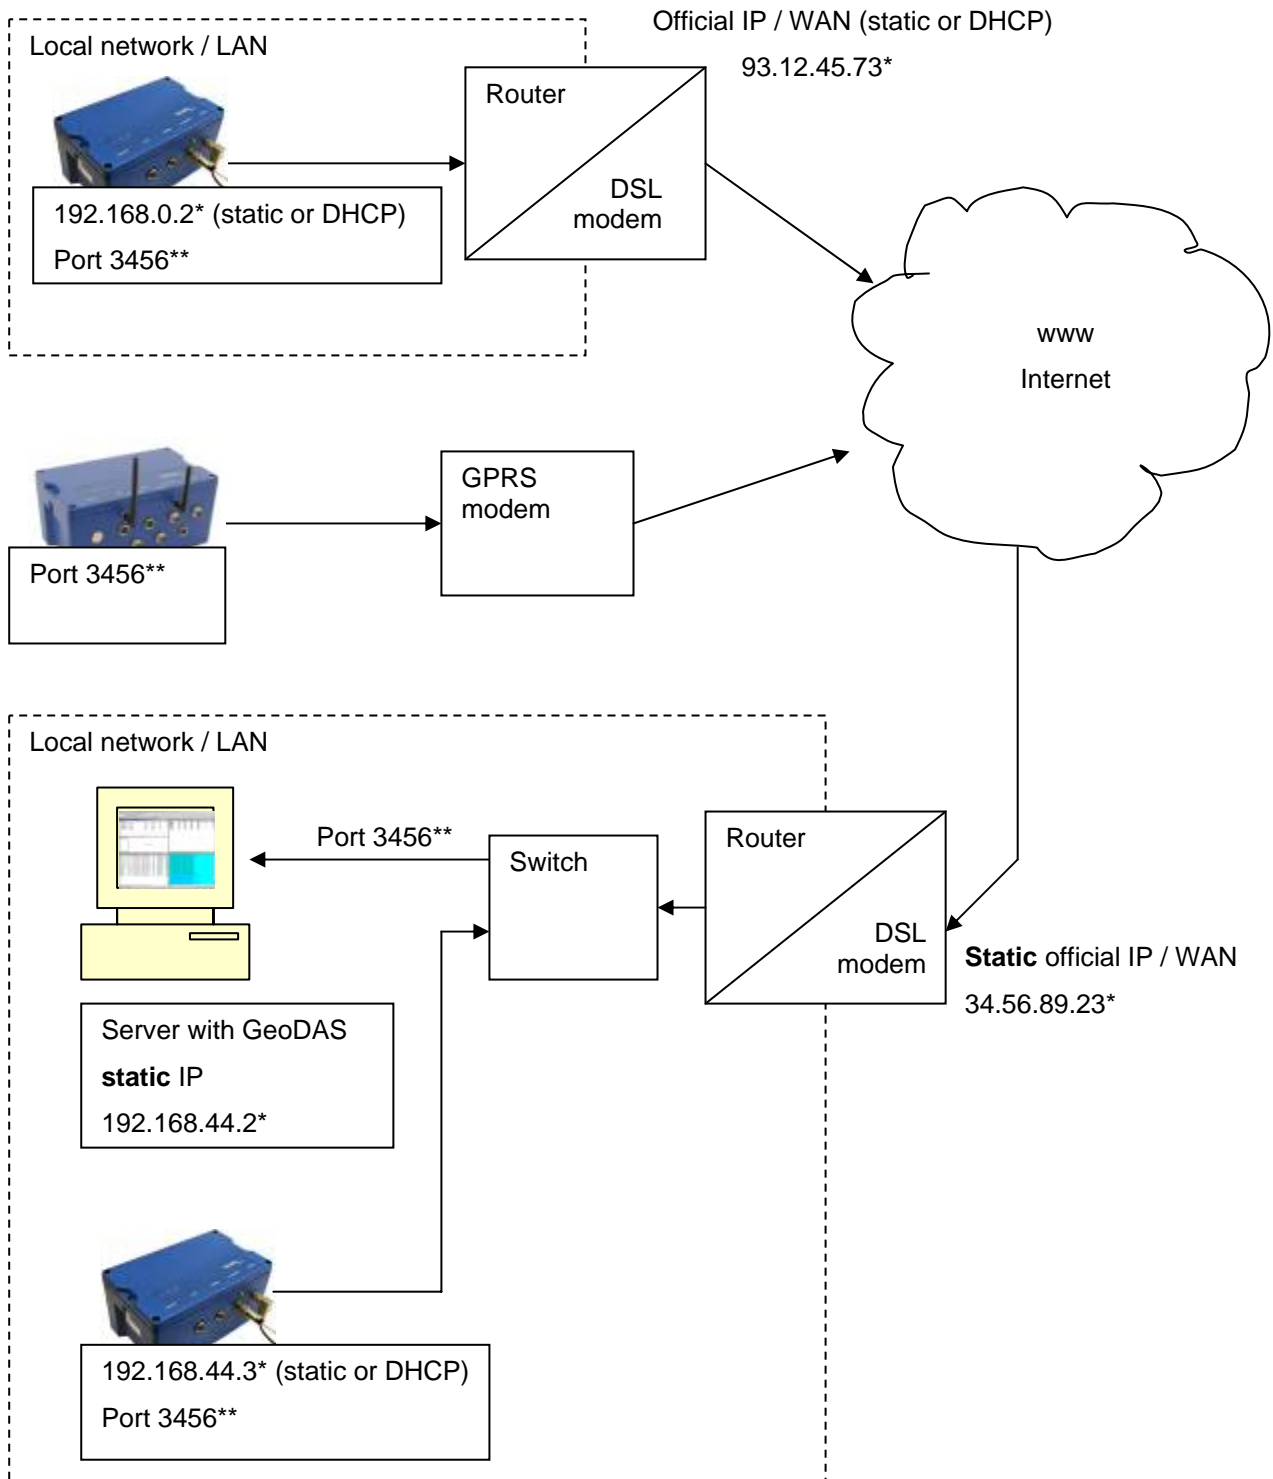

The router of the GeoDAS server has to be set, that the request from the GMS has been forwarded to the GeoDAS server. For this you have to set in the router menu the specific port (default 3456) to the IP of the GeoDAS server (Port forwarding for Port 3456\*\* from 93.12.45.73 to 192.168.44.2\*)

\* only examples

\*\* default