



## FAQ GeoDAS Configuration Backup and Restore

### 1. Introduction


- This procedure describes how to store a backup of GeoDAS configuration and how to restore GeoDAS configuration from a backup file.

### 2. Required Tools


- GeoDAS installed on Windows Computer

### 3. Backup GeoDAS Configuration


- In GeoDAS under **File -> Configuration**, click **Backup**

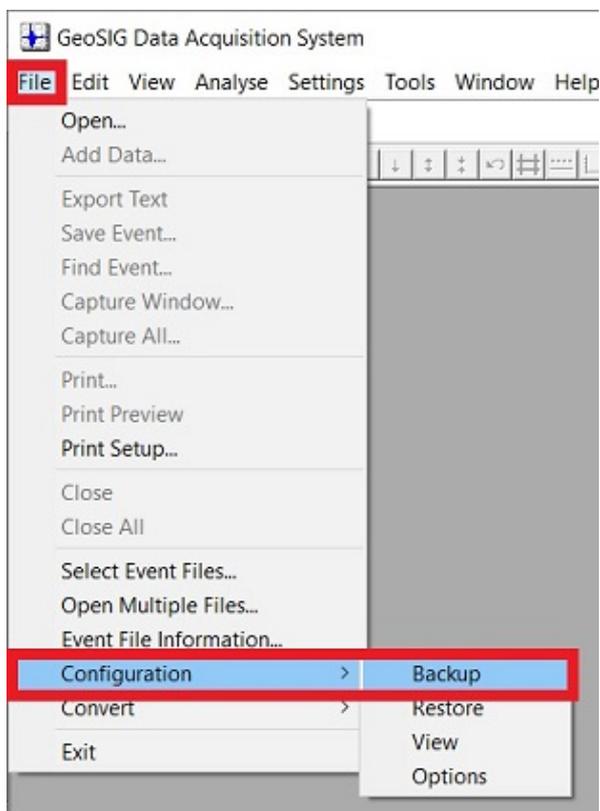

- Choose a directory and file name for your backup
- Click [**Save**] to save the configuration in .txt format

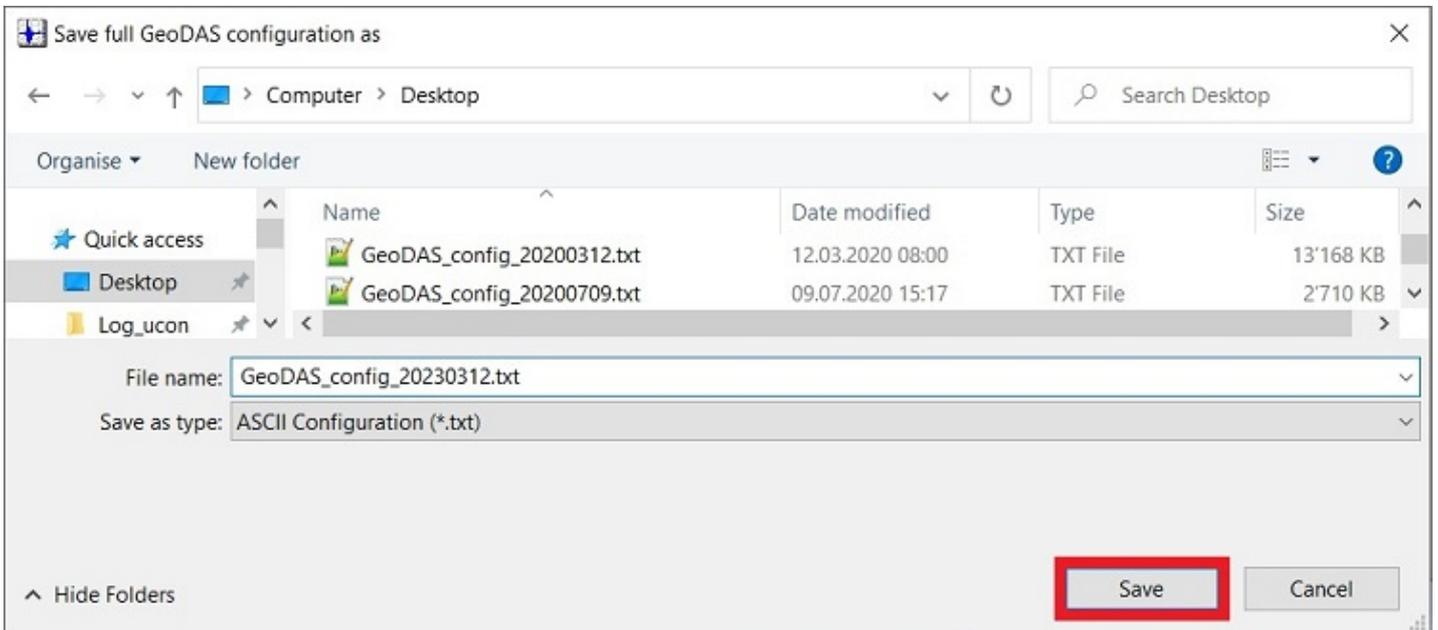


- The process may take a while, wait for the confirmation message

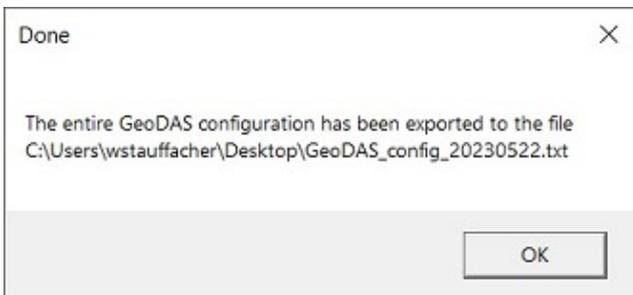


#### 4. Restore GeoDAS Configuration from Backup

- The process will overwrite the current settings! Make sure you have stored a backup of the current configuration (see steps under 3.)
- In GeoDAS under **File -> Configuration**, click **Restore**

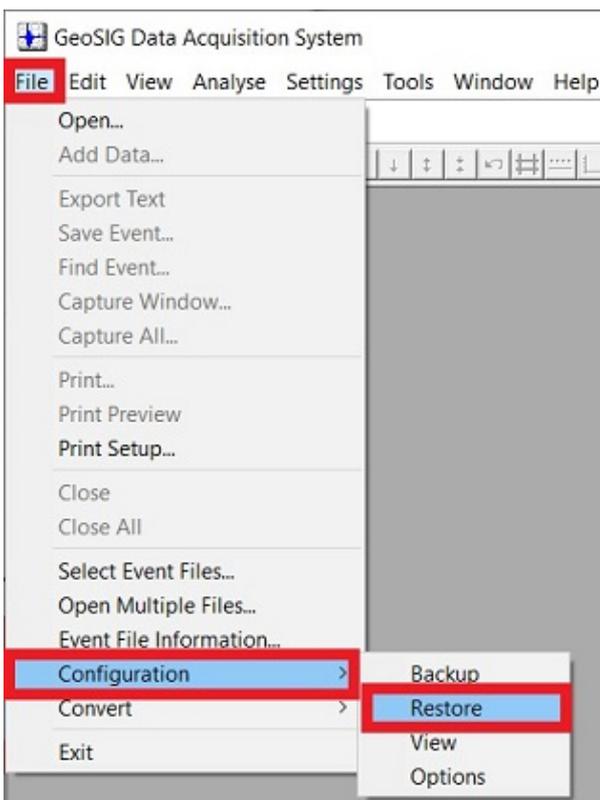


- Browse to the directory with the configuration file in .txt format
- Choose the configuration file to restore and click **[Open]**

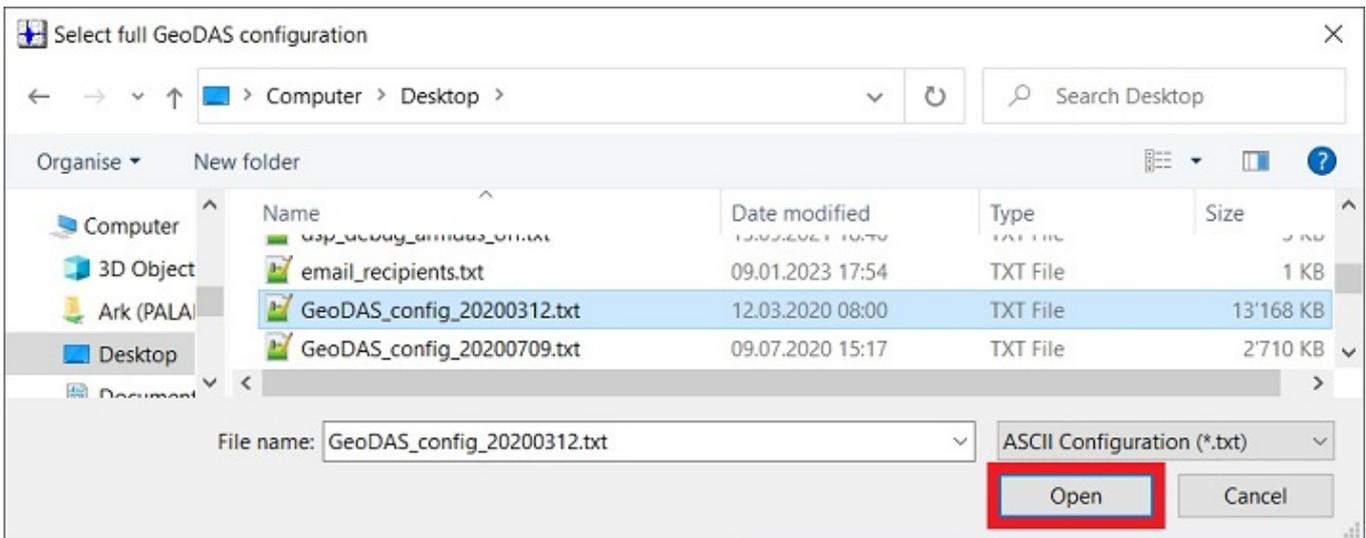

- If you have a backup of the current settings, confirm the warning with **[Yes]**



- Confirm with **[OK]** and restart GeoDAS

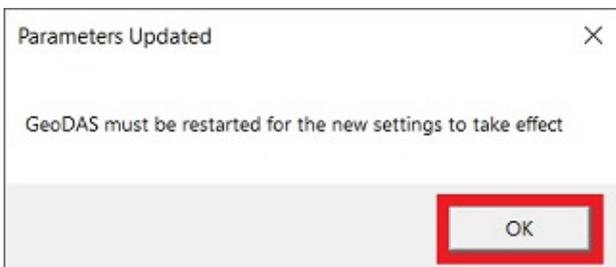

- After the restart, you will be asked to choose the root directory of GeoDAS
- To continue using the same root data directory, tick **Directory of the old configuration**
- Confirm with **[OK]**

