



GMS-scai⁺ User Manual



GeoSIG Ltd, Wiesenstrasse 39, 8952 Schlieren, Switzerland
Phone: + 41 44 810 2150, Fax: + 41 44 810 2350
info@geosig.com, www.geosig.com

Disclaimer

GeoSIG Ltd reserves the right to change the information contained in this document without notice. While the information contained herein is assumed to be accurate, GeoSIG Ltd assumes no responsibility for any errors or omissions.

Copyright Notice

No part of this document may be reproduced without the prior written consent of GeoSIG Ltd. Software described in this document is furnished under a license and may only be used or copied in accordance with the terms of such a license.

Trademark

All brand and product names mentioned are trademarks or registered trademarks of their respective holders.

All rights reserved.

GeoSIG Ltd

Switzerland

Table of Contents

Applicability of This Manual	7
Warnings and Safety	8
GeoSIG Cybersecurity Recommendations	11
Symbols and Abbreviations	14
1 Introduction	15
2 Incoming Inspection	16
2.1 Damage During Shipment	16
2.2 Warranty	16
2.2.1 Limitation of Warranty	16
3 Description	17
3.1 Housing Lid	18
3.2 Base Plate	19
3.3 Connectors	20
3.3.1 Standard External Connectors	20
3.3.2 Optional External Connectors	20
3.3.3 Optional External Antennas	20
3.3.4 Connectivity Options	21
3.3.5 Internal Connector	21
3.4 Visual Indicators	22
3.5 Batteries	23
3.5.1 Internal Battery	23
3.5.2 Storage (Instrument Shelf Life)	23
3.5.3 External Battery	24
3.5.4 Battery Cut-Off Voltage	24
3.6 Power Supply	24
3.6.1 Choice of Power Supply	24
3.7 Supplied and Optional Accessories	24
3.7.1 Standard Supplied Accessories	24
3.7.2 Optional Accessories	25
4 Installation	26
4.1 Site Selection	26
4.1.1 Environmental Considerations	26
4.1.2 Power Supply Considerations	26
4.1.3 Communication Considerations	27
4.2 Installation	27
4.2.1 Requirements for the Instrument Foundation	27
4.2.2 Mounting the Instrument	27
4.2.3 Orientation, Leveling and Calibration of the Sensor	28
4.2.4 Installing other Components, Options, Accessories	28
4.3 First Start and Communication Setup	28
5 Quick Start Up	29
5.1 Preparation	29
5.2 Set IP Address of the Instrument	30
5.3 No Stations Configured at first Start Up	32
5.4 Adding New Stations	32
5.5 Configuration of Data Server	33
5.6 Basic Configuration of the Instrument	35

6	Principle of Operation of the Instrument	38
6.1	Normal Operation	38
6.2	Behaviour on a Seismic Event	39
6.3	Firmware and Configuration Upgrade	41
6.4	Backup Server	41
7	Network Settings	42
7.1	Network Settings through the Web Interface	42
7.2	Network Settings through GeoDAS	44
7.3	Wired Ethernet settings through the local Console	45
7.4	Wireless Settings through the local Console	45
7.5	Get IP from Instrument	47
8	The Web Interface	49
8.1	Accessing the Web Interface	49
8.2	The Home Panel and the General Navigation	50
8.3	Device Configuration	51
8.3.1	Data Acquisition Configuration	52
8.3.2	Configuration Manager	53
8.3.3	Network Configuration	54
8.3.4	Web Interface Configuration	56
8.4	State of Health	57
8.4.1	Error Status	57
8.4.2	Recording Status	58
8.4.3	Hardware Status	59
8.4.4	Software Status	60
8.4.5	Maintenance	61
8.5	Data Explorer	63
8.6	Help	64
8.6.1	Online Help	64
8.6.2	Contact GeoSIG Service	64
9	Detailed Configuration of the Instrument	65
9.1	Switch ON and OFF the Instrument	65
9.2	General Comments to the Configuration	65
9.2.1	Change Configuration by the Web Interface	65
9.2.2	Change Configuration by GeoDAS	65
9.2.3	Changing Configuration by the Console	66
9.2.4	Explanation of the Structure in the Manual	67
9.3	Configuration of the Channels	68
9.3.1	In the Web Interface or by GeoDAS	68
9.3.2	Via Local Serial Console	70
9.3.3	Calculation of the LSB factor	72
9.3.4	Channel Naming	74
9.4	Configuration of Data Streams	75
9.4.1	In the Web Interface or by GeoDAS	75
9.4.2	Via Local Serial Console	76
9.4.3	Set up of Data Streams	78
9.5	Trigger Settings	81
9.5.1	In the Web Interface or by GeoDAS	81
9.5.2	Via Local Serial Console	83
9.5.3	STA/LTA trigger	86
9.5.4	Trigger Weight	86
9.5.5	Trigger Time Frame	86
9.6	Preset Trigger Settings	89
9.6.1	In the Web Interface or by GeoDAS	89
9.6.2	Via Local Serial Console	90
9.7	File Storage and Policy	92
9.7.1	In the Web Interface or by GeoDAS	92
9.7.2	Via Local Serial Console	93

9.8	Communication Parameters	95
9.8.1	In the Web Interface or by GeoDAS	95
9.8.2	Via Local Serial Console	96
9.9	Miscellaneous Parameters	100
9.9.1	In the Web Interface or by GeoDAS	100
9.9.2	Via Local Serial Console	101
9.10	Time synchronization	108
9.10.1	In the Web Interface or by GeoDAS	108
9.10.2	Via Local Serial Console	109
9.11	GeoSIG Options	113
9.11.1	Via Local Serial Console	113
9.12	Other Options in the Instrument Main Menu	114
9.12.1	Control Requests	115
10	Test and Configuration Menu	119
10.1	Flash Images and Boot Options	121
10.2	Hardware Setup and Monitor	121
10.3	Test Functions	121
10.4	Security	121
10.5	Comparison of User Permissions	122
11	Firmware Upgrade	123
	Appendices	125
	Appendix A Connector Pinouts	126
A.1	Binder Connectors	126
A.1.1	POWER Connector	126
A.1.2	MULTICOM Connector	126
A.1.3	ETHERNET Connector	126
A.1.4	ALARM Connector	127
A.1.5	GPS Connector	127
A.1.6	SENSOR Connectors	128
A.2	MIL Connectors	130
A.2.1	POWER Connector	130
A.2.2	ETHERNET Connector	130
A.2.3	MULTICOM Connector	130
A.2.4	GPS Connector	131
A.2.5	SENSOR Connectors	131
	Appendix B Remote Access to the Instrument over SSH	132
B.1	SSH Clients for Linux OS	132
B.2	SSH Clients for Windows OS	133
B.3	SFTP access for Windows OS	134
B.4	File Structure of the Instrument	135
	Appendix C GeoDAS Settings	136
C.1	Configuration of Stations	136
C.1.1	Add a new Instrument	137
C.1.2	Remove an Instrument	137
C.2	Configuration of Server Parameters	138
C.3	Instrument Control in GeoDAS	139
C.3.1	More Information... (State of Health of the Instrument)	139
C.3.2	Instrument Setup...	140
C.3.3	Cancel Pending Request	140
C.3.4	Instrument Communication Interface	140
C.4	Open recorded miniSEED files in GeoDAS	141
C.4.1	Save predefined Scaling Factors	142
C.4.2	Calculation of the Scaling Factors	143

Table of Tables

1	Indicators description	22
2	Internal battery specification	23
3	Internal battery models	23
4	Storage instruction	24
5	The overall error states shown in the Web Interface	50
6	Explanation table structure	67
7	Channel configuration menu structure	71
8	LSB of all GeoSIG sensors	72
9	Data streaming configuration menu structure	77
10	Trigger settings configuration menu structure	86
11	Preset trigger configuration menu structure	91
12	File Storage and Policies menu structure	94
13	Communication Parameters menu structure	98
14	Server Parameters menu structure	99
15	Miscellaneous Parameters menu structure	107
16	Time Synchronization Parameters Menu Structure	111
17	GeoSIG options menu structure	113
18	Other options in the main menu	114
19	Control requests	117
20	Comparison of test and configuration menu users	122

Applicability of This Manual

GMS-scai Instruments are constantly being improved. Although the manual you receive along with your instrument corresponds to the actual software versions, **you are advised to check www.geosig.com periodically for the most recent version of this document**, and especially after performing any software upgrades. This manual is based on the following software and firmware versions:

Component	Description	Required version or higher
GeoDAS	Data acquisition and analysis software on the computer	2.38
armdas	Data acquisition software of the instrument	28.00.06
SUP	Power supervisor	90.01.06
DSP	Digital signal processor	128.03.10
Web Interface	Web Interface	1.9
Linux OS	Kernel Version	4.9.52

Warnings and Safety

STATIC ELECTRICITY

The instrument and its sensor unit (if available) contain CMOS devices, and when serviced care must be taken to prevent damage due to static electricity. This is very important to ensure long-term reliability of the unit. Such risk exists when both the housing lid and the internal panel are removed.

INSIDE THE INSTRUMENT (MAINTENANCE)

When it is desired to fully restrict access to the unit so that even its housing lid cannot be removed, lockers can be mounted in the middle of the handles, on the side of the instrument. Under normal circumstances there is no need to remove the internal panel of the instrument. In any case, only a trained person should remove the front panel or the cover. Moreover untrained access may lead to serious damage to the instrument, and may void the warranty. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

Before removing the internal panel:

- 1. Turn the unit off*
- 2. Disconnect all cables connected to the unit*
- 3. Disconnect the battery*
- 4. Make sure that all LED indicators are OFF*

INSTALLATION SITE

This instrument is designed for highly specialized applications. If installed in publicly accessible areas it is the responsibility of the instrument owner to ensure that the device is installed in a safe and secure manner.

The instrument should be installed in a well ventilated place and when possible be protected from direct sunlight and heat.

The housing provides no protection against explosive atmosphere. The instrument must not be operated without necessary protective measures (e.g. EX-proof housing) in an area where explosive gases could be present.

BATTERY (MAINTENANCE) AND SAFETY

The instrument is usually shipped with an internal rechargeable battery (main battery), which is an optional accessory.

In addition there is a non-rechargeable button battery (backup battery) on the circuit board of the instrument.



NEVER use any battery other than the ones supplied or approved in writing by GeoSIG.

An external power module, which is an optional accessory, is also usually shipped with the instrument.



NEVER use any other power module than the one supplied or approved in writing by GeoSIG.

Do not forget to connect the main battery when installing the instrument. The main battery is provided with a short cable that has a polarised connector to avoid any wrong connections. Please ensure that this connector is fully inserted and secured on the mating connector inside the instrument.

CAREFULLY observe the polarity,

when replacing the main battery:



RED cable = (+) plus terminal of the battery
BLACK cable = (-) minus terminal of the battery

when replacing the button backup battery:

(+) sign marked on the battery

Battery	Battery model	Replacement interval
Main Battery (Internal)	FIAMM FG20721, 12V 7.2Ah	3 years from date of production ¹
	Yuasa NP7-12, 12V 7Ah	3 years from date of production ¹
	FIAMM 12FGHL34, 12V 9Ah (long life)	8 years from date of production ¹
Button Backup Battery	Renata CR2430 MFR, 3V, 285mAh	5 years from date of production ¹
	Duracell CR2430, 3V, 285mAh	5 years from date of production ¹
	EEMB CR2430, 3V, 270mAh	5 years from date of production ¹

¹assuming operation at a steady 20°C or below

The expected lifetime of a battery can drastically change depending on operating conditions. Strong discharge of the battery and extreme temperatures must be avoided as per specific battery manufacturer's recommendations and guidelines.

Lifetime and replacement intervals mentioned in this manual are based on a constant ambient temperature of 20°C or below. If this condition cannot be met the user must check with the documentation of the battery manufacturer for information about the battery lifetime at elevated temperatures.

When replacing the battery only newly manufactured batteries may be installed. The replacement interval specified above starts from the manufacturing date of the battery, which is typically found printed on the battery itself. When replacing the battery it is the users' responsibility to update the "battery installation dates" parameter in the configuration as described in chapter 10.2. This parameter is used to issue a warning of required battery change.

For safety reasons the battery and operating conditions have to be checked annually to ensure that they are still within the manufacturer's recommended operational criteria.

It is important that all necessary precautions about operating a battery, such as the ones installed in the instrument, are taken into consideration and the safety instructions are followed accordingly.

Lack of care or misuse of the battery as per battery manufacturer's recommendations can be hazardous, may damage your instrument and may even cause explosions. Please consult the battery manufacturer's website for the latest operating, maintenance and safety guidelines. Please contact GeoSIG in writing if the specific safety, operating, maintenance and disposal information for your battery type can't be found.



The internal main battery (if installed) is a Lead Acid-type battery and is classified as "dangerous waste". The user is obliged to follow local laws and manufacturer's guidelines for safe use and correct disposal of any battery.

SD AND COMPACT FLASH CARDS

SD and compact flash cards are available in a variety of quality levels on the market. This results in problems with compatibility due to memory layout, signal structuring and power requirements. Additionally some SD and compact flash card manufacturers refuse to provide adequate information or factory controls to ensure that the product being sold today is the same as the product sold earlier under the same part number.

Therefore GeoSIG cannot guarantee a SD or compact flash card will work in a GeoSIG instrument unless it is purchased through GeoSIG. The SD and compact flash cards provided by GeoSIG are tested and certified in-house to work with the related GeoSIG instrument and are industrial rated for harsh environment conditions such as extreme temperatures, shock, and vibration.

 **CLEANING**

Disconnect the power from the instrument prior to cleaning. Do not remove the housing lid during cleaning. Wipe all exterior surfaces with a damp cloth. Use mild detergent if required. No water should be used if cleaning inside the instrument is required.

 **HOUSING LID**

In case your instrument does not have a lid with holes as described in chapter [3.1](#) you must contact GeoSIG to order a replacement lid.

GeoSIG Cybersecurity Recommendations

GeoSIG instruments, as described in their documentation, have built-in security and safety features against unauthorised access or use. However, ultimately it is the user's responsibility to ensure the safe and secure usage of our instruments based on their actual implementation. No factory delivered solution can fit each and every possible scenario. The user is advised herein that once you connect a device to a network, you are also connecting that network to that device. It is the responsibility of the user to take appropriate precautions so that all devices should be adequately hardened, such as with individual strong passwords, and should have their traffic monitored and managed via appropriate security features, such as firewalls. Also, non-critical devices should be segmented away from networks that contain sensitive information.

Compliance with a well-defined security procedure helps protect not only an individual device, but also other devices connected through the network. Such procedure would be intended to prevent exploitation of an individual device's resources by unauthorized individuals, including the use of such device to attack other systems on the network or the Internet.

The following recommendations can be considered in establishing such a security procedure:

1. Physical access restriction

All devices must be restricted from unauthorised physical access and a well-defined physical access procedure shall be utilised.

2. No Unattended Console Sessions

Except for the devices which are physically secured, no unattended console sessions shall be left running.

3. No Unattended Network Sessions

No unattended user interface sessions shall be left running towards any device accessed through its network interface.

4. Use of a Firewall

For a network that has any connection to the outside world, a hardware firewall must be running and configured to block all inbound traffic that is not explicitly required for the intended use of the network and the connected devices. The user can also consider limiting outbound traffic.



Any communication ports that are required for the operation must be protected.

5. No Unnecessary Services or Ports

If a service or port is not necessary for the intended purpose or operation of the device, that service must not be running and the port must be closed. (e.g. if seedlink server is running, but not used, turn it off)

6. Use of authentication

Network and console device access must require authentication by means of strong and individualised passwords per device (no passe-partout passwords).

Wireless access must require strong encryption to associate (such as WPA2), or some other strong mechanism to keep casual users near the access point from using it to get full access to the network. WEP or MAC address restrictions do not meet this requirement.

7. Password complexity and security

When passwords are used, they must meet the specifications similar to below:



All default passwords must be changed at time of initial access or latest at deployment into service.

Passwords MUST:

contain eight characters or more

contain characters from AT LEAST two of the following three character classes:

Alphabetic (e.g., a-z, A-Z)

Numeric (i.e. 0-9)

Punctuation and other characters (e.g., !@#%~&*()_+|~-=\‘{ } [] : " ; ’ < > ? , . /)

8. Privileged Accounts

Privileged and super-user accounts (Administrator, root, etc.) must not be used for non-administrator activities. A secure mechanism to escalate privileges with a standard account is acceptable to meet this requirement. Network services must run under accounts assigned the minimum necessary privileges.

9. No Unencrypted Authentication






All network-based authentication must be strongly encrypted. In particular, insecure services such as Telnet, FTP, SNMP, POP, and IMAP must not be used or must be replaced by their encrypted equivalents.

10. Software / Firmware updates

Networked devices must only run software/firmware that are updated according to supplier’s guidelines. A periodical check of any available updates from the supplier must be sought.

Please contact GeoSIG Ltd if you require any further advice or clarification.

Symbols and Abbreviations

ADC	Analog to Digital Converter
ARM	Main processor
armdas	GeoSIG data acquisition software
Bootloader	First program executed when unit starts
CF	Compact Flash, memory card using Flash memory
Compact Flash	See CF
DSP	Digital Signal Processor in charge of controlling the ADCs
GSIAFW	GeoSIG data acquisition software.
EEW	Earthquake Early Warning
Flash	Program storage memory device. It contains the Linux file system in Read Only mode and some block areas under direct control of main program or bootloader
FTP	File Transfer Protocol
GPS	Global Positioning System
GUI	Graphical User Interface
IMAP	Internet Message Access Protocol
LAN	Local Area Network, a simple branch of private network using private IP address. It could have or not have access to Internet (WAN)
NTP	Network Time Protocol
POP	Post Office Protocol
PPS	Pulse Per Second
RAM	Random Access Memory
RTC	Real Time Clock
SD	Secure Digital Memory Card
SNMP	Simple Network Management Protocol
SPS	Samples Per Second
SSH	Secure Shell
SSID	Service Set Identifier. This is the identifier name of a wireless network.
STP	Shielded Twisted Pair
SUP	Supervisor in charge of controlling the power management.
Telnet	Teletype network
USB	Universal Serial Bus
UTP	Unshielded Twisted Pair
VPN	Virtual Private Network
WAN	Wide Area Network. It is a network connection established between 2 LAN or a LAN and a server over the internet (usual case) or through a rented link.
WPA	Wi-Fi Protected Access. It is a secure specification that allows users to access information instantly via wireless link. It is a more modern and secure link than the WEP type.
WEP	Wired Equivalent Privacy
	Important information related to the current section.
	Caution. Refer to the instructions next to the marking, or refer to the relevant section of this user manual.
	Direct current. This symbol indicates a direct current (DC) power line derived from an alternating current (AC) power source.
	Earth terminal.
	CE. This symbol indicates that the device conforms to all legal requirements needed to achieve free movement and sale of the product through the European Economic Area (EEA).

1 Introduction

Dear Valued GeoSIG Customer, thank you for purchasing this product.

These instruments have been optimised to meet the requirements of the majority of customers out of the box and may have even been delivered tailored to your needs. In any case, to be able to get the most out of our product, please carefully study this manual, its appendices and referenced manuals, as well as any other documents delivered with it.

This is a reliable and easy-to-use device, and at the same time a sophisticated product that requires care, attention and know-how in configuring, installing, operating and maintaining.

GeoSIG continually improves and enhances capabilities of all products. There may be several other connectivity, hardware or software options for the instrument, which are not covered in this manual. Refer to separate documentation from GeoSIG about available options or ask GeoSIG directly.

2 Incoming Inspection

All instruments are carefully inspected both electrically and mechanically before they leave the factory. Please check if all received items correspond with the packing list and your order confirmation. In case of discrepancy please contact GeoSIG or your local representative immediately.

2.1 Damage During Shipment

If requested at the time of order, all instruments can be insured prior to shipment. If you receive a damaged shipment and shipping insurance was previously arranged you should:

- Report the damage to your shipper immediately
- Inform GeoSIG or your local representative immediately
- Keep all packaging and shipping documents

Insurance claims may be void if the above procedure is not followed.

2.2 Warranty

GeoSIG Ltd (hereafter GeoSIG) warrants hardware and software products against defects in materials, workmanship and design for the defined period in the relevant contract or offer, starting from date of shipment and 5 years parts and maintenance support commitment. If GeoSIG receives notice of such defects during the warranty period, GeoSIG shall at its option either repair (at factory) or replace free of charge hardware and software products that prove to be defective. If GeoSIG is unable—within a reasonable time—to repair or replace any cabinet to a condition as warranted, buyer shall be entitled to a refund of the purchase price upon return of the cabinet to GeoSIG. 50% of freight charges on shipments of warranty repairs or replacements will be borne by GeoSIG (normally one way freight).

2.2.1 Limitation of Warranty

The foregoing guarantee shall not apply to defects resulting from:

- Improper or inadequate maintenance by buyer
- Buyer supplied software or interfacing
- Unauthorised modification or misuse
- Operation and storage outside of the environmental specifications of the instrument
- Related to consumables or batteries
- Improper preparation and installation at site.

3 Description

The instrument is a housing mounted with a base plate. The base plate is fixed on ground and leveled one time during installation, then the instrument can be replaced without need for leveling. All external connectors of the instrument are located in the front face of the housing. The housing forms handles on the sides for convenient transportation by hand and lock holes to prevent the removal of the lid if needed. LED indicators reporting the status of the instrument are visible through the housing lid. The housing lid can be removed by unscrewing the four screws in the corners, revealing the instrument's internal panel.

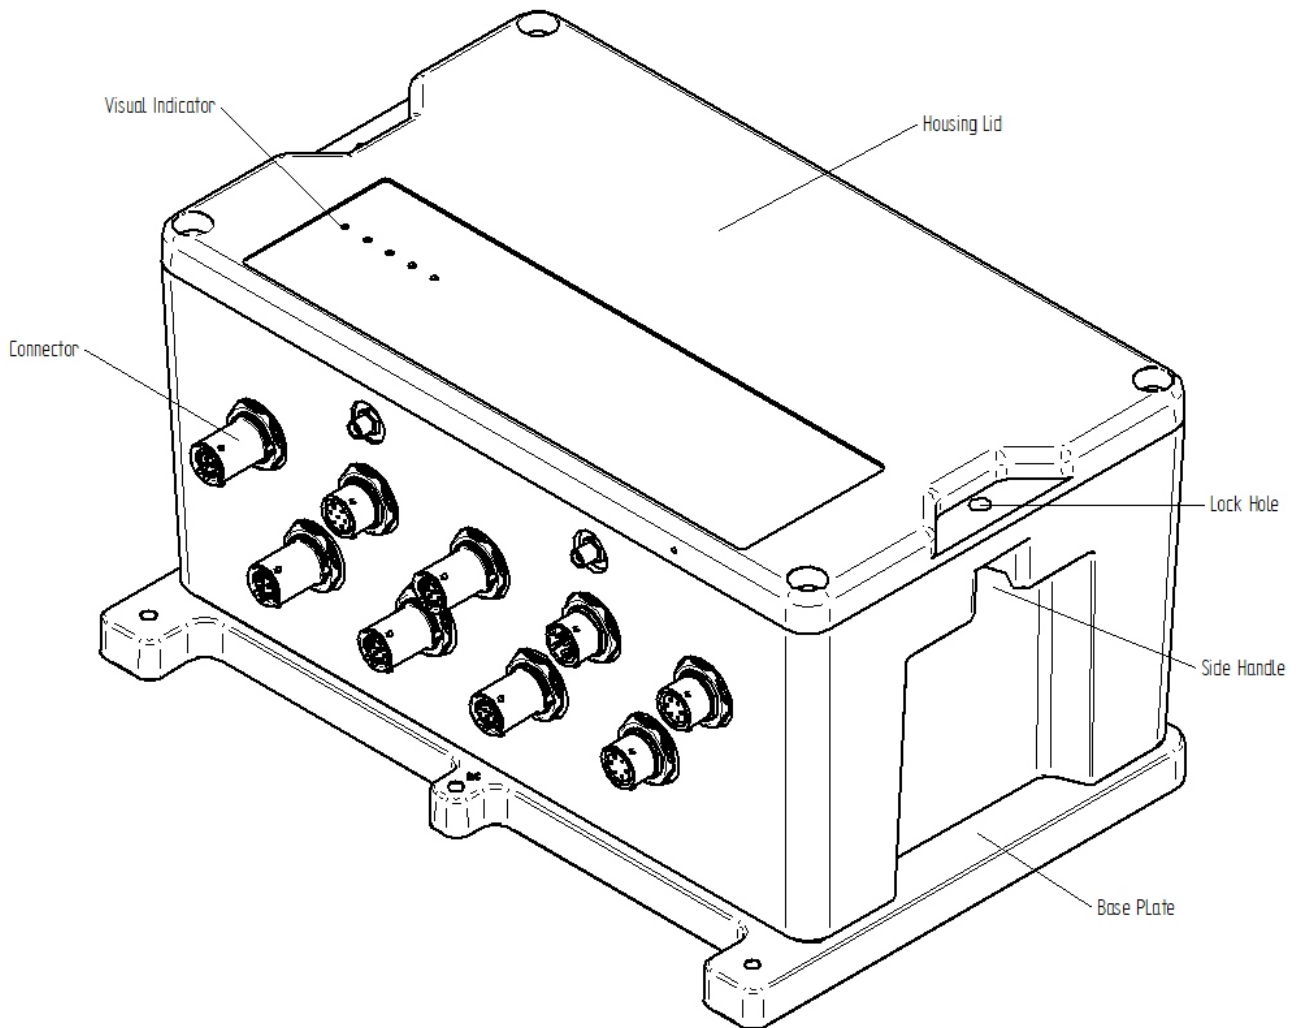


Figure 1: Instrument housing ¹

By removing the housing lid the following elements of the instrument are accessible as shown in Figure 2:

- The power button to switch the instrument on and off.
- The eject button to safely remove the SD memory card while the instrument is operational.
- The SD-card slot to insert a suitable memory card where the event data are saved.
- The internal Micro-USB connector to connect a computer with the instrument's console.
- The optional internal battery, which powers the system in case of AC power loss. See also section 3.5.1.
- The visual indicators which indicate the status of the instrument. See also section 3.4

¹Available connectors may vary depending on ordered configuration

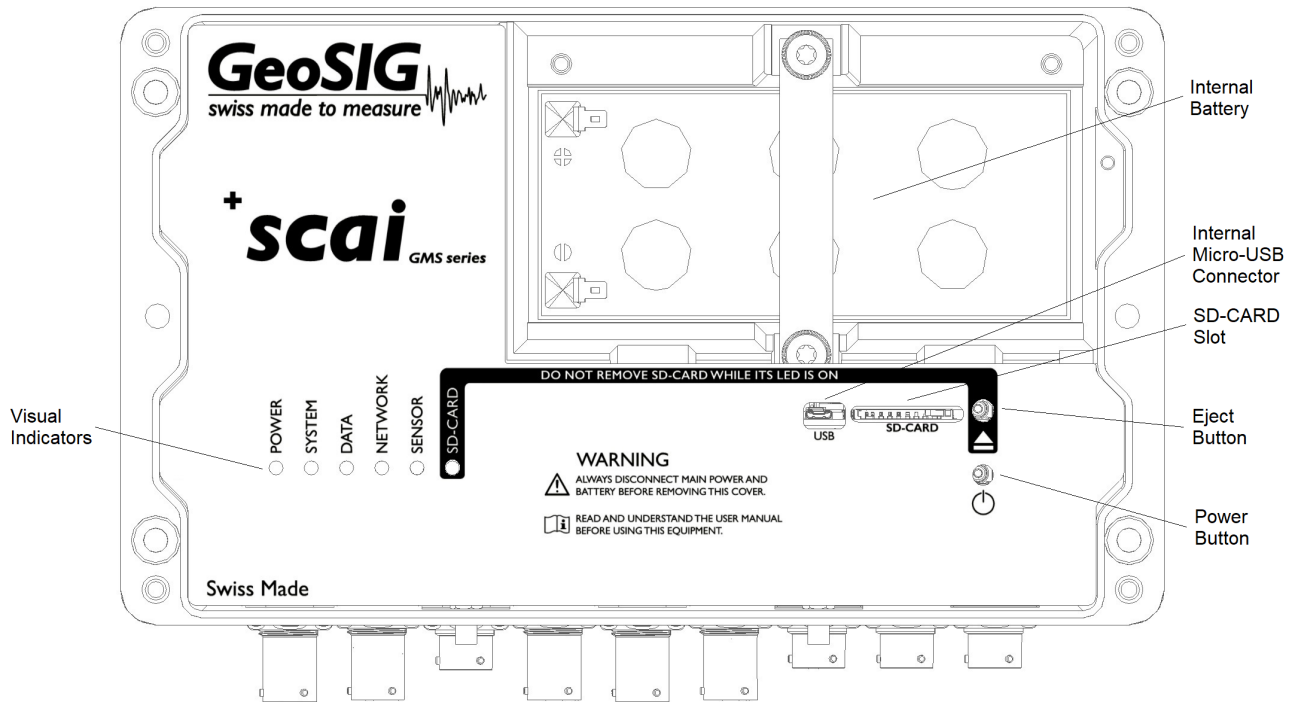


Figure 2: Instrument internal panel ²

3.1 Housing Lid

If your instrument has been supplied with an internal Lead Acid battery, the housing lid will have two ventilation holes that are covered by special membrane vents, as shown in Figure 3. A Lead Acid battery as a matter of course will release small amounts of hydrogen which could cause an explosion under certain conditions. A typical GMS-scai housing will allow hydrogen to escape through various small openings in the housing, **however** as an extra level of safety, precautionary measures have been taken by providing two ventilation holes to allow additional air circulation within the housing. The specially applied membrane vents will prevent external matter from entering the housing while allowing air circulation through specially designed PolyVent membranes as shown.

Please ensure that the vents are not covered and that the instrument is not placed in a confined area without adequate ventilation. GeoSIG will not accept any responsibility for the safe operation of the battery or any safety-related consequences that may result from using the battery.

Please consult GeoSIG in writing if you have any specific questions or require clarification with regards to use of the battery in the instrument.

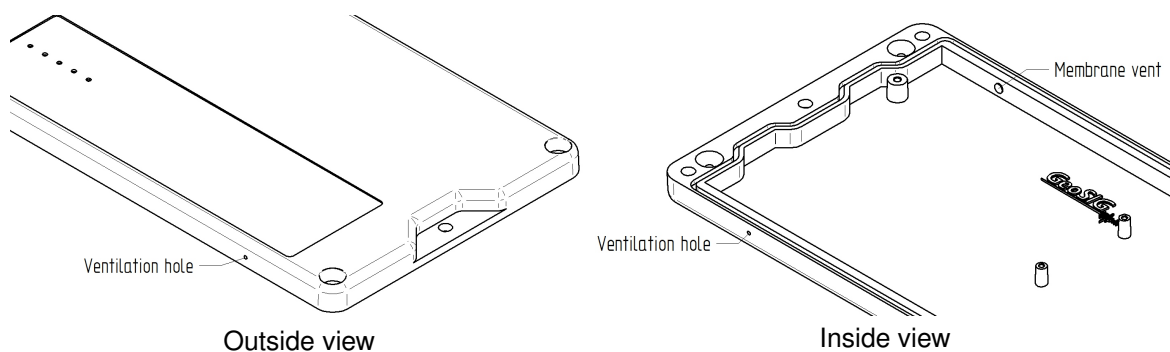


Figure 3: Housing lid ventilation holes

² Available connectors may vary depending on ordered configuration

3.2 Base Plate

A base plate is supplied with the instrument for fixation and leveling of the instrument on site. Three leveling feet are provided to adjust the base plate horizontally. The fixation is done as a single point in the middle of the plate.

To ensure correct orientation when an instrument is installed on the plate, two pins are provided with the plate. They can be mounted in different positions according to the orientation required and will fit in the two holes existing in the base of the instrument.

A connection point for earthing is also provided with the plate as an M6 thread.

See section [4.2.2](#) for details about how to fix the base plate on the ground.

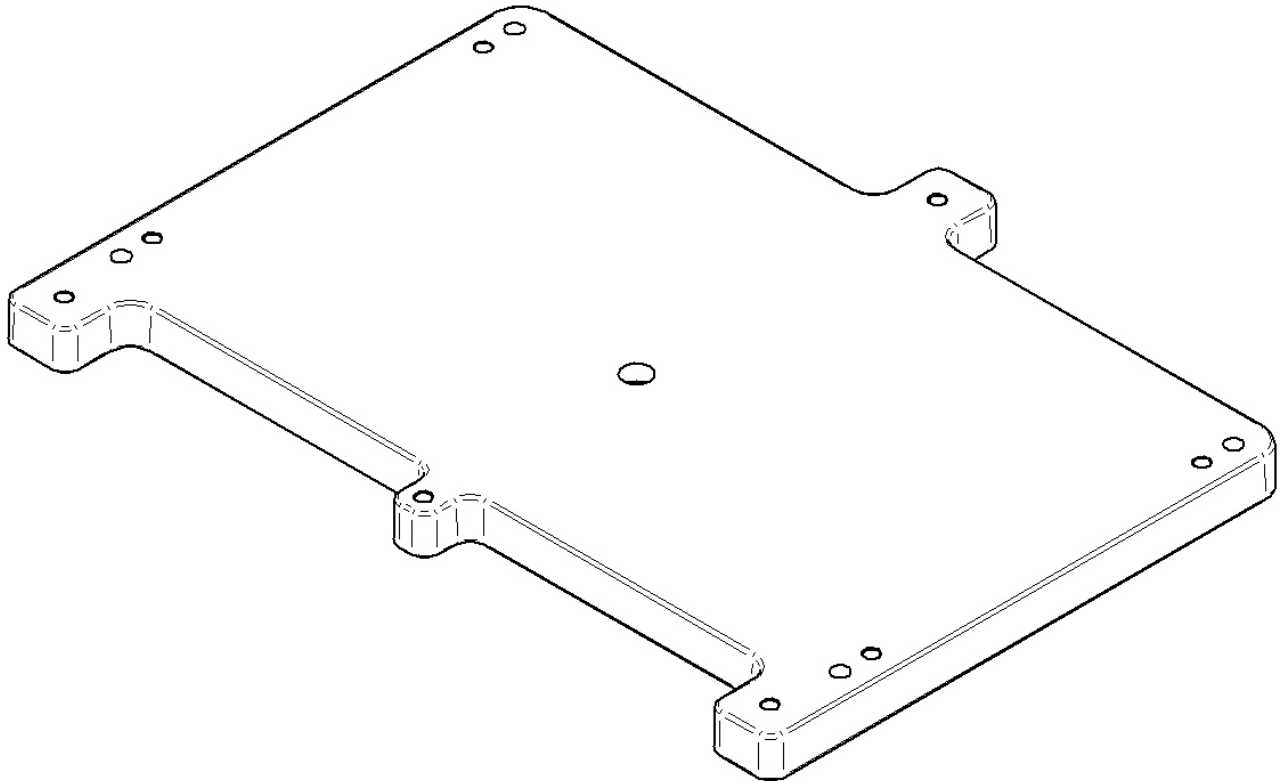


Figure 4: Instrument base plate

3.3 Connectors

The instrument has up to nine connectors and two antenna plugs:

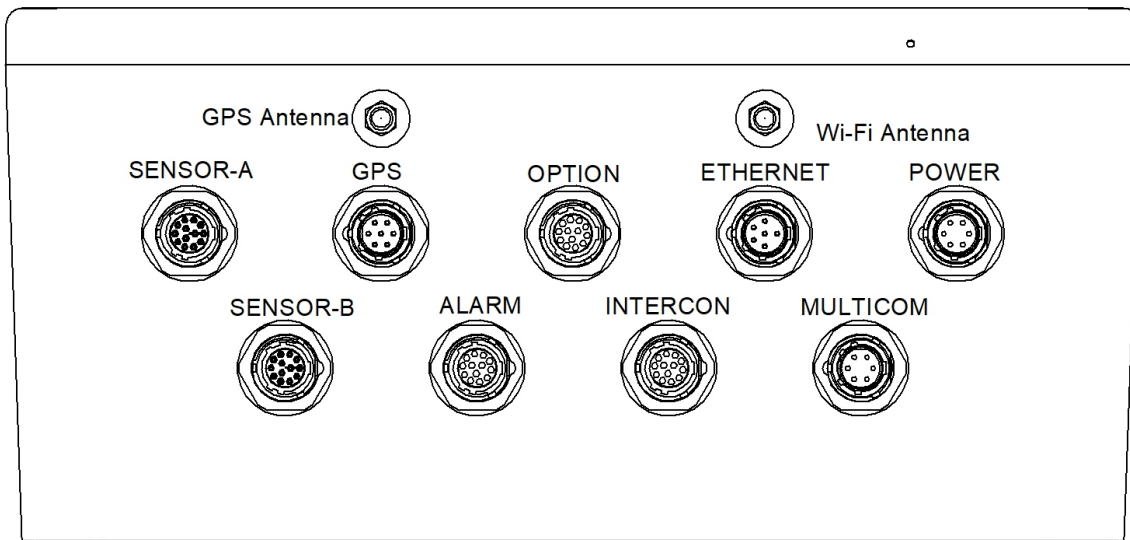


Figure 5: Instrument external connectors. Antennas are not mounted ³

3.3.1 Standard External Connectors

These connectors always will be assembled:

POWER Connection to the power supply module of the instrument or to an external battery.

ETHERNET Connection with Ethernet cable to a LAN. The cable connection is dominant over the Wi-Fi link. As soon as the cable connector is plugged in the instrument ETHERNET socket, the Wi-Fi module will be turned off, even if the RJ45 connector at the end of the cable is not plugged into any socket.

MULTICOM Connection to the console and connection to the cellular modem.

3.3.2 Optional External Connectors

These connectors can optionally be assembled:

SENSOR Connection with an external analogue sensor.

GPS Connection to a GPS receiver.

ALARM Connection to the alarm relay contacts.

OPTION Connector reserved for special applications.

INTERCON Connection to other instruments for common time common trigger interconnection.

3.3.3 Optional External Antennas

Wi-Fi Antenna connector for wireless network.

GPS Antenna connector for optional internal GPS receiver.

³ Available connectors may vary depending on ordered configuration

3.3.4 Connectivity Options

A large variety of options can be connected to the instrument. The following figure should give an overview of the main possibilities. Ask GeoSIG for details about any specific connectivity options.

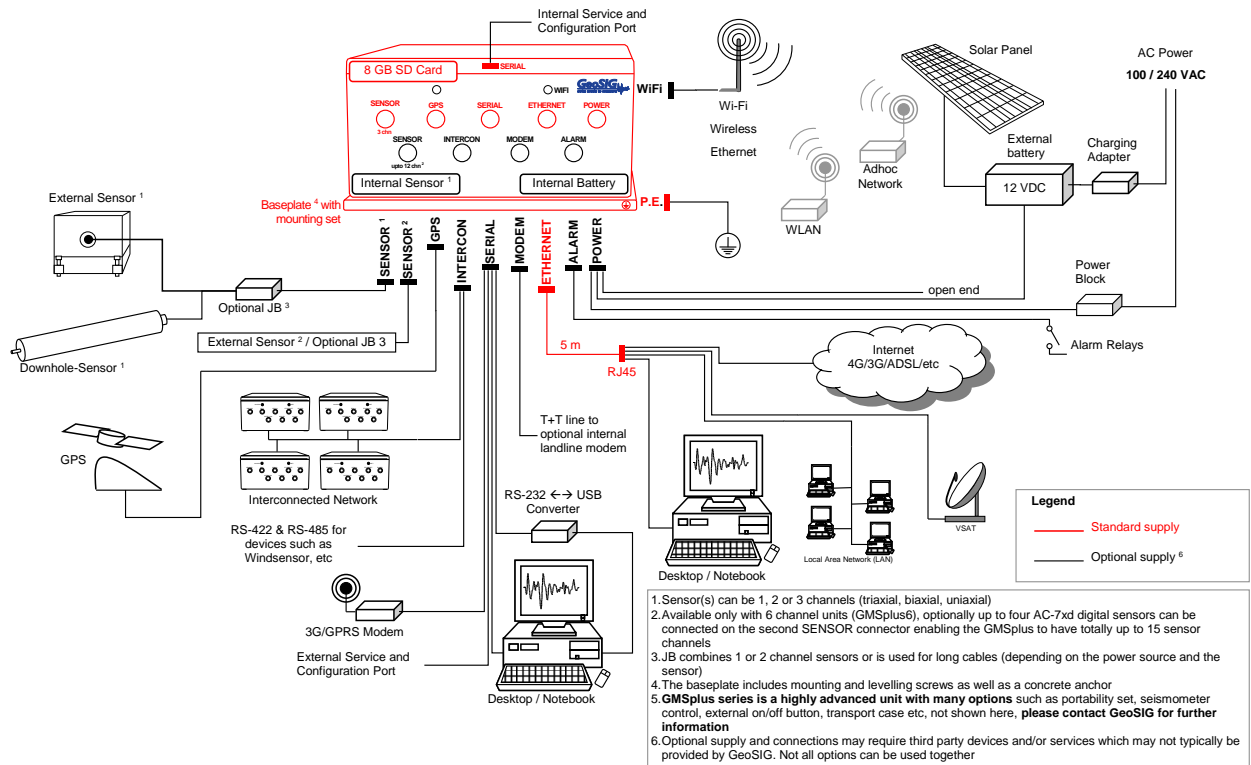


Figure 6: Connectivity options

3.3.5 Internal Connector

The instrument is equipped with an internal Micro-USB connector giving access to the console as shown in Figure 2. A standard Micro-USB extension cable can be used to connect to a computer.

3.4 Visual Indicators

The instrument includes six LEDs to indicate information about its status. POWER, SYSTEM, DATA, NETWORK and SENSOR LEDs are visible even if the housing lid is closed (Figure 1). SD-CARD LED is only visible when the housing lid is open (Figure 2). Table 1 describes in detail the meaning of the LEDs activity.

LED	LED state	Instrument status
POWER	Green solid	Power is available from AC/DC power supply or from PoE
	Blue flashing	Running on battery and battery has standard capacity
	Yellow flashing	Running on battery and battery capacity is low
	Red flashing	Running on battery and battery capacity is critically low Instrument is not turning on because of low battery voltage. See 3.5.4
SYSTEM	White solid	Linux OS is starting up
	White flashing	Data acquisition software is starting up
	Green flashing	Operational and synchronized to local time source(RTC)
	Blue flashing	Operational and synchronized to external time source(NTP or GPS)
	Yellow flashing	Operational but a warning has been issued
	Red flashing	Operational but an error has been detected Instrument is not turning on because of high temperature. See 9.1
DATA	Green solid	No events recorded in the memory
	Yellow flashing	An event is being recorded
	Blue solid	Events are recorded in the memory
NETWORK	Green solid	Network connection is available
	Blue flashing	Data transmission in progress
	Red solid	Network error
SENSOR	White flashing	Data acquisition is being configured
	Green solid	Data acquisition is ready
	Blue flashing	Data acquisition in progress
	Yellow flashing	Non critical data acquisition problem occurred
SD-CARD	Red flashing	Critical data acquisition problem occurred
	Red solid	SD-Card is mounted

Table 1: Indicators description

3.5 Batteries

3.5.1 Internal Battery



The safety instructions given in [Warnings and Safety](#) must be strictly followed. Following the safety instructions helps to reduce risk of fire, electric shock, personal injury and material damage.

If installed, the battery is used in the instrument to power it in case of external power loss. If the external power is not restored when the battery reaches a low level, the unit will switch off by itself to avoid deep discharge of the battery. This protects the battery against capacity reduction or destruction occurring usually in case of deep discharge for such battery type. See section [3.5.4](#).

The battery has the following specifications:

Description	Specification
Nominal Voltage	12 V
Capacity	7.2 Ah
Length	153 mm
Width	66 mm
Height	96 mm
Overall height	102 mm
Weight	2.65 kg
Connection	Faston 4.8

Table 2: Internal battery specification

The following models have been checked to be compatible with the instrument:

Supplier	Model
FIAMM	FG20721
Yuasa	NP7-12
Sunbattery	SB12-7.2V0

Table 3: Internal battery models

3.5.2 Storage (Instrument Shelf Life)

In case the instrument is stored, the internal battery has to be maintained according to the storage duration.

If the instrument is stored for longer than 3 months, the battery must be removed from the instrument and stored elsewhere in a well ventilated location as per the battery manufacturer's recommendations. The battery must in this case be charged every six months for at least 24 hours.

If the instrument is connected to AC power through its power supply module while stored, the internal battery (if it exists) can remain in the unit. It is highly recommended to ventilate the stored instrument by removing the lid of the instrument.

The internal battery connection depending on the storage duration is summarized in [Table 4](#).

Period of time	External power supply	Instrument is operating	Internal battery
< 1 month	ON	YES	Connected
	ON	NO	Connected
	OFF	NO	Connected
1 - 3 months	ON	YES	Connected
	ON	NO	Connected
	OFF	NO	Disconnected
3 - 6 months	ON	YES	Connected
	ON	NO	Connected
	OFF	NO	Disconnected
More than 6 months	ON	YES	Connected
	ON	NO	Connected
	OFF	NO	Disconnected, must be recharged every 6 months for at least 24 hours.

Table 4: Storage instruction

3.5.3 External Battery

The instrument can optionally be connected to a 12 VDC external battery to extend its autonomy during an AC power outage. The external battery is not charged by the instrument and has to be charged with an external charger. If both external and internal batteries are installed, the instrument is discharging the external battery first and when the external battery reaches its cut-off voltage it starts discharging the internal battery. See 3.5.4.

3.5.4 Battery Cut-Off Voltage

To avoid deep discharge of the internal or the external battery the instrument is equipped with a low battery voltage cut-off mechanism. During AC power loss, if the voltage of the external battery drops below 10.6 VDC the battery is considered unavailable and the instrument starts discharging the internal battery. If the AC power loss is not recovered and the voltage of the internal battery also drops below 10.6 VDC then the internal battery is also considered unavailable and the instrument shuts down automatically in order to protect the batteries. If the power button is pressed at this point, the instrument will not turn on, but the POWER LED will flash red indicating the low battery voltage status. See 3.4. To force the instrument to turn on press the power button for at least 10 seconds. The instrument turns on automatically when the AC power recovers and starts charging the internal battery. The external battery has to be charged from the external charger. The batteries are considered available again when their voltage has reached 12.6 VDC.

3.6 Power Supply

3.6.1 Choice of Power Supply

The main power should be provided to the instrument from a 9 to 48 VDC supply. The optional AC/DC power module provides 15 VDC at 1.2A unless otherwise specified. The AC entry is compatible with 110 / 60 Hz or 230 / 50 Hz network without any adjustment. The block has a C7 connector and can use any standard power cord with such connector. The power module and the power cord supplied are both CE and UL approved. The power module must be connected to AC with a 2-wire power cable providing Phase and Neutral.

3.7 Supplied and Optional Accessories

3.7.1 Standard Supplied Accessories

The following parts will be included in a shipment in addition to the instrument:

- **Fixation base plate** with leveling feet
- **Screw and anchor bolt** for fixation

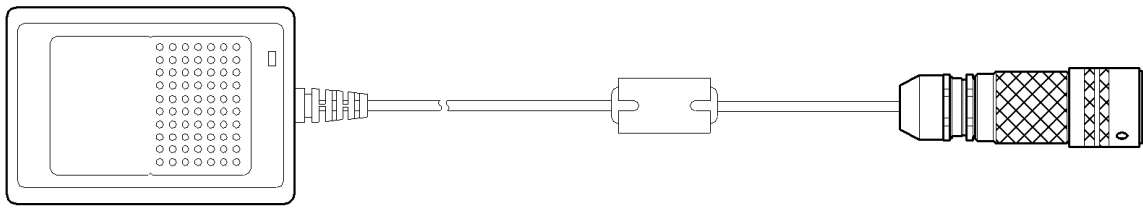


Figure 7: Power supply

- **Ethernet cable**, category 5 cable for 10/100 Mbit network with a suitable connector for the instrument, 5 meters of cable and a standard RJ45 connector. Other cable lengths are available by request.

3.7.2 Optional Accessories

The following parts can be ordered additionally and will be added if specified at order time:

- External **power supply** module, 100 to 230 VAC / 50-60 Hz, CE and UL approved
- **AC power cable**, depending on the shipping address with European, US or Swiss power plug
- **GPS** time code receiver with 20 meter cable, other cable length on request. GPS is an option as the time can also be synchronised through the network using NTP
- **Console cable** for use on the external SERIAL connector
- **Data stream cable** for use on the external SERIAL connector
- **SD/CF card reader for USB** for reading the memory card on a computer or laptop
- **Cellular modem**
- Any **spare connectors**
- Any **spare antennas**
- Spare **battery**

4 Installation

This section lists the procedures involved in installation of the instrument. The procedures will be outlined as steps to be performed in the field or in-house prior to deploying the instrument in the field.

4.1 Site Selection

4.1.1 Environmental Considerations

The choice of an installation site for a seismic event recorder is similar in most respects to that of a regular continuous recording seismic station.

Although the instrument is housed in a solid, weatherproof case, it should be installed in a place free from direct sunlight, precipitation, the danger of falling materials in the event of a severe earthquake and the risk of tampering or vandalism if the unit is to be left unattended.

There are also special considerations for event recorder installations. It is important to select the site and set the trigger level to avoid unwanted data recording, such as vibration from machinery, highway traffic, aircraft, waves, etc. It is wise to check the instrument frequently during the first several days of operation after each set-up, to see if there are previously unsuspected sources of noise which are triggering the instrument and using up the memory.

In addition, the user should select a site with a provision for 115 / 230 VAC power if the unit will be left in place for a long period of time (more than 26 hours). Although this is not necessary for the operation of the device, it does preclude concerns about battery charging.

You should make note at this point of any cultural or environmental sources of noise and vibration around the selected site, which may cause false triggers of the recording mechanism. These will have to be considered when setting the trigger parameters.

The operating temperature of the instrument itself is -20°C to $+70^{\circ}\text{C}$. Nevertheless, if any additional internal or external accessories/modules (e.g. batteries, sensors, modems, etc) with lower operating temperature ranges are used, the operating temperature of the combined system will be then limited by the temperature characteristics of these accessories/modules.

4.1.2 Power Supply Considerations

The instrument may be powered from a 115 / 230 VAC supply through an external AC/DC converter which provides 9 to 48 VDC output, from an internal or external battery, or optionally from solar panels.

- If the supply in the field will be from a 115 / 230 VAC supply, you need to connect the VAC cable from the external AC/DC to the power source only. The instrument operates continuously, providing a trickle charge to the internal battery, if supplied. The VAC supply must consist of Phase and Neutral.
- If the supply in the field will be from a 9 to 48 VDC supply, you need to connect the power cable from instrument to the power source only. The instrument operates continuously, providing a trickle charge to the internal battery, if supplied.
- If the instrument is running from an external battery (optional), you need to connect the delivered battery cable from instrument to the power source only. The external battery must be charged with an external battery charger.
- If the supply will be exclusively from the instrument's internal battery, it is necessary to charge the battery sufficiently beforehand. Make sure to have at least 24 hours of uninterrupted charging prior to leaving the instrument in the field. The configuration of the instrument, of course, may be performed while the charger is connected to the instrument. The external AC/DC converter has to be plugged to 115 / 230 VAC for charging the internal battery.

The best approach to the deployment of the instrument is to use an internal battery along with the VAC/VDC power at the remote site. It is highly recommended to check and configure the instrument for the correct time, trigger and other relevant settings in the lab, prior to the installation (see chapter 5). It may then be carried to the remote site (it should be switched OFF to conserve the internal battery) and then connected to the VAC

power through the external AC/DC converter or directly to the VDC power supply. After turning the instrument ON (see chapter 9.1), the instrument runs with the pre-configured parameters. This reduces the amount of time needed to configure in the field – an important consideration in the case of an adverse condition.

4.1.3 Communication Considerations

An Ethernet connection or Wi-Fi signal must be present to have data communication. If the instrument uses an NTP Server as time source, please make sure that an internet connection is available and the network settings are properly set in the instrument. Optionally an external cellular modem can be used for the connection to the internet. Use of NTP is not recommended when using a cellular modem; a GPS should be used instead if possible.

If the instrument is used as a stand-alone recording station, a notebook with an Ethernet connector can be used for downloading the data on a regular basis. In a network the stations will upload the data to the configured server.

4.2 Installation



*For your convenience a training video explaining the installation of the instrument is available at www.geosig.com → **Support** → 'How To ...' **Videos***



Many times the locations of seismic equipment are highly exposed to electrical disturbances caused by lightning or by the industrial environment. Although the instrument contains over-voltage protection, it may sometimes be necessary to use additional surge protectors for the equipment. Contact GeoSIG or your local representative for more information.



Typically it is required to connect the base plate to the local earth to avoid or minimise 50/60 Hz distortions in the signal by surrounding power lines. Use the provided M6 earth screw and make sure to have a proper connection by using only short cables with large diameters.

4.2.1 Requirements for the Instrument Foundation

Minimum surface area requirements

- with internal sensor: 30 x 26 cm
- with external sensor (excluding area of sensor itself): 30 x 30 cm

4.2.2 Mounting the Instrument

The unit must be fixed rigidly on the building foundation; it has a base plate that must be first fixed on the ground and then the instrument mounted on it. For that purpose, the base plate has a central fixation hole (suitable for 8 mm screws) and three leveling screws. Prepare the base plate (see also Figure 8):

- Mount the three leveling screws (**D**).
- Check that the four M6 threads for the instrument fixation are free from dust.
- Mount the two polarization pins on the base plate on the side where the connectors will be (**E/F**).

Place the base plate at the selected location. Verify that the surface is sufficiently flat and horizontal so that the three feet can level the plate. Be sure to leave enough space at the front of the instrument for the connectors and for opening the housing lid. The sides of the instrument should typically not be closer than 100 mm (4 inches) from a wall. Mark on the ground the location of the central hole in the plate. Remove the base plate.

The instrument itself can be mounted in any orientation desired under the condition that it does not have an internal battery. In cases where the instrument has an internal battery it must always be mounted flat on the ground in a non-tilted position. If the installation requires both a battery and a tilted, wall- or ceiling-mounted instrument, the battery must be placed externally.

Drill an 11 mm hole in the concrete with a typical depth of 50 mm for the supplied M8 concrete anchor (**C**). If another model is used, please adapt the hole dimensions accordingly. Clean the hole area of dust. Insert the concrete anchor into the hole. Mount the plate in place and insert the M8 fixation screw (**A/B**) in its hole. Turn the plate so it is oriented according to requirement. Make a coarse leveling of the plate (**D**). Start fixing the plate by tightening the M8 central screw (**A**). Check regularly the plate orientation and level until the plate

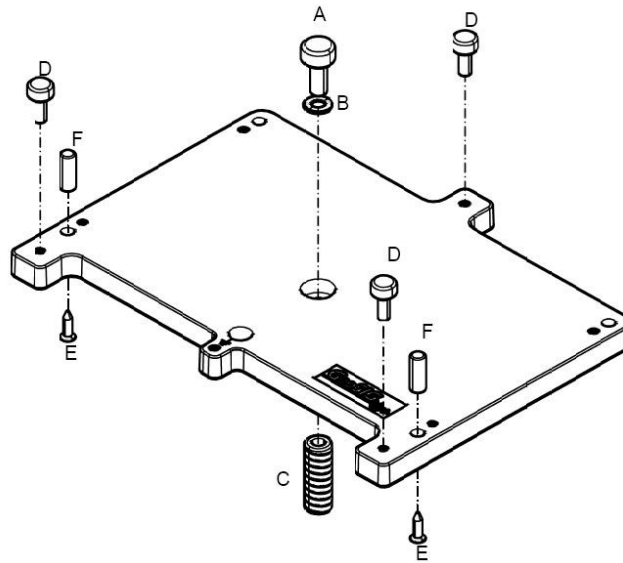


Figure 8: Installation of the base plate

is rigidly fixed (**D**). Remove the housing lid of the instrument and put it on the mounting plate using the four screws and washers to fix it. With all GMS-type housing, the base plate is leveled to 0.8Nm evenly on each screw. Take care about the two orientation pins on the plate (**E/F**).



*Do not over tighten the leveling screws.
Do not cause any short circuit on the battery poles or inside the unit.
Connect the base plate to the local protection earth.*

4.2.3 Orientation, Leveling and Calibration of the Sensor

Check it is really fixed by pushing from all directions. If you feel any movement, recheck the fixation.

Internal Sensor: The sensor is located under the internal panel. Since no setup is required for the sensor, there is no need to remove the internal panel. The leveling is done on the base plate, and the sensor is already configured to operate with the recorder.

Nevertheless for most applications it is important that the internal sensor is aligned according to the requirements. This can be done using the axes label on the wall of the instrument. In case the axes shall be aligned according to the global coordinate system, the Y-axis must point direction north. So X-axis corresponds then to East-West, Y-axis to North-South and Z-axis to Up-Down.

External Sensor: Mount and level the sensor according to its manual and connect to the external sensor of the instrument. There is no need to align the instrument to a certain direction. All standard sensor housing should be leveled to 0.6Nm evenly on each screw.

4.2.4 Installing other Components, Options, Accessories


For installation of other components, options, or accessories please refer to the specified option manual.

4.3 First Start and Communication Setup

With the instrument correctly fixed on the ground through the fixation plate please proceed with chapter 5 for the first start-up and configuration.

5 Quick Start Up

This chapter is intended to configure simple communication between the instrument and *GeoDAS* software running on a Windows workstation, working as data server.

 *It is assumed that the GeoDAS software is already installed on a computer. If not, please do the installation first with help of the [GeoDAS User Manual](#) before proceeding.*

5.1 Preparation

- Make sure the instrument is powered by the provided power supply. Remove the instrument housing lid using the four screws on the top corners. The POWER indicator should be solid green
- Make sure the instrument is connected to a LAN by the supplied Ethernet cable.
- If installed, verify that the battery is correctly fixed and connected to the system.



*In case there is no LAN available, the Ethernet cable can be connected directly to a computer. For this a crossed Ethernet cable is needed; please contact GeoSIG. Nevertheless in modern computers normally it works as well with the supplied patch cable.
In any case the instrument and the computer must be configured to have a fixed IP. Please follow the procedure to adjust these settings.*

- Connect the instrument to a USB port of your computer by using a standard Micro USB patch cable.
- Open any terminal program and choose the appropriate COM port. Baud rate is 115200. Alternatively open *GeoDAS*, go to **Tools** → **Terminal ...** and choose the COM Port. As Baud rate select **115200**. Then Press **Connect**

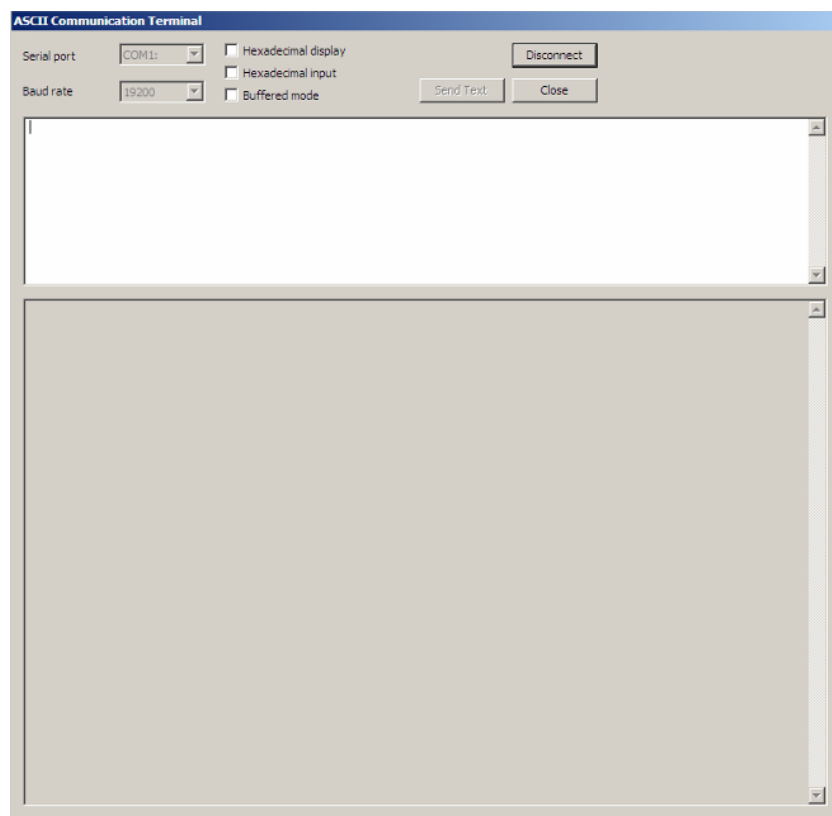


Figure 9: GeoDAS terminal

- Keep the terminal open for the next step.

5.2 Set IP Address of the Instrument

Network settings of the instrument can be changed during startup of the instrument. By default the instrument has a dynamic IP.

- If the instrument is on and running, send the command to reboot the instrument, otherwise switch on the instrument (See chapter 9.1).
- Press **'Ctrl + Z'** as soon the following message appears on the console to enter the test mode.

```
#####
##### Test and Initial Configuration Mode #####
#####
Press Ctrl+Z to enter the test mode.....
```

The following menu will appear (see chapter 10 for details):

```
-----
Level          Shortcut Password Description
-----
User           Ctrl+U   None    Basic operations only
Powerful User  Ctrl+W   None    Also hardware options and pre-selected tests
Administrator Ctrl+A   None    Also manual tests and altering the FLASH memory content
-----
Your level [U/W/A] or press B to boot now:
```

- By default no passwords are set, so press **'U'** to enter the User Mode, and then **'N'** to enter the menu Network settings.

```
==== Network Settings ====

---- Primary network interface ----
Configure network interface (Y/N)? Y
Static IP address (0=Auto, 1=Yes)? (0 = 0x0):
```

- Select **'Y'** to change the settings and then select if the instrument should have a static or a dynamic IP by pressing **'1'** (Static) or **'0'** (dynamic). In case a dynamic IP is chosen, a DHCP server must be available in the network to provide the IP settings.
- In case a static IP is selected, an additional message will appear asking for the instrument IP address, instrument network mask and instrument gateway IP. If you don't know these parameters please ask your network administrator.
- If the instrument has a Wi-Fi module, a second interface menu appears. Here static or dynamic IP can be chosen and the available Wi-Fi networks can be scanned. Please see chapter 7.4 for details.

```
---- Wireless network interface ----
Configure network interface (Y/N)? Y
Static IP address (0=Auto, 1=Yes)? (0 = 0x0):
```

- If the instrument is connected to the Internet via a PPP connection (cellular or analog modem), then the APN and password must be configured. See chapter 7.4 for details.

```
---- PPP Communication ----
Edit Analog Modem settings (Y/N)? Y
Phone number of the service provider [T313001]:
Login [demo]:
Password [demo]:
Updating configuration...
PPP settings have been updated
Edit Cell Modem settings (Y/N)? N
```

- The instrument allows access to the operating system from remote over SSH. This feature is not needed for normal operation of the instrument and can be disabled in case of security concerns. By default it is

enabled; to disable press '0'.

```
---- Miscellaneous parameters ----  
Enable remote login over ssh (0=No, 1=Yes)? (1 = 0x1):
```

- It's highly recommended to put a *recovery server IP address and recovery server port*. The instrument will contact this server every *Recovery server contact interval* in case the connection to the main data server (configured in the configuration of the instrument) is not possible anymore. This could happen, for example, if a configuration file with wrong server settings were accidentally uploaded to an instrument.

```
Recovery server IP address (192.168.10.107):  
Recovery server port (3456 = 0xD80):  
Recovery server contact interval, hours (24 = 0x18):
```

- As soon the following menu appears, press '5' to start the instrument.

```
Access level: User  
  
--- Flash Images and Boot Options ---  
L - List flash images  
Q - Reset instrument configuration to the user default  
V - Reset instrument configuration to the factory default  
5 - Boot now  
X - Reboot the instrument  
Y - Power off  
  
--- Hardware Setup and Monitor ---  
N - Network settings  
  
--- Security ---  
0 - Set password  
  
-->
```

- Start **GeoDAS** (if not already done), to add the instrument in its configuration

5.3 No Stations Configured at first Start Up

👉 | The following steps require GeoDAS version 2.24 or higher. If you have an older version download the newest release from www.geosig.com → **Support** → **Downloads**

- When GeoDAS is started for the first time, it will ask to add stations in its configuration.
- Click **Yes**

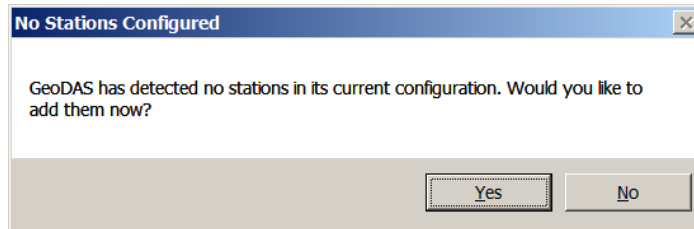



Figure 10: "No stations configured" message at startup of GeoDAS

👉 | If there are already stations configured in GeoDAS, this window will not appear. Please press the wizard button  in the GeoDAS menu

👉 | An exported GeoDAS configuration is in the USB stick that gets shipped with the instrument

5.4 Adding New Stations ...

👉 | Make sure the computer is connected to the same network as the instrument and in the same IP range.

- In the following window, select **My instrument other than GSR is connected to the local network** and press **Next >**

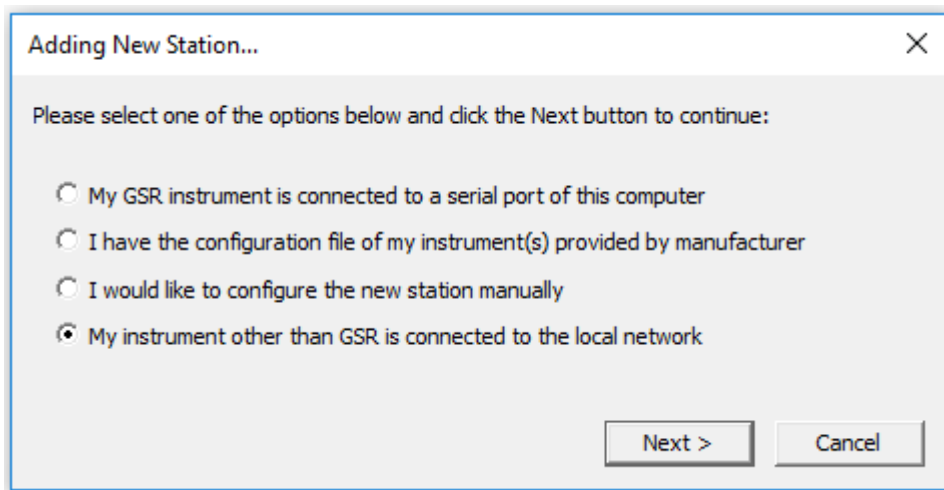


Figure 11: Instrument wizard

- Enter the **Serial number** of the instrument and press **Login >**. It is also possible to add more than one station by entering only a fragment of the serial number which is similar on all instruments. For example if there are the serial numbers 100210, 100211 and 100234. By entering '1002' all the stations will be added. By putting '10021' just the stations 100210, 100211 will be added.

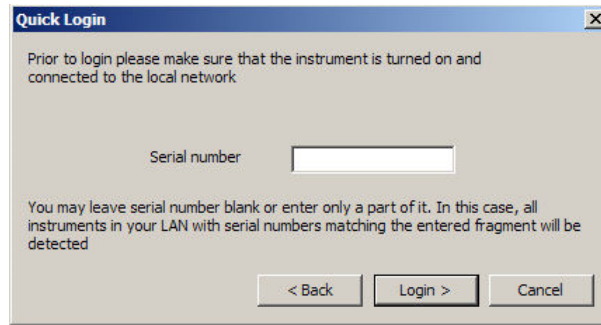


Figure 12: Quick Login Window

- All the found stations will be listed, press **Finish** to add them to GeoDAS

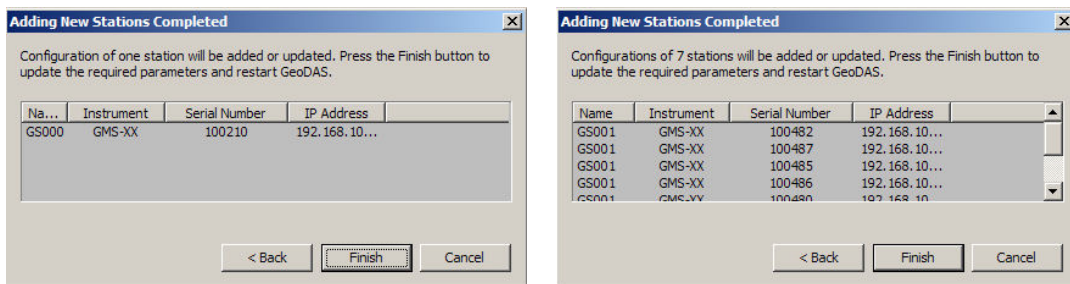


Figure 13: List of all stations found - single station left, multi-selection right side

5.5 Configuration of Data Server

- Proceed to the menu **Settings** → **Configure Stations ...**
- The following window will appear where all the instruments are listed in the area 1. To add stations make a right click and choose **Add Station to current configuration**. Please see chapter C.1 for details.

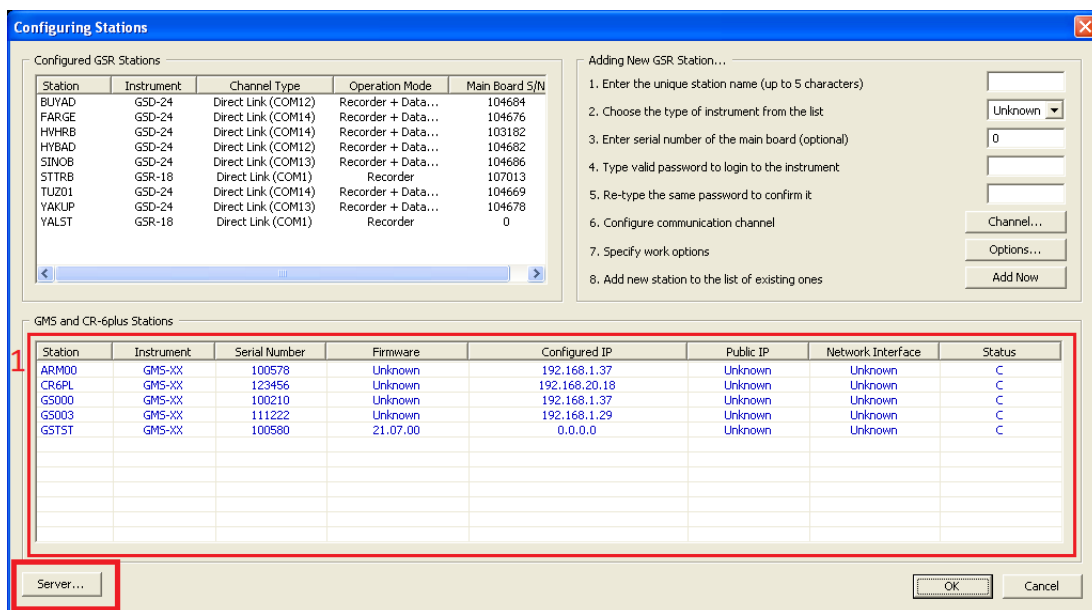


Figure 14: Configuration and overview of the stations

- Press the button **Server...** When the window below appears, enter the following data:
 - **My server IP address** **IP of your computer**
 - **Server port** Select a user defined port, use **3456** by default

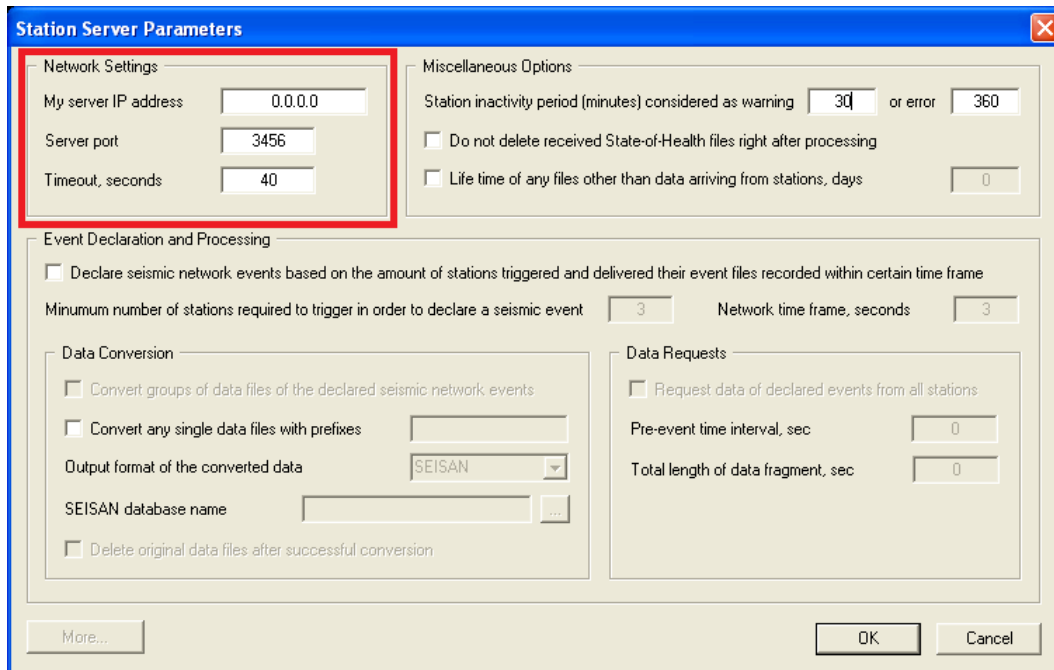



Figure 15: Data server parameter



In most cases you do not need to enter an IP address. It may only be needed if your computer has several network cards, and you would like to communicate to instruments connected only to one subnetwork. Otherwise you may leave the default zero IP address 0.0.0.0

If you don't know how to find out your IP address, follow these steps:

- Click **Start** → **Run** → type **cmd**, then press **OK**

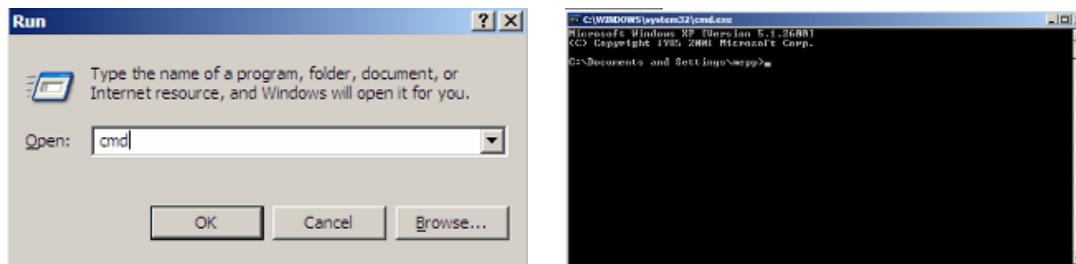

- Enter the command **'ipconfig'**, then your IP appears

```
Ethernet adapter Local Area Connection:
    Connection-specific DNS Suffix . :
    IP Address . . . . . : 192.168.10.107
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.10.254
```

- Type **exit**

- Write down the IP and port you have configured
- Press **OK** two times to exit again to the main window of GeoDAS

5.6 Basic Configuration of the Instrument

- In the window Stations: General Information make a **right click** on the station name and select **Instrument Setup...**

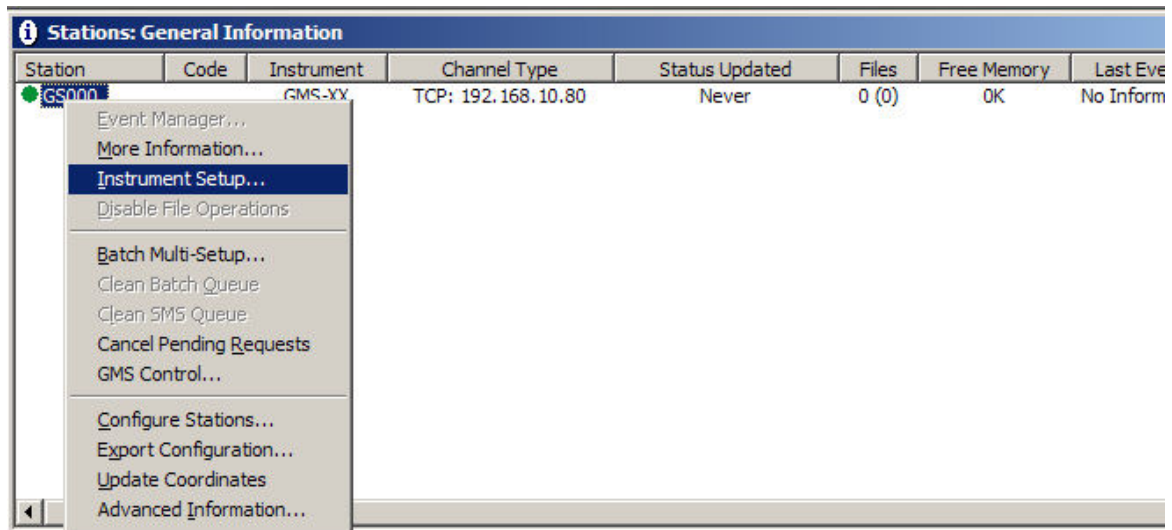


Figure 16: Instrument setup

- A window showing the Web Interface will appear.



Figure 17: Web Interface of the selected instrument

- To be able to adjust the configuration of the instrument it is required to authenticate oneself to the device. The default login credentials are: Username: **admin**, password: **123456**. Then press **login**

- Go to **Configuration** → **Communication Parameters**.

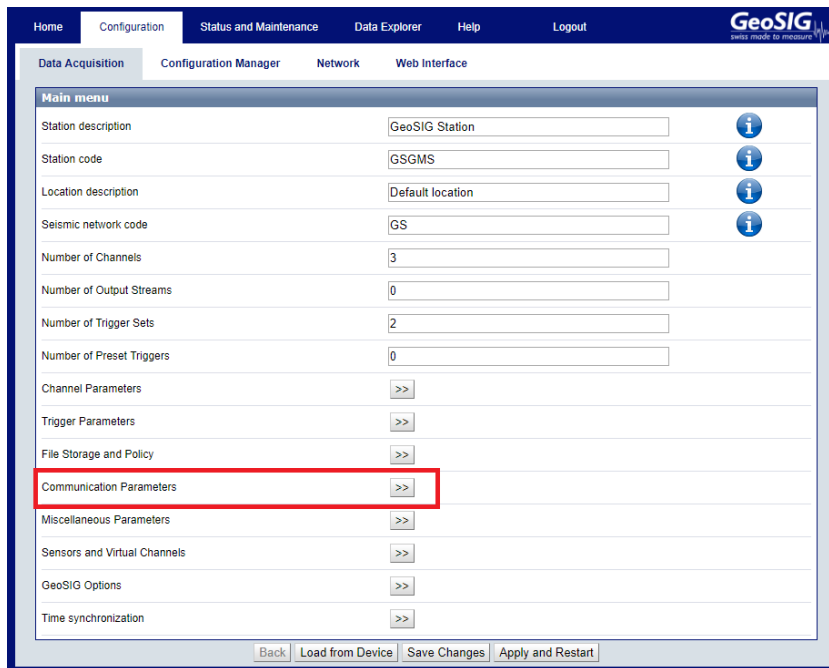


Figure 18: Communication parameters

- Tick the flag **Contact Remote Servers** to configure a connection to a remote server.
- Go to **Server Parameters**

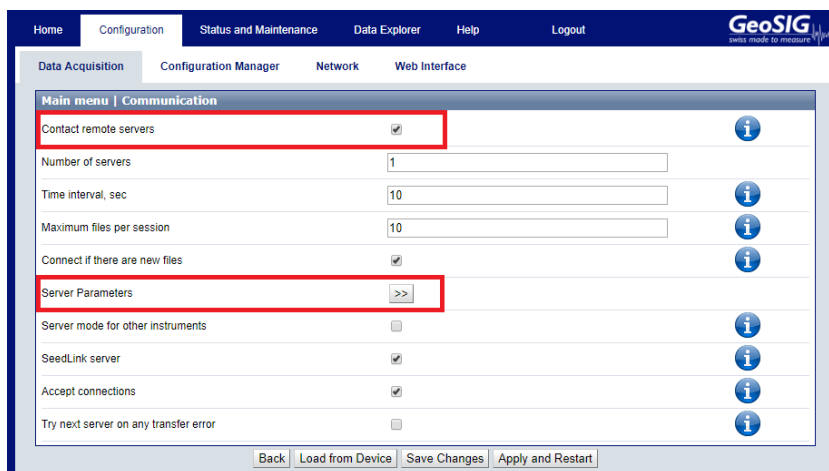


Figure 19: Edit Communication parameters

- Configure the **Server IP address** and press. The default *Server port* is **3456** and should be kept.
- Then press **Save and Restart**.

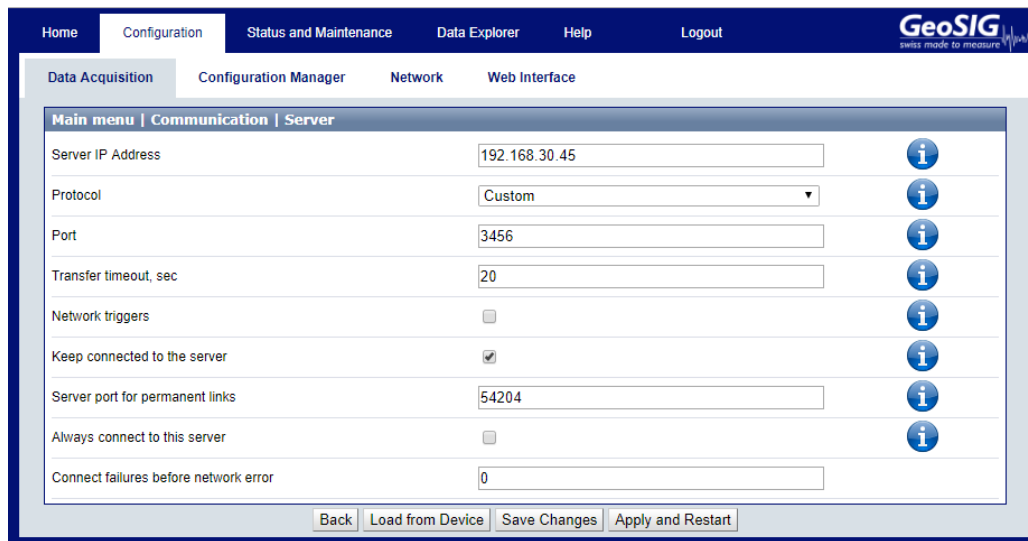


Figure 20: Edit Server parameters

- Under *Protocol*, select **Custom** and add the default *Port*: **3456**.
- Then press **Apply and Restart**.
- After the instrument has restarted it is ready for operation and can be configured according to chapters 8 and 9.

6 Principle of Operation of the Instrument

This chapter gives an overview of the normal operation of the instrument in a network or as a standalone unit.

6.1 Normal Operation

During normal operation the instruments are installed on sites and connected to a data server over Ethernet or Internet. The instrument checks in a defined interval whether there are any requests or firmware updates ready for pick up on the server. Additionally - and if configured - the instrument uploads the ringbuffer files (from continuous recording) and the state of health files to the data server.

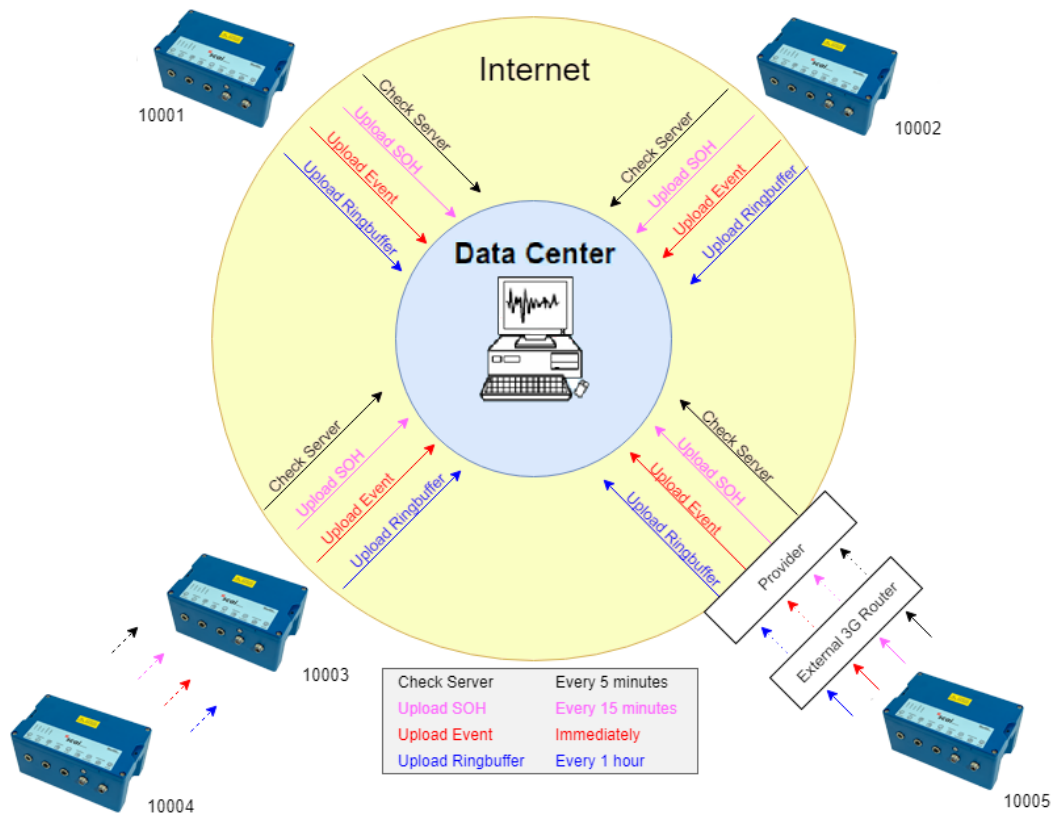


Figure 21: Normal operation in a network

6.2 Behaviour on a Seismic Event

In the event of an earthquake with vibrations above the trigger threshold, the instrument will record the event and immediately upload it to the data server (see Figure 22). In case some of the stations are too far away from the epicentre to trigger, the data can still be collected from all instruments:

- A data request will be placed on the server
- All instruments will download the request during the next time checking the server (see Figure 23)

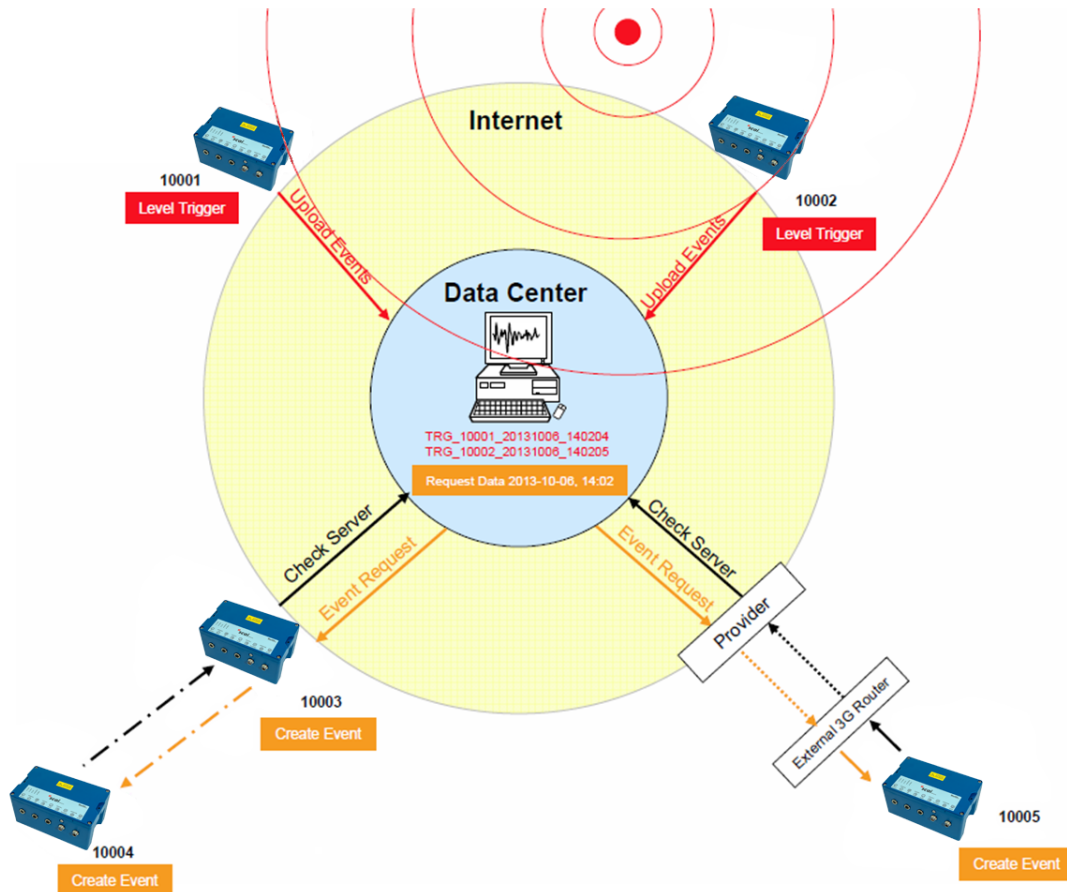


Figure 22: Upload of seismic events and download of requests from the server

- All instruments will create an event at the time listed inside the data request and extract these data out of the ringbuffer data.

- The extracted event file will be uploaded to the data server (see Figure 23)

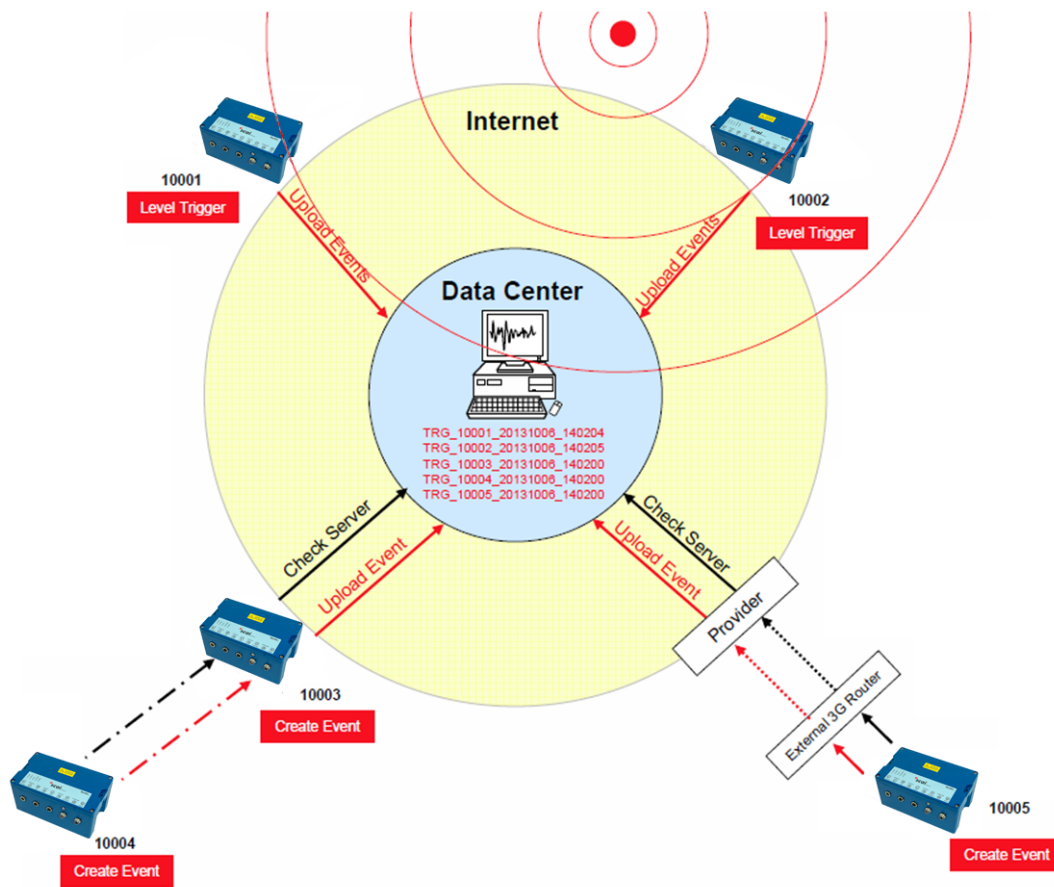


Figure 23: Behaviour on Events: Upload of extracted events

6.3 Firmware and Configuration Upgrade

In case of a firmware upgrade, the new firmwares can be easily put on the server. All instruments will recognise the new firmware during the next server checkup, download and install it. See chapter 11 for details about the firmware upgrade. The same happens also with new configurations. In case the option "Keep connection to the server" is enabled under Server Parameters (see chapter 9.8 for details), then the instrument will keep the channel open so that it is possible to configure the instrument via the Web Interface without knowing the IP address of the instrument. See chapter 8 for details.

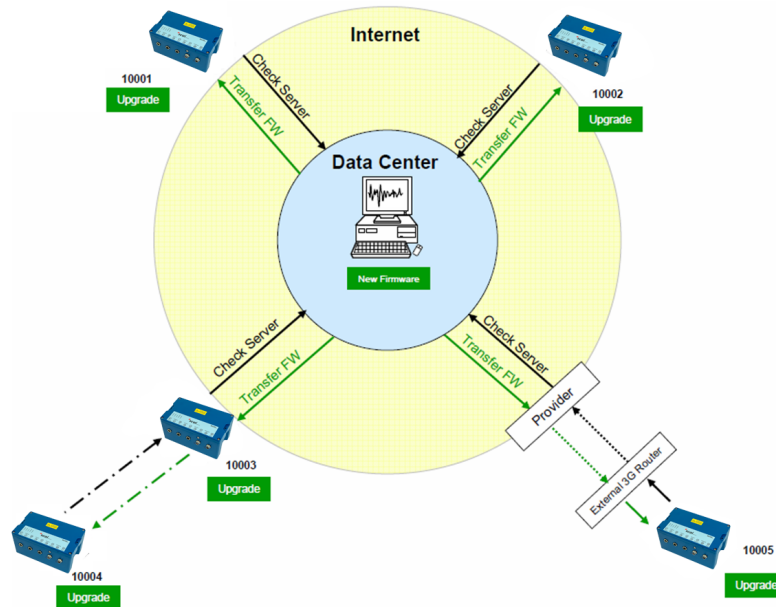


Figure 24: Firmware upgrade

6.4 Backup Server

It might be that the instrument is not able to contact the main data server anymore: either because it is down or a wrong server has been configured. For example, this can happen if a configuration file with wrong server settings is uploaded accidentally to an instrument. In this case the instrument will contact the backup server that has been configured in the test and configuration menu. Therefore the configuration of the backup server is very important and should not be ignored. For more information how to set the backup server see chapter 5.2.

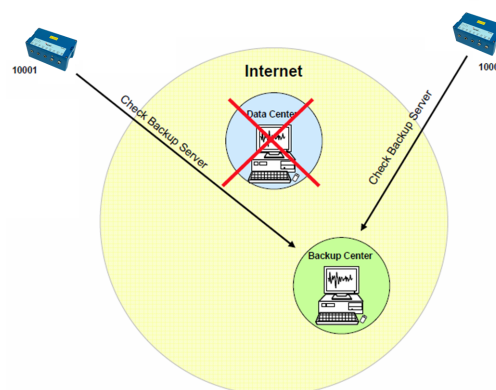


Figure 25: Connection to backup server in case connection to main server fails

7 Network Settings

The network configuration is the same whether using a wired network or wireless network. The specific settings related to the wireless network configuration via the local console are described in chapter [7.4](#).

7.1 Network Settings through the Web Interface

- To open the Web Interface please do one of the following two steps:
 - In the window Stations: *General Information of GeoDAS* make a **right click** on the station name and click on **Instrument Setup...** or
 - Open your browser and enter the IP address of the instrument (see chapter [7.5](#) for details) in the address bar of your browser.
- To be able to adjust the configuration of the instrument it is required to authenticate oneself to the device. The default login credentials are: Username: **admin**, password: **123456**
- Go to the tab **Configuration** → **Network**. The following screen can be seen (pictured below).
- Adjust the wired Ethernet settings under *eth0*. In case the instrument has a second wireless Wi-Fi interface, then additionally available Wi-Fi networks can be scanned or all parameters can be manually adjusted.
- Click **Save Network Configuration to Device**.

Home
Configuration
Status and Maintenance
Data Explorer
Help
Logout

Data Acquisition
Configuration Manager
Network
Web Interface

Network Interface Information

eth0

Current Configuration (eth0)		Active Configuration	
Name		192.168.30.176	
IPv4 Address		255.255.255.0	
IPv4 Netmask		fe80::3e8e:76ff:fe00:3e7a	
IPv6 Address		fff:fff:fff:fff::	
IPv6 Netmask		Broadcast	
Interface Type		Yes	
Interface is Active		No	
Loopback Interface		8C:8E:76:00:3E:7A	
MAC Address			

eth0

Wired Ethernet

Change Saved Configuration (eth0)

Interface Type: Wired

Network Configuration: Static

IP Address:

Netmask:

Gateway IP:

Preferred DNS Server:

Alternate DNS Server:

wlan0

Current Configuration (wlan0)		Active Configuration	
Name		Not-Associated	
Access Point/Cell		GS_Wifi	
ESSID		off	
Encryption key		off	
Fragment threshold		Frequency:2.437 GHz	
Frequency		169.254.32.52	
IPv4 Address		255.255.0.0	
IPv4 Netmask		Broadcast	
Interface Type		Yes	
Interface is Active		No	
Loopback Interface		00:0D:F0:BF:21:E1	
MAC Address		Managed	
Mode		off	
Power Management		off	
RTS threshold		long limit:7	
Retry		20 dBm	
Tx-Power		IEEE 802.11bgn	
Wifi Protocol			

wlan0

Wireless Wi-Fi

Change Saved Configuration (wlan0)

Interface Type: Wifi

Network Configuration: DHCP

Wifi Parameters

ESSID:

Wifi Topology: Infrastructure

Encryption: WPA2

WPA and WPA2 Parameters

Key Type: Password

Password (8 to 63 Characters):

Reload Network Configuration from Device
Save Network Configuration to Device

Figure 26: Configuration of network interface

7.2 Network Settings through GeoDAS

- Under **Settings** click on **Configure Stations...**, the following window appears:

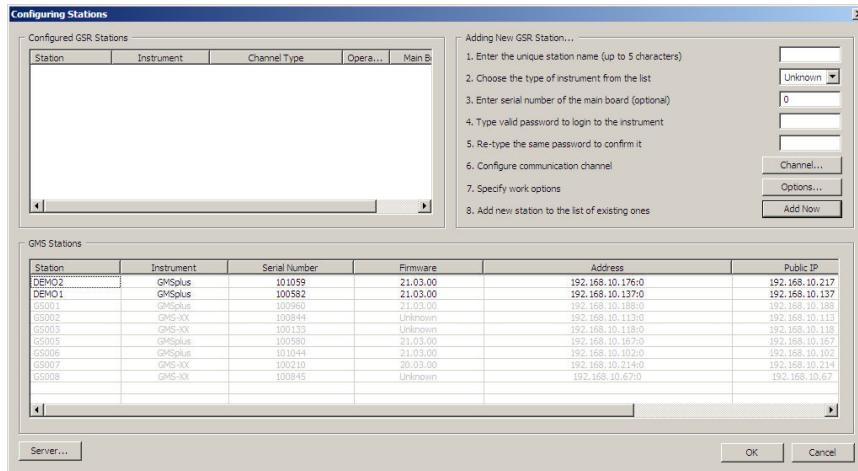


Figure 27: Configuring Stations screen

- Make a **right click** on the station name and choose **Edit Network Settings of Instrument**

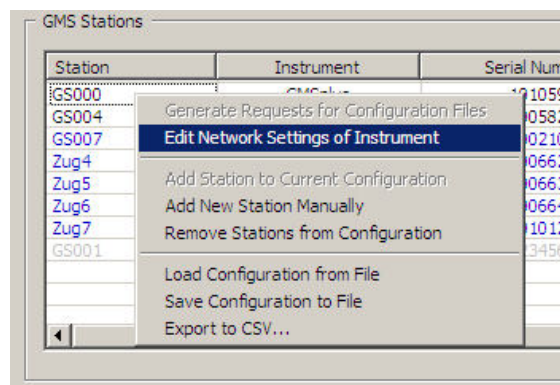


Figure 28: Edit Network settings

- Adjust all the network parameters in the following screen wherein the **Primary Network interface** is the wired Ethernet, and Embedded Wi-Fi interface is the wireless network interface.

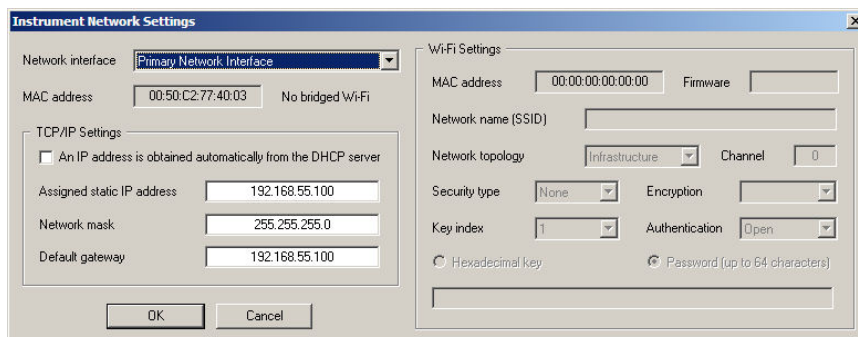


Figure 29: Configuration of wired Ethernet

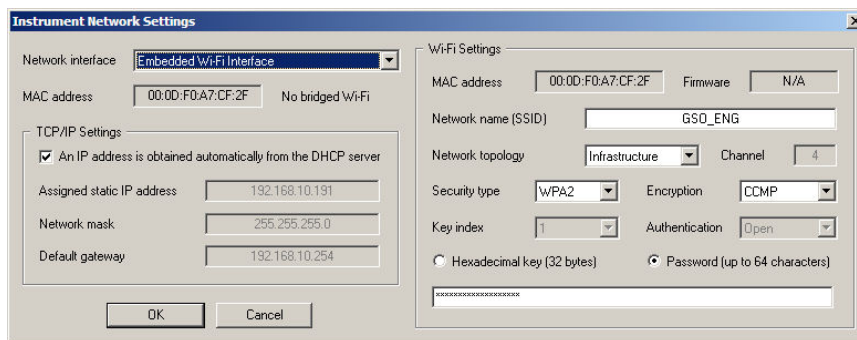


Figure 30: Configuration of wired Ethernet

7.3 Wired Ethernet settings through the local Console

Please see chapter 5.2 for details.

7.4 Wireless Settings through the local Console

- Switch on the instrument by pressing and holding the POWER button for 2 seconds.
- Press '**Ctrl + Z**' as soon the following message appears on the console to enter the test mode.

```
#####
##### Test and Initial Configuration Mode #####
#####
Press Ctrl+Z to enter the test mode.....
```

The following menu will appear (see chapter 10 for details):

Level	Shortcut	Password	Description
User	Ctrl+U	None	Basic operations only
Powerful User	Ctrl+W	None	Also hardware options and pre-selected tests
Administrator	Ctrl+A	None	Also manual tests and altering the FLASH memory content

Your level [U/W/A] or press B to boot now:

- By default, no passwords are set, so press '**U**' to enter the User Mode, and then '**N**' to enter the menu Network settings and proceed until the following menu appears:

```
---- Wireless network interface ----
Static IP address (0=Auto, 1=Yes)? (0 = 0x0):
```

- Select if the instrument should have a static or a dynamic IP address by pressing '**1**' (Static) or '**0**' (Dynamic). If a dynamic IP address is chosen, a DHCP server must be available in the network to provide the IP address settings.
- If a static IP address is selected, an additional message will appear asking for the *Instrument IP address*, *Instrument network mask* and *Instrument gateway IP address*. If you don't know these parameters please ask your network administrator.
- By pressing '**E**' the instrument scans the available networks and lists them. Choose the network to connect by pressing the **number** next to the network SSID or press '**C**' to configure the network settings manually.

```
Scanning wireless networks.
-----
  N  Network SSID          Mode          Encryption  Channel  Level,%
-----
  1  GSO_ENG              Infrastructure WPA2         1         81
-----
Enter the number of a network above, <S>can again or <C>onfigure manually:
```

- If the network is encrypted, please enter the network key.

```
Passphrase (8-63 ASCII) or a 64-character hex key (ad43Fd2d22):
```

- Adjust the other parameters concerning the SSH or recovery server if required.
- When the instrument tries to connect to the network, this can take a while. Please be patient until the following menu appears again:

```
Access level: User

--- Flash Images and Boot Options ---
L - List flash images
Q - Reset instrument configuration to the user default
V - Reset instrument configuration to the factory default
5 - Boot now
X - Reboot the instrument
Y - Power off

--- Hardware Setup and Monitor ---
N - Network settings

--- Security ---
0 - Set password

-->
```

- Press **'5'** to continue the boot process of the instrument.

7.5 Get IP from Instrument

- To get the IP from the instrument please press **'I'** in the main menu to access the *System information* menu.

```
Main menu:  
C - Configuration ->  
M - Messages ->  
X - Display errors (0) and warnings (0)  
W - Clear errors and warnings  
T - File statistics  
I - System information ->  
S - Shell command  
U - Control requests ->  
R - Restart firmware  
Z - Reboot instrument  
Q - Quit
```

- Press **'L'** to view the *Network information*

```
System information:  
A - List firmware images  
B - View RTC status  
    View Alarm status  
    View DSA status  
    View wireless sensors  
F - View DSP information  
G - View SUP information  
    View GPS information  
I - View trim values  
J - View firmware container information  
K - View constant parameters  
L - View Network information  
M - View thread list  
N - View NTP status
```

- Please see the IPs of the wired Ethernet (*eth0*) and the wireless Ethernet (*wlan0*) listed and marked here in red.

Network interfaces:

```
eth0      Link encap:Ethernet  HWaddr 00:50:C2:77:42:8E
          inet addr:192.168.10.133  Bcast:192.168.10.255  Mask:255.255.255.0
          inet6 addr: fe80::250:c2ff:fe77:428e/64 Scope:Link
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:71 errors:0 dropped:1 overruns:0 frame:0
          TX packets:16 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:6538 (6.3 KiB)  TX bytes:1678 (1.6 KiB)
          Interrupt:21 Base address:0x4000

lo        Link encap:Local Loopback
          inet addr:127.0.0.1  Mask:255.0.0.0
          inet6 addr: ::1/128 Scope:Host
          UP LOOPBACK RUNNING  MTU:16436  Metric:1
          RX packets:3 errors:0 dropped:0 overruns:0 frame:0
          TX packets:3 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:0
          RX bytes:172 (172.0 B)  TX bytes:172 (172.0 B)

wlan0     Link encap:Ethernet  HWaddr 00:0D:F0:8E:05:DF
          inet addr:192.168.10.94  Bcast:192.168.10.255  Mask:255.255.255.0
          inet6 addr: fe80::20d:f0ff:fe8e:5df/64 Scope:Link
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:2333 errors:0 dropped:95 overruns:0 frame:0
          TX packets:636 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:271699 (265.3 KiB)  TX bytes:737148 (719.8 KiB)
```


8 The Web Interface

The instrument can be configured over a Web Interface. To be able to use the Web Interface, it is necessary that the following criteria are fulfilled:

- The IP address of the device has to be known (see chapter 7.5) or the flag *Keep connection to the server* under *Server Parameters* (see chapter 9.8 for details) must be enabled (set to Yes).
- In case the flag *Keep connection to the server* is disabled, the port 80 of the device has to be accessible, from the accessing computer. This usually means that the instrument is in the same network as the accessing computer and no firewall mechanism separates the two.
- A current browser version has to be available on the accessing computer.

8.1 Accessing the Web Interface

- To access the instrument please follow one of the following two steps.
 - In the window *Stations: General Information* of GeoDAS make a right click on the station name and click on **Instrument Setup...**, as can be seen previously in Figure 16, or
 - Open your browser and enter the IP-Address (e.g. 192.168.30.176) of the device in the address bar of your browser.



Figure 31: The login screen of the instrument at 192.168.30.176

To be able to adjust the configuration of the instrument or access its data, it is required to authenticate oneself to the device. This can be done by entering a valid username and corresponding password in the fields of the same name and pressing the "login" button.

The default login credentials are:

- Username: admin
- Password: 123456

The default password can be changed as described in the chapter 8.3.4 of this manual.



The Web Interface can be disabled under Network settings in the Administrator mode of the test and configuration menu. See chapter 10 for details.

8.2 The Home Panel and the General Navigation

After the login process has ended, the screen shown in Figure 32 becomes visible. The width of the Web Interface is optimised for a screen width of 1024 pixels. If the width of the browser window is smaller than that, it might be necessary to scroll horizontally.



Figure 32: The home panel of the web interface

As can be seen in Figure 32, each screen in the web interface is separated into three sections:

- The Navigation Bar:** The navigation bar allows accessing all screens within the web interface. The navigation bar is further separated into two parts. The top bar is the primary navigation panel which is visible from all screens. The currently active tab is marked white, while all other – inactive – tabs are blue. By changing from one tab to another, the secondary navigation panel becomes active. This secondary navigation tab allows to switch between the actual screens within a primary navigation bar.
- The Content Section:** This section will contain all information and configuration options. Most interaction will take place in this part.
- The Device State Summary:** On the left side the Station Description and Serial Number is displayed to identify the current instrument you are working on. On the right side the device state summary describes the overall status of the instrument. The states that are possible are listed in Table 5. By clicking on the overall state, information on the actual problems will be displayed. More detailed information on the error states are provided in the menu item "State of Health" as described in chapter 8.4.




Symbol	Meaning	Description
	No errors or warnings reported from the device.	As there seem to be no issues, no action is required.
	A warning is reported from the device	There seems to be an issue in this module. Although it seems not to be critical, it is recommended to check why this warning is displayed and take actions to resolve it.
	A error is reported from the device	An error has occurred and it is required to check for the cause of the problem and resolve it in order to avoid limited functionality.

Table 5: The overall error states shown in the Web Interface

8.3 Device Configuration

The configuration screen of the Web Interface gives access to all configuration options, the configuration management of the Data Acquisition Software as well as the Network Configuration and the Web Interface itself.

Loading the configuration can take a few seconds. During this time at the right corner of the browser **Loading...** is displayed. Please be patient till the screen shown in Figure 33 appears.

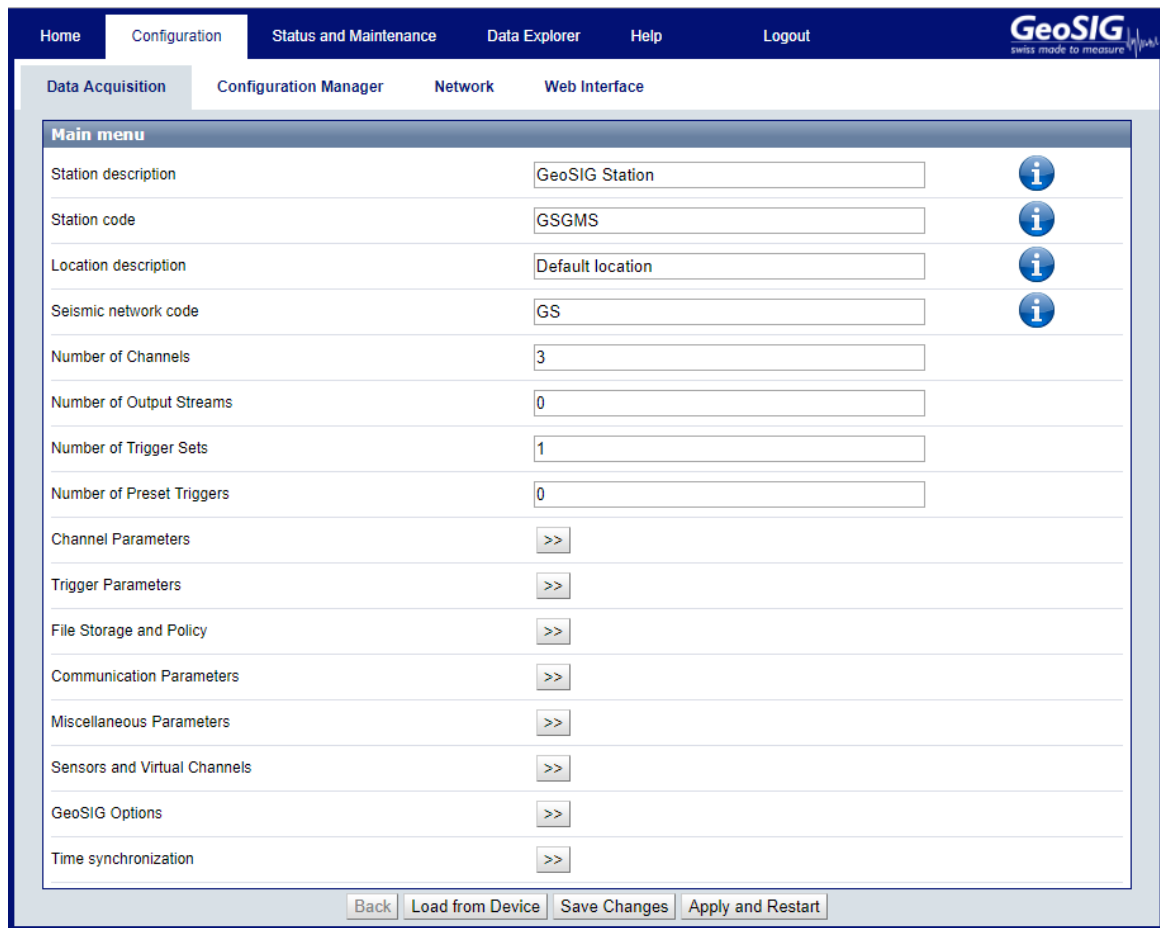



Figure 33: Configuration main menu

8.3.1 Data Acquisition Configuration

The **Data Acquisition** sub menu provides access to the data of the current configuration of the data acquisition software. As depicted in Figure 34, the content of this tab is divided into two sections:

1. **The Configuration Panel:** This is main part of the armdas Configuration screen. Within this part of the screen all the values of the configuration of the selected Configuration Menu Item can be adjusted. Most options will provide a help button in the form of white question mark on blue ground on the right part of this section. By clicking on it information will be displayed over the option. Please note that the only way to restore the original values of the fields after making changes to them is by using the "Load from Device" Button in the Action Panel.
2. **The Action Panel:** This panel is providing the option to either reload the current configuration from the device (to discard changes or load changes done by another user) or to save the edited configuration to the device or to save the edited configuration to the device and restart the data acquisition software. Saving and restarting will interrupt the current recording for about 20 seconds. During this time triggers will not be executed either. Please note that if the device is configured to use a DHCP server, the address might change during the saving of the configuration which will make the web interface inaccessible under the old address.

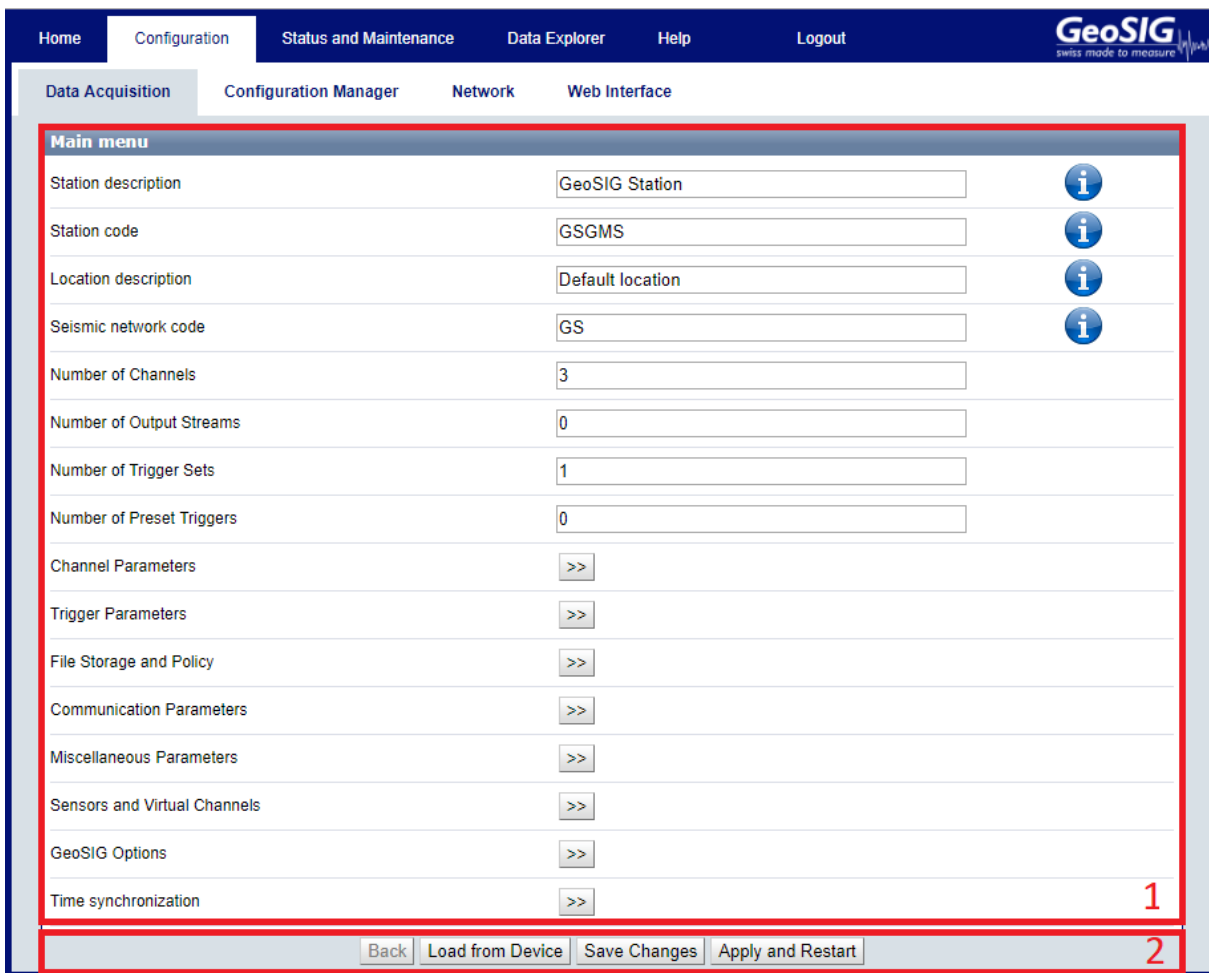


Figure 34: Configuration panels

8.3.2 Configuration Manager

As described in the previous chapter, the *Data Acquisition* screen only allows configuring the currently used configuration. The **Configuration Manager** screen described in this chapter allows managing several configurations, changing the current configuration, uploading a new configuration and so on. As depicted in Figure 35, the screen is divided into three sections:

1. **The Configuration List:** This list contains all configurations currently available on the main storage media. The *Current Configuration* is always listed here. This configuration can be copied and downloaded but not renamed, removed or made the current configuration (as it is already the current). As depicted in Figure 35, these options become available to other configurations stored on the device (in this example after uploading a file to the device). When pressing **Use as Current Configuration** it will store this configuration as the *Current Configuration*. The existing configuration will be overwritten and the instrument restarted. Note that only the *Current Configuration* can be edited in the *Firmware* screen. The other configuration files will remain untouched. The *Current Configuration* can be saved in a file by pressing **Copy**.
2. **User Default Panel:** With the **Reset To Default**, the *Current Configuration* will be overwritten by the user default (see command SETDEF CFG in the chapter 9.12.1) and the instrument will be restarted. The *Current Configuration* can be saved as the user default by pressing the button **Make Current**

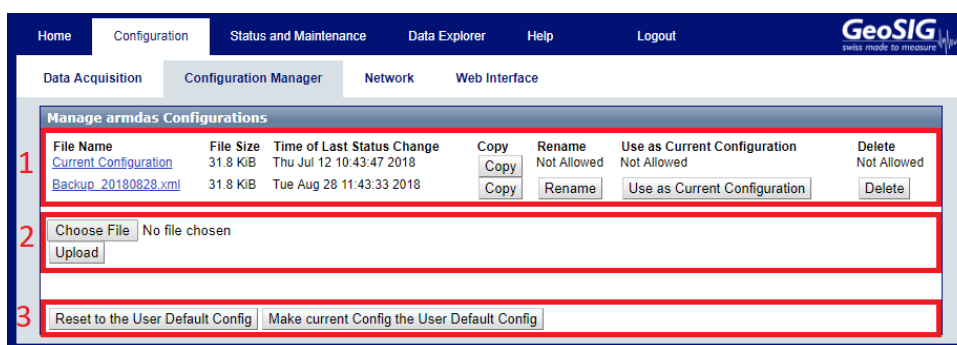


Figure 35: Configuration Manager screen

3. **The Upload Panel:** While the *Configuration List* allows downloading configurations from the device by clicking on the name, this part of the screen provides the possibility to upload a configuration to the web interface by selecting a configuration file and using the **Upload Configuration** Button. As can be seen in Figure 36, after a successful upload a new file is shown in the Configuration List and the name of the newly available configuration is written at the top of the list. (The name of new configuration will be created from a random string followed by "_config.xml"). The configuration can then be changed by clicking on **Rename**. Note that the upload panel might look different depending on the browser in use.

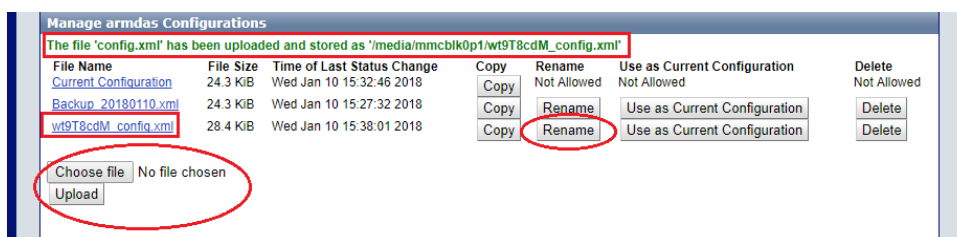


Figure 36: Choose new file to upload

To upload a file, click on **Choose File** and select the configuration file to upload.

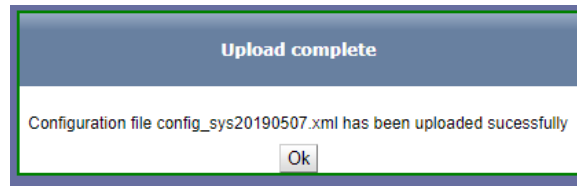


Figure 37: Configuration file is now uploaded

In figure 37, click on **OK** to finalize the upload.

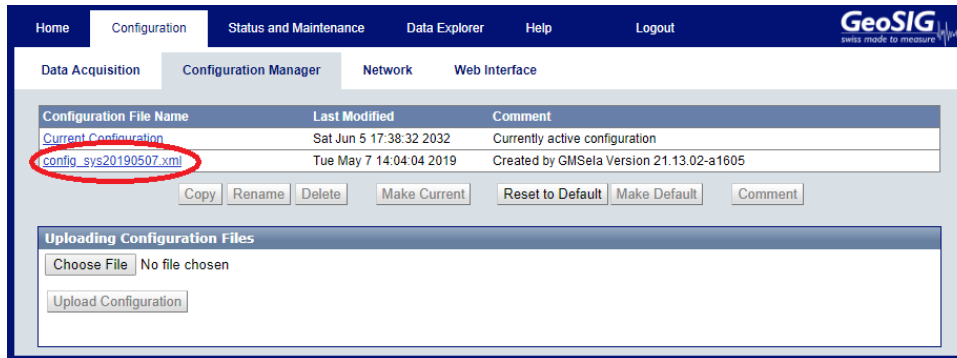


Figure 38: File is uploaded

The red circle in the figure 38 shows the configuration file which was uploaded.


8.3.3 Network Configuration

8.3.3.1 Wired Ethernet

The *Network Configuration* screen provides the possibility to change the network configuration of all network interfaces of the instrument. For the standard instrument only one network interface is available: the Ethernet interface, which is present in all devices. (This interface is marked as "ETHERNET" in Figure 5). This interface can be configured in the section of the screen that is marked with the red number "1" in Figure 39. The top part of that framed, red section describes the current configuration of the interface. The part below allows changing this configuration. The name of this network interface is traditionally **eth0**.

8.3.3.2 Wi-Fi Wireless Ethernet

Some devices contain an additional wireless interface. If this is the case, a second configuration panel is shown in the Network Configuration screen as can be seen Figure 39 (marked with the red number "2"). As with the default Ethernet interface the section surrounded by the red frame is split in two parts, where the top part defines the current settings and the bottom part provides the possibility to change the configuration. Additionally to the standard network settings like IP Address, Netmask, Gateway and so on, the actual wireless settings can be adjusted and open wireless networks scanned. The name of this network interface is traditionally **wlan0**.

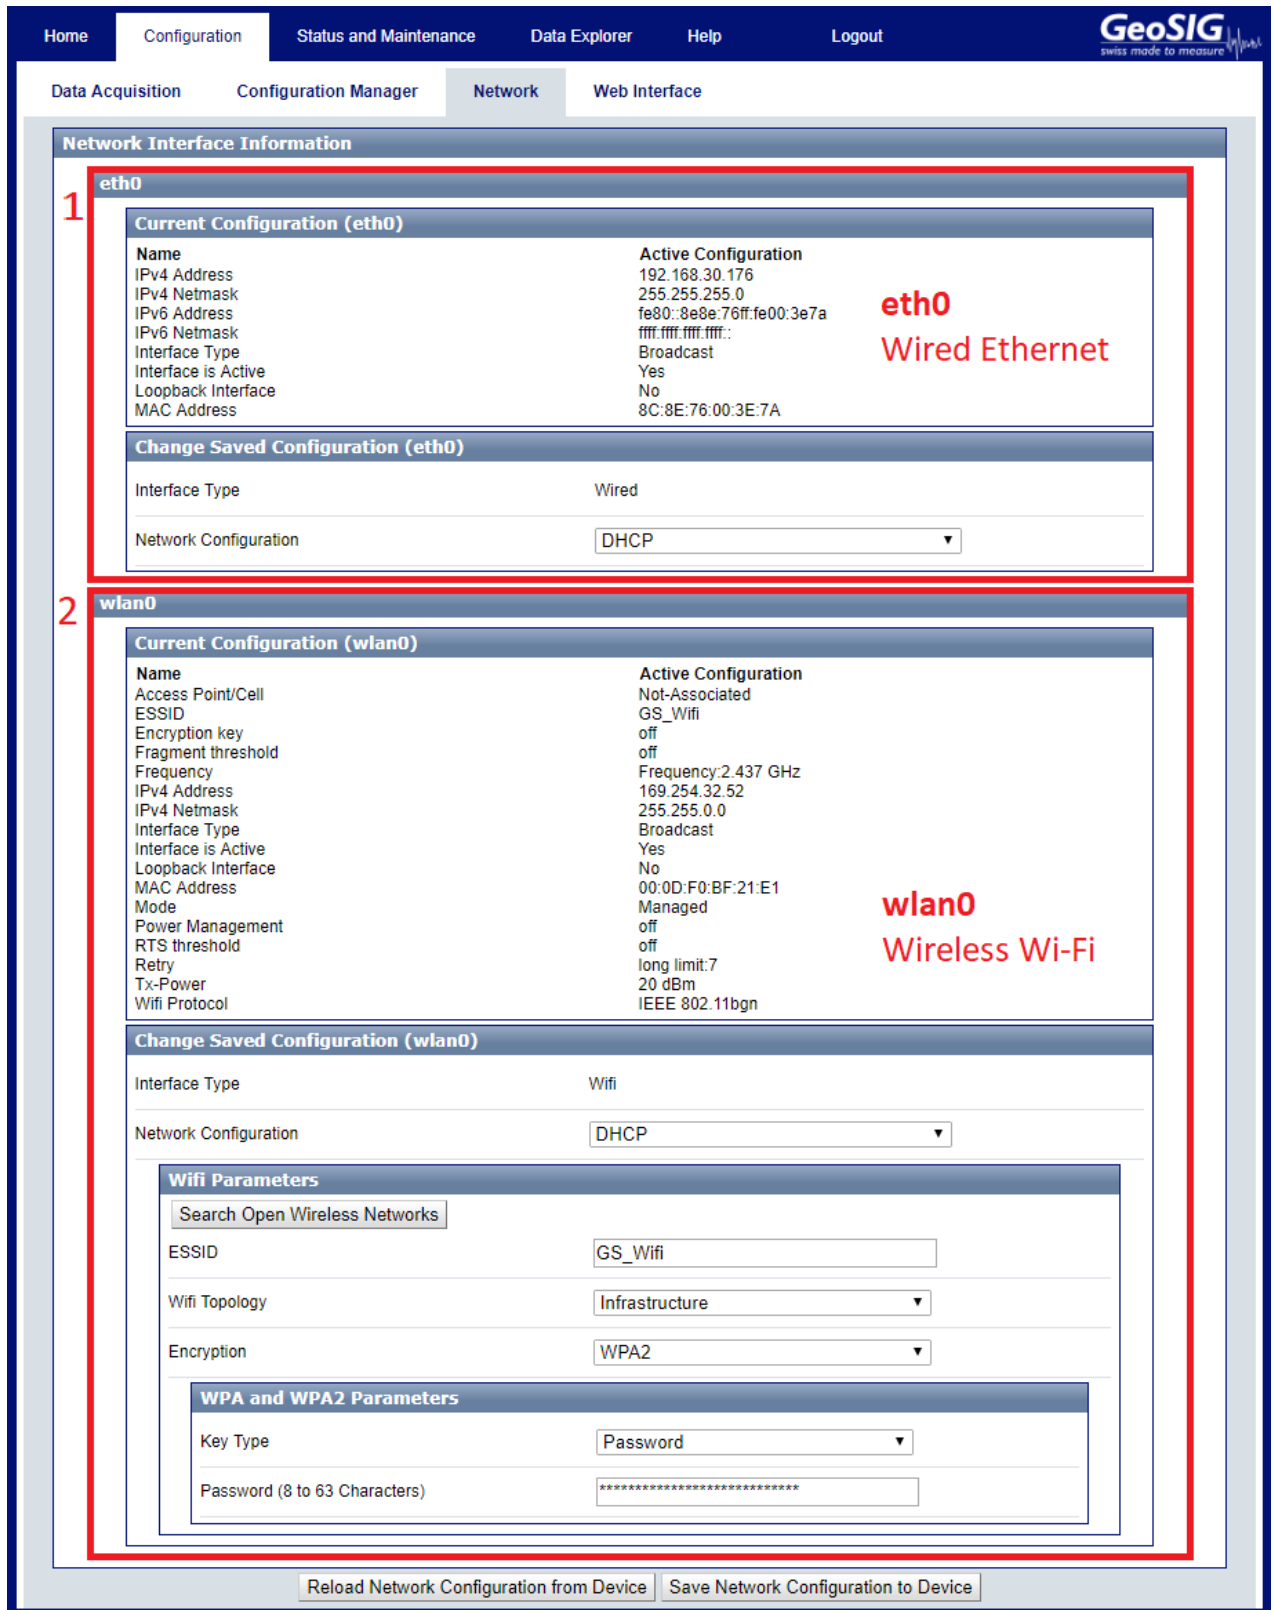

Network Interface Information

1 eth0

Current Configuration (eth0)

Name	Active Configuration
IPV4 Address	192.168.30.176
IPV4 Netmask	255.255.255.0
IPV6 Address	fe80::8e8e:76ff:fe00:3e7a
IPV6 Netmask	ffff:ffff:ffff::
Interface Type	Broadcast
Interface is Active	Yes
Loopback Interface	No
MAC Address	8C:8E:76:00:3E:7A

**eth0
Wired Ethernet**

Change Saved Configuration (eth0)

Interface Type: Wired

Network Configuration: DHCP

2 wlan0

Current Configuration (wlan0)

Name	Active Configuration
Access Point/Cell	Not-Associated
ESSID	GS_Wifi
Encryption key	off
Fragment threshold	off
Frequency	Frequency:2.437 GHz
IPV4 Address	169.254.32.52
IPV4 Netmask	255.255.0.0
Interface Type	Broadcast
Interface is Active	Yes
Loopback Interface	No
MAC Address	00:0D:F0:BF:21:E1
Mode	Managed
Power Management	off
RTS threshold	off
Retry	long limit:7
Tx-Power	20 dBm
Wifi Protocol	IEEE 802.11bgn

**wlan0
Wireless Wi-Fi**

Change Saved Configuration (wlan0)

Interface Type: Wifi

Network Configuration: DHCP

Wifi Parameters

ESSID:

Wifi Topology:

Encryption:

WPA and WPA2 Parameters

Key Type:

Password (8 to 63 Characters):

Figure 39: Network Configuration Screen

8.3.4 Web Interface Configuration

The *Web Interface Configuration* screen allows configuring all settings related to the Web Interface. At the moment, this solely consists of the possibility of changing the password for the login. To change the password press **Change**. The current password has to be known.

The default login credentials are:

- Username: admin
- Password: 123456

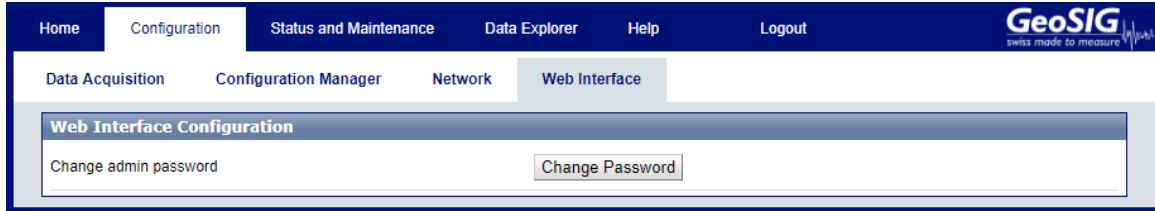


Figure 40: Web Interface Configuration Screen

8.4 State of Health

The State of Health (SOH) menu item provides all information related to the error status of the device as well as the status of the available hardware and software versions.

8.4.1 Error Status

As depicted in Figure 41, this screen provides basic information about the device (area 2) as well as the error status for each module (area 3). The summary of this SOH information is visible at the bottom of each page as the **Device State Summary**, described in chapter 8.2. Additionally it is possible to download the State of Health information as a file in XML format and clear the errors (area 1).

Time Information			
SOH Generation Time:	Tue May 7 12:21:34 2019		
Device Identity Information			
Device Model:	CR-7		
Serial Number:	104022		
Station Description:	GeoSIG Station		
Station Code:	GSCR7		
Network Code:	GS		
Errors and Warnings			
Event Storage	✓	Configuration (Non-Critical)	✓
Event Storage Quota	✓	File Index	✓
Configuration Parameters	✓	General Status (Non-Critical):	✓
System Calls	✓	Time Synchronisation (Non-Critical)	✓
File Operations (opening)	✓	Ringbuffer Operations (Non-Critical)	✓
File Operations (deleting)	✓	Network (Non-Critical)	✓
Filesystem Requests	✓	File Transfer (Non-Critical)	✓
Firmware Ressources	✓	I2C Bus	✓
Memory Allocation	✓	RTC Status (Non-Critical)	✓
Flash Memory	✓	Data Processing	✓
User Requests	✓	Alarm Handling	✓
Communication with Servers	✓	Wind Sensor (if any)	✓
Hardware Ressources	✓	NTP Synchronisation (Non-Critical)	✓
DSP Status	✓	NTP Synchronisation	✓
DSP Buffer	✓	Sensor Offset	✓
Ringbuffers	✓	Message Queue Interface	✓
File Writing	✓	Sensor Status	✓
Network	✓	Hardware Status	✓
General State	✓	Digital Sensors (if any)	✓
File Reading	✓	Main Battery (if any)	✓
		Main Battery (non-critical)	✓

Figure 41: Error Status Screen

The modules in area 3 can have one of the states defined in Table 5.

8.4.2 Recording Status

This screen provides all information on the recording and time synchronisation status of the device. As depicted in Figure 42, this screen contains information on the number of events, the timing and synchronisation status of the device, as well as information about the GPS quality and the GPS position of the instrument.

Home Configuration Status and Maintenance Data Explorer Help Logout

Errors and Warnings Recording Status Hardware Software Maintenance

Download SOH Information as File

Recording Status

Total number of stored event files:	0
Queued Events:	0
Time of Last Detected Event:	Thu Jan 1 00:00:00 1970
Timestamp of the oldest Data:	Tue Apr 16 12:38:11 2019

Synchronisation Status

Device Synchronises to:	NTP
Synchronisation Status:	Freewheeling
Max. Synchronisation Interval:	0
NTP Synchronisation Failures:	0
Pulse Detected:	True
Source Valid:	False
Autolock Enabled:	True
Last Lock Time:	Tue May 7 12:21:29 2019
Time Elapsed since last lock:	3h
Drift Rate of the Clock, PPS:	0.3
GPS Status:	Unavailable

Device type: CR-7 Device date and time: Tue May 7 13:09:06 2019
 Serial number: 104022 Station description: GeoSIG Station
 Station code: GS.GSCR7

Device State Summary

Figure 42: Recording Status Screen

8.4.3 Hardware Status

The **Hardware Status** provides such information as uptime, available disk space, the device temperature and so on. Information about the available hardware options in the instrument, such as Alarm Boards, Wi-Fi Modules and Modems can be found in the section **Hardware Configuration Status**.

GeoSIG
swiss made to measure

Home Configuration **Status and Maintenance** Data Explorer Help Logout

Errors and Warnings Recording Status **Hardware** Software Maintenance

Download SOH Information as File

Hardware Status	
Linux Uptime at Site Generation:	0 years, 0 months, 1 days, 21 hours, 11 minutes, 39 seconds
Last Reboot Time:	Fri Jun 21 08:51:48 2019
The Reason for the last Shutdown:	upgrade CFG
Time of the last shutdown:	Fri Jun 21 08:51:38 2019
Environment Temperature:	35.70°C
Available Disk Space:	7.15 GiB
Free Disk Space:	6.18 GiB
AC power input:	ON
Current Voltage (V):	15.18
Voltage Limits (V):	Switch-off: 10.72 Switch-on: 12.74
Minimum Measured Voltage (V):	0.00
Battery-1 voltage (V):	13.23
Battery-2 voltage (V):	0.02
Primary DC/DC converter output voltage:	15.23
Input Voltage to the primary DC/DC converter (V):	13.47
Sensor power supply (V):	15.78

Hardware Configuration Status	
Last Incoming File from Server:	CFG_200007_20190513_133010.xml
Last Configuration Time:	Mon Apr 30 13:49:50 2018
Source of Configuration:	WebGUI version 1.9-r0-61-g9b36
Configuration Type:	Current
Number of Channels:	6
Alarm Board enabled:	NO
Standard Wi-Fi Module enabled:	NO
Sensor Control Module enabled:	NO
Cell Modem available:	None
Configured Recovery Server:	0.0.0.19675
Recovery Server Contact Interval:	24
Main Battery Installation Date:	2018-04-30T00:00:00.000+00:00

Figure 43: Hardware Status Screen

8.4.4 Software Status

The Software Status screen contains information on the **Software Versions**.

The screenshot shows the GeoSIG web interface. At the top, there is a navigation bar with 'Home', 'Configuration', 'Status and Maintenance', 'Data Explorer', 'Help', and 'Logout'. Below this is a sub-menu with 'Errors and Warnings', 'Recording Status', 'Hardware', 'Software', and 'Maintenance'. The 'Software' sub-menu is active, showing a 'Download SOH Information as File' button. The main content area is divided into two sections: 'Software Versions' and 'Software Upgrade'. The 'Software Versions' section contains a table with the following data:

Version Name	Version Value
Webinterface Version:	1.9-r14
Firmware Version:	21.13.02-a1605
Operating System Version:	unknown
DSP Version:	128.03.08-a02
Supervisor Version:	90.01.03-a02

The 'Software Upgrade' section includes a 'Choose File' button, the text 'No file chosen', and an 'Upload Software' button. At the bottom of the screen, a footer bar displays device information: 'Device type: CR-7', 'Device date and time: Tue May 7 13:16:46 2019', 'Serial number: 104022', 'Station description: GeoSIG Station', and 'Station code: GS.GSCR7'. On the right side of the footer bar, there is a 'Device State Summary' with a green checkmark icon.

Figure 44: Software Status Screen

The section **Software Upgrade** allows to download firmware directly through the Web Interface.

- Click on **Choose File**, select a firmware to upgrade and click on **Upload Software**.

8.4.5 Maintenance

As shown in Figure 45, the Maintenance screen manage the data file, start a trigger, get SOH file and sending signal-related requests to the data acquisition software.

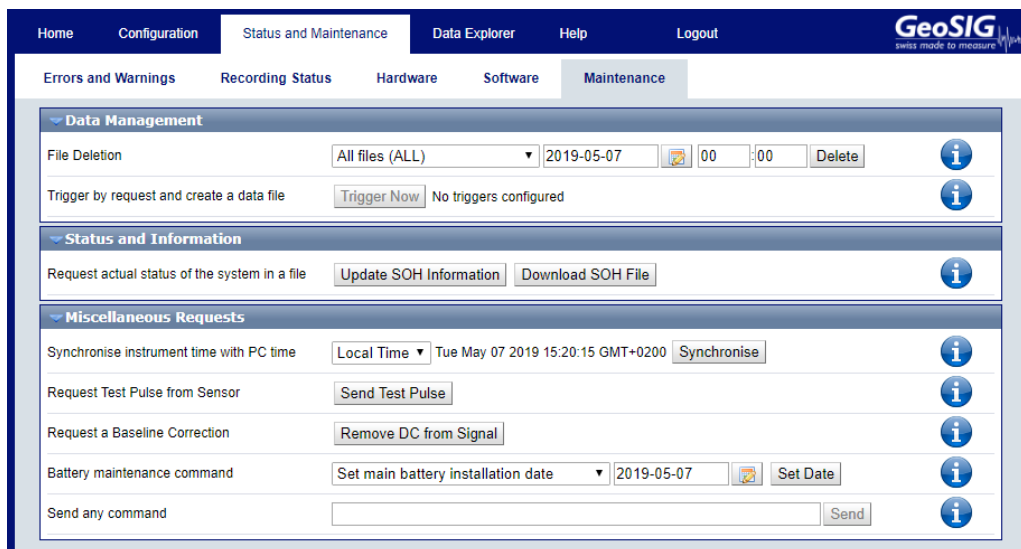


Figure 45: The Maintenance Screen

The **Data Management** section allows to manage the files and start a trigger

- **File deletion** allows to user to delete all or a specific type of file.
- **Trigger by request and create a data file** can start a trigger by click on **Trigger Now**.

The **Status and information** section allows to update or download the SOH file.

- **Request actual status of the system in a file** allows to user to delete all or a specific type of file. It sends a request to the instrument to execute selfcheck and update its state of health. It may take a while to complete, and then you can download updated information in a SOH file.

The **Miscellaneous Requests** section allows to do different tasks:

- **Synchronise instrument time with PC time:** If your instrument does not have a GPS and does not connect to NTP servers, you can set its time from your browser. The method is not very precise.
- **Send a Test Pulse:** By sending this request, a test pulse will be executed. The sensor should then respond accordingly and thus provide information about its status.
- **Remove DC from Signal:** By sending this request, a baseline correction will be applied to the signal and therefore the DC will be removed. A DC on the signal can be caused by e.g. a slight misalignment of the sensor.
- **Battery maintenance command:** if your instruemnt has internal battery, you must update this information every time when you replace it.
- **Send any command:** Type any known command supported by firmware and press **Send**.

If the Seismometer Control option is available, it is possible to control the mass from this window as can be seen in Figure 46. The following commands are supported:

- **Lock:** Locks the seismometer.
- **Unlock:** Unlocks the seismometer. After unlocking, the sensor automatically centres its mass.
- **Center:** Centring of the mass

During all controls, the field *Current Mass Position* shows current mass positions of the channels East-West, North-South and Vertical in mV. Feedback about the progress and status information can be found under *Seismometer Control Output*.

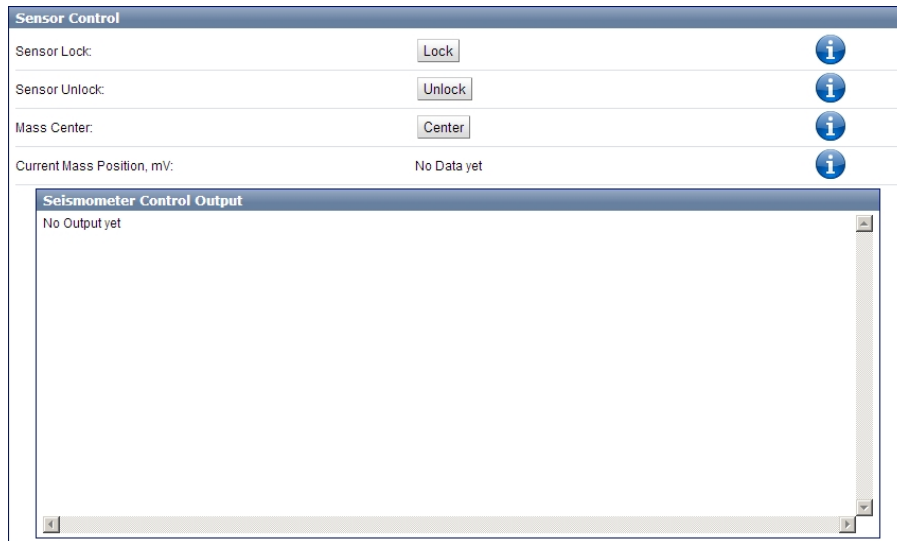


Figure 46: Seismometer Control

8.5 Data Explorer

The Data Explorer provides the possibility to gather information on the files stored on the SD or CF card. The file types are separated into three different file types:

- Automatically Detected Events (Event- and Calibration files)
- Manually Triggered Events and Request Data (Event- and Calibration files)
- Status and Information (SOH- and Log-files)
- Ringbuffers (Ringbuffer files)

With the menu at the top of the Data Explorer it is possible to switch between the file types listed above. For each listed file, the information on its file size and the last modification time are displayed. The files can be sorted according to the file name, size or modification date. By clicking on the file name, the file can be downloaded.



Figure 47: The Data Explorer Screen

8.6 Help

The Help Menu provides help if there are any problems with the device or the Web Interface.

8.6.1 Online Help

On this screen, the current version of the GMS-scai User Manual can be downloaded from the device. This manual contains additional information on the instrument, which is not provided in the interface itself.

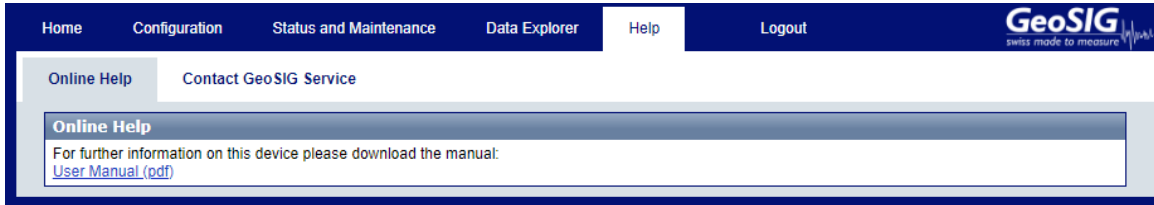


Figure 48: Download the GMS-scai User Manual

8.6.2 Contact GeoSIG Service

This screen provides information on how to contact GeoSIG service in the case of problems. The links provided on this screen will only work if access to the Internet is available.

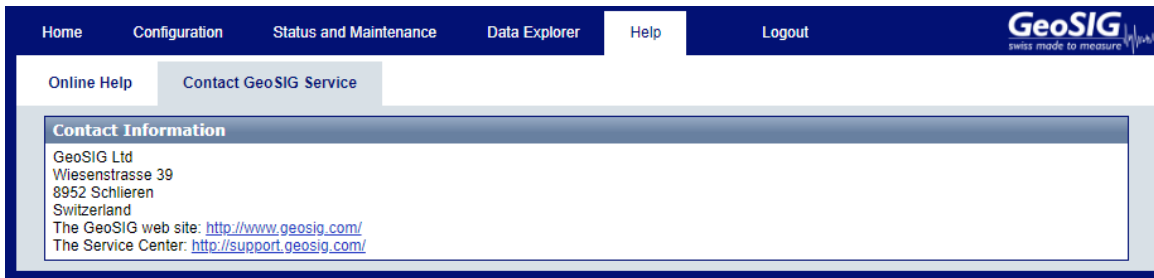


Figure 49: Contact information

9 Detailed Configuration of the Instrument

9.1 Switch ON and OFF the Instrument

The main power switch operates as follows:

- Open the housing lid of the instrument by removing the four screws in the corners.
- Press the *POWER* button for 2 seconds to switch the instrument **ON**.
- The *SYSTEM* indicator changes to solid white indicating that Linux OS is starting up and then it is flashing white indicating that the data acquisition software is starting up. If *POWER* indicator is flashing red instead, the instrument is not turning on because of low battery voltage. If *SYSTEM* indicator is flashing red instead, the instrument is not turning on because of high temperature (See Table 1 for details). It is possible to force the instrument to turn on neglecting the battery voltage and the temperature by pressing the *POWER* button for 10 seconds.
- To turn the instrument **OFF**, press the power button for a minimum of 2 seconds and wait for the operating system to shutdown properly. It is possible to force an immediate power off by pressing the *POWER* button for 10 seconds.

9.2 General Comments to the Configuration

All the configuration changes can be done either over the network by the Web Interface and GeoDAS or on the instrument itself using a standard Micro USB patch cable on the internal Micro USB connector and a terminal program.

9.2.1 Change Configuration by the Web Interface

- Open an Internet browser and enter the IP address of the device in the address bar of your browser.
- Login with the username: *admin* and the password: *123456*

See chapter 8 for the full explanation of the Web Interface.

9.2.2 Change Configuration by GeoDAS

- In the window *Stations: General Information* make a **right click** on the station name.

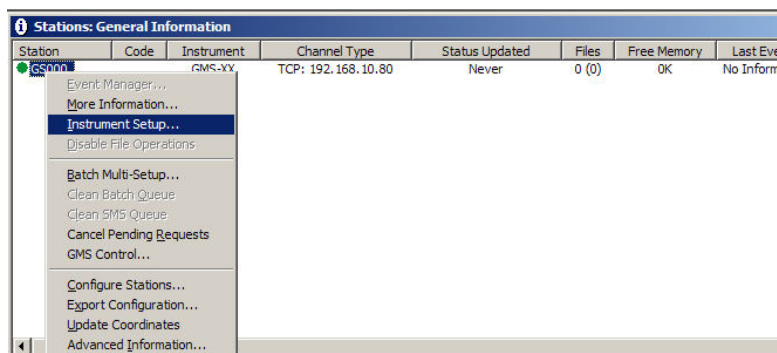


Figure 50: Instrument setup

- GeoDAS is opening the default Internet browser. The Web Interface of the instrument will appear. See chapter 8 for the full explanation of the Web Interface.

9.2.3 Changing Configuration by the Console

- Connect the GMS-scai to a serial port of your computer and switch on the instrument if not already done.
- In GeoDAS go to **Tools** → **Terminal...** and choose your COM Port. As Baud rate select **115200**. Then Press **Connect**. Any terminal application of your choice can be used alternatively.
- Press **<Enter>** the following menu appears:

```
Main menu:  
C - Configuration ->  
M - Messages ->  
X - Display errors (0) and warnings (0)  
W - Clear errors and warnings  
T - File statistics  
I - System information ->  
S - Shell command  
U - Control requests ->  
R - Restart firmware  
Z - Reboot instrument  
Q - Quit
```

- To configure armdas, from GMS-scai console, press 'C' and **<Enter>**. If you are asked, select to edit the **current configuration**, by pressing 'C' again.

```
Configuration selection:  
A - Active (creates temp config with current values from memory) ->  
C - Current (loads config from config.xml) ->  
F - File (take config from specified file) ->  
  
Select <A>...<F>. <Esc> to exit
```

- Change the configuration as described in the following chapters
- Press **<Esc>** to leave the configuration menu. If asked, select **save as current configuration**, by pressing 'C'

```
Save as (C)urrent, save to a (F)ile or e(X)it without saving?
```

9.2.4 Explanation of the Structure in the Manual

As the parameters in the configuration sometimes depend on each other, not all parameters are shown all the time. The configuration is also sorted in several sub-menus. Therefore the menu is explained as following:

<i>Parameter in the menu</i>		<i>Possible selections</i> or 'User selectable'	Explanation
<i>Switch-Parameter</i>		<i>Possible selections</i> or 'User selectable'	Explanation: The following three lines depend on the selection and are only visible if not set to ' No '
<i>This Parameter is only visible if Switch-Parameter has been set to Yes</i>		<i>Possible selections</i> or 'User selectable'	Explanation
<i>This Parameter is only visible if Switch-Parameter has been set to Yes</i>		<i>Possible selections</i> or 'User selectable'	Explanation
<i>Submenu, only visible if Switch-Parameter has been set to Yes</i>	<i>Parameter in the Submenu</i>	<i>Possible selections</i> or 'User selectable'	Explanation
	<i>Parameter in the Submenu</i>	<i>Possible selections</i> or 'User selectable'	Explanation
<i>Submenu</i>	<i>Parameter in the Submenu</i>	<i>Possible selections</i> or 'User selectable'	Explanation
	<i>Parameter in the Submenu</i>	<i>Possible selections</i> or 'User selectable'	Explanation
	<i>Switch-Parameter in the Submenu</i>	<i>Possible selections</i> or 'User selectable'	Explanation
	<i>This Parameter is only visible if Switch-Parameter has been set to Yes</i>	<i>Possible selections</i> or 'User selectable'	Explanation

Table 6: Explanation table structure

9.3 Configuration of the Channels

9.3.1 In the Web Interface or by GeoDAS

- In the field **Configuration** → **Number of Channels** the total number of channels must be configured first.

Main menu		
Station description	<input type="text" value="GeoSIG Station"/>	
Station code	<input type="text" value="GSGMS"/>	
Location description	<input type="text" value="Default location"/>	
Seismic network code	<input type="text" value="GS"/>	
Number of Channels	<input type="text" value="3"/>	
Number of Output Streams	<input type="text" value="0"/>	
Number of Trigger Sets	<input type="text" value="1"/>	
Number of Preset Triggers	<input type="text" value="0"/>	
Channel Parameters	<input type="button" value=">>"/>	
Trigger Parameters	<input type="button" value=">>"/>	
File Storage and Policy	<input type="button" value=">>"/>	
Communication Parameters	<input type="button" value=">>"/>	
Miscellaneous Parameters	<input type="button" value=">>"/>	
Sensors and Virtual Channels	<input type="button" value=">>"/>	
GeoSIG Options	<input type="button" value=">>"/>	
Time synchronization	<input type="button" value=">>"/>	

Figure 51: Configure Number of Channels

- Go to **Configuration** → **Channel Parameters** to edit the channel parameters. See Table 7 for additional information.

The screenshot shows the GeoSIG web interface. The top navigation bar includes 'Home', 'Configuration', 'Status and Maintenance', 'Data Explorer', 'Help', and 'Logout'. The 'Configuration' menu is expanded to show 'Data Acquisition', 'Configuration Manager', 'Network', and 'Web Interface'. The 'Configuration Manager' section contains a table of channel parameters:

No	Data source	Channel name	Location code	Maintain the ringbuffer	Online preprocessing
1	INT-ADC-S01-C01	C01	LC	Yes	None
2	INT-ADC-S01-C02	C02	LC	Yes	None
3	INT-ADC-S01-C03	C03	LC	Yes	None

Below the table, a note states: "The above table displays several main parameters. Click a row to select it. Hold the Ctrl button to select multiple rows. The last clicked row is displayed in bold and parameters of the related item are displayed in the panel below. Modification of any parameter is applied to all selected rows".

The 'Main menu | Channel 1 of 3' panel contains the following parameters:

- Data source: INT-ADC-S01-C01 (dropdown)
- Channel name: C01 (text input)
- Location code: LC (text input)
- Source data unit: g (text input)
- LSB factor: 2.50986e-07 (text input)
- Sampling rate, sps: 1000 (text input)
- Negative axis:
- Offset compensation:
- Maintain the ringbuffer:
- Online preprocessing: None (dropdown)
- Decimation and peaks: None (dropdown)

At the bottom of the panel are four buttons: 'Back', 'Load from Device', 'Save Changes', and 'Apply and Restart'.

Figure 52: Edit Channel Parameters

9.3.2 Via Local Serial Console

- Press **'E'** to select the number of channels. By default three channels are configured as most sensors have three channels normally.

```
Configuration
A) Station description ..... GeoSIG Station
B) Station code ..... GSGMS
C) Location description ..... Default location
D) Seismic network code ..... GS
E) Number of Channels ..... 3
F) Number of Output Streams ..... 0
G) Number of Trigger Sets ..... 1
H) Number of Preset Triggers ..... 0
I) Channel Parameters ..... ->
K) Trigger Parameters ..... ->
M) File Storage and Policy ..... ->
N) Communication Parameters ..... ->
O) Miscellaneous Parameters ..... ->
S) GeoSIG Options ..... ->
T) Time synchronization ..... ->
```

- Press **'I'** to get to the *Channel Parameters* menu to adjust the settings of the channels. The following menu appears:

```
Configuration | Channel 1 of 3
A) Data source ..... INT-ADC-S01-C01
E) Channel name ..... C01
F) Location code ..... LC
G) Source data unit ..... g
H) LSB factor ..... 2.50986e-07
I) Sampling rate, sps ..... 1000 (0x3E8)
K) Negative axis ..... No
L) Offset compensation ..... Yes
N) Maintain the ringbuffer ..... Yes
O) Online preprocessing ..... None
S) Decimation and peaks ..... None
```

- Each channel can be adjusted according to your wishes. To change the channels press **'+'** or **'-'**. The following parameters can be adjusted:

Data source	The source of the channel can be defined	
	INT-ADC-Sxx-Cxx EXT-ADC-Sxx-Cxx DATACHAN DATAVSUM DATAVSU3	See chapter 9.3.4 Virtual channels Vector sum of two channels Vector sum of three channels
	Source channel name	<i>User selectable</i> The source of the virtual channel can be any other channel
	Second source channel	<i>User selectable</i> In case of the vector sum a second or third source has to be selected
	Third source channel	<i>User selectable</i>
Channel name	<i>User selectable</i>	The channel name in the record is a combination of the location code and channel name
Location code	<i>User selectable</i>	
Source data unit	<i>User selectable</i>	Data unit of the selected channel
LSB factor	<i>User selectable</i>	LSB factor, depending on the connected sensor. See chapter 9.3.3 for details and Table 8 for the specific values of the sensors.
Sampling rate, sps	20, 40, 50, 100, 125, 200, 250, 500, 1000	Sampling rate of the selected channel. Additional sampling rates can be derived by configuring a decimation factor in the decimation and peaks option.
Negative axis	Yes No	Inversion of the axis is enabled Inversion of the axis is disabled
Offset compensation	Yes No	Compensation is enabled Compensation is disabled Detail behavior of the offset compensation can be configured as described in chapter 9.9.2
Maintain Ringbuffer	Yes No	Permanent recording is enabled Permanent recording is disabled
Decimation and peaks	The data can be decimated, or just peaks can be stored	
Online Decimation	Decimation Peak Values Average Values	Additional down sampling of the data Peak values of the data within a certain interval Average values of the data within a certain interval
Decimation factor	<i>User selectable</i>	The signal will be decimated by the selected factor. E.g. if the sample rate is 50 and the decimation factor 10, then the output sample rate is 5 SPS. Be aware that no anti-aliasing filtering is done prior to decimation!
Interval of calculation, sec	<i>User selectable</i>	The Peak or Average values of the signal within the time defined in the Interval of averaging will be written into the ringbuffer with the specified Output sampling interval in [seconds]. Interval of averaging should be equal or higher than the Output sampling interval.
Output sampling interval, sec	<i>User selectable</i>	

Table 7: Channel configuration menu structure

9.3.3 Calculation of the LSB factor

This section defines the calculation of the LSB value for the GMS-scai that has to be configured in the Channel Parameters.

In the Web Interface, the conversion from LSB to Full Scale and backwards is done automatically. In case the instrument is configured over GeoDAS or the console, the LSB value must be entered.

9.3.3.1 Overview

The LSB values of all GeoSIG sensors for the GMS-scai can be found in the following table

Sensor	Full Scale	Output Voltage Range		
		LSB @ +/- 2.5 V	LSB @ +/- 10 V	LSB @ +/- 20 V
AC-xx	+/- 0.5 g	0.628050e-7 g/count	0.627646e-7 g/count	0.634710e-7 g/count
	+/- 1 g	1.256099e-7 g/count	1.255293e-7 g/count	1.269420e-7 g/count
	+/- 2 g	2.512198e-7 g/count	2.510585e-7 g/count	2.538840e-7 g/count
	+/- 3 g	3.768297e-7 g/count	3.765878e-7 g/count	3.808260e-7 g/count
	+/- 4 g	5.024396e-7 g/count	5.021171e-7 g/count	5.077680e-7 g/count
VE-13	1 mm/s		1.324548e-7 mm/s/count	
VE-23	10 mm/s		1.324548e-6 mm/s/count	
	100 mm/s		1.324548e-5 mm/s/count	
VE-33	Sensitivity: 27.3 V/m/s	1.150274e-8 m/s/count	4.598142e-8 m/s/count	9.299780e-8 m/s/count
VE-53	Sensitivity: 1000 V/m/s	3.140248e-10 m/s/count	1.255293e-9 m/s/count	2.538840e-9 m/s/count
	Sensitivity: 200 V/m/s	1.570124e-9 m/s/count	6.276463e-9 m/s/count	1.269420e-8 m/s/count

Table 8: LSB of all GeoSIG sensors

If you have a different sensor, the LSB can be calculated according to the following chapters.

9.3.3.2 Calculate LSB from Sensors with given Full Scale

Output Voltage of the sensor and input range of the GMS-scai is +/- 10 V (GeoSIG Standard)

Gain Factor is 0.949 653 334

$$LSB = \frac{FullScale}{GainFactor \cdot 2^{23}} = \frac{FullScale}{0.949\ 653\ 334 \cdot 2^{23}} = \frac{FullScale}{7\ 966\ 269.551}$$

 | **Example, 3 g sensor**

$$LSB = \frac{3\ g}{0.949\ 653\ 33 \cdot 2^{23}\ counts} = \frac{3\ g}{7\ 966\ 269.551\ counts} = 3.765\ 878\ 1e-7\ g/count$$

Output Voltage of the sensor and input range of the GMS-scai is +/- 2.5 V

Gain Factor is 0.949 043 656

$$LSB = \frac{FullScale}{GainFactor \cdot 2^{23}} = \frac{FullScale}{0.949\ 043\ 656 \cdot 2^{23}} = \frac{FullScale}{7\ 961\ 155.205}$$

 | **Example, 3 g sensor**

$$LSB = \frac{3\ g}{0.949\ 043\ 656 \cdot 2^{23}\ counts} = \frac{3\ g}{7\ 961\ 155.205\ counts} = 3.768\ 297\ 3e-7\ g/count$$

Output Voltage of the sensor and input range of the GMS-scai is +/- 20 V

Gain Factor is 0.939 084 747

$$LSB = \frac{FullScale}{GainFactor \cdot 2^{23}} = \frac{FullScale}{0.939\ 084\ 747 \cdot 2^{23}} = \frac{FullScale}{7\ 877\ 613.828}$$

 | **Example, 3 g sensor**

$$LSB = \frac{3\ g}{0.939\ 084\ 747 \cdot 2^{23}\ counts} = \frac{3\ g}{7\ 877\ 613.828\ counts} = 3.808\ 259\ 8e-7\ g/count$$

9.3.3.3 Calculate LSB from Sensors with given Sensitivity

Input range of the GMS-scai is +/- 10 V (GeoSIG Standard)

Gain Factor is 0.949 653 334

$$LSB = \frac{\frac{RecorderFullScale(V)}{Sensitivity}}{GainFactor \cdot 2^{23} \text{ counts}} = \frac{\frac{RecorderFullScale(V)}{Sensitivity}}{0.949\,653\,334 \cdot 2^{23} \text{ counts}} = \frac{\frac{10V}{Sensitivity}}{0.949\,653\,334 \cdot 2^{23} \text{ counts}} = \frac{1.255\,292\,7e-6 \frac{V}{count}}{Sensitivity}$$



Example, 1000 V/m/s sensor

$$LSB = \frac{\frac{10V}{1000 \frac{V}{m/s}}}{0.949\,653\,334 \cdot 2^{23}} = \frac{1.255\,292\,7e-6 \frac{V}{count}}{1000 \frac{V}{m/s}} = 1.255\,292\,7e-9 \frac{m}{s} / count$$

9.3.4 Channel Naming

The naming of the channels is organised as following: all internal sensors start with **INT-ADC**, all external sensors with **EXT-ADC**.

xxx-ADC-Syy-Czz

xxx	Source	INT EXT	Internal Sensor External Sensor
yy	Sensor	3ch: S01 6ch: S01,S02	
zz	Channel	C01 ... C03	

For example if there are two external sensors connected, the following channels are available:

- | | |
|-----------------|-----------------|
| EXT-ADC-S01-C01 | EXT-ADC-S02-C01 |
| EXT-ADC-S01-C02 | EXT-ADC-S02-C02 |
| EXT-ADC-S02-C03 | EXT-ADC-S02-C03 |

9.4 Configuration of Data Streams

9.4.1 In the Web Interface or by GeoDAS

- In the field **Configuration** → **Number of Output Streams** the total number of output streams must be configured first so that the **Stream Parameters** menu appears.

The screenshot shows the 'Configuration Manager' interface. The 'Main menu' section contains several configuration fields. The 'Number of Output Streams' field is highlighted with a red box and contains the value '1'. Below it, the 'Stream Parameters' field is also highlighted with a red box and contains a '>>' button. Other fields include 'Station description' (GeoSIG Station), 'Station code' (GSGMS), 'Location description' (Default location), 'Seismic network code' (GS), 'Number of Channels' (3), 'Number of Trigger Sets' (1), 'Number of Preset Triggers' (0), 'Channel Parameters', 'Trigger Parameters', 'File Storage and Policy', 'Communication Parameters', 'Miscellaneous Parameters', 'Sensors and Virtual Channels', 'GeoSIG Options', and 'Time synchronization'. At the bottom, there are buttons for 'Back', 'Load from Device', 'Save Changes', and 'Apply and Restart'.

Figure 53: Configure number of Output Streams

- Go to **Configuration** → **Stream Parameters** to edit the stream parameters. See Table 9 for additional information.

The screenshot shows the 'Stream Parameters' configuration page. The 'Main menu | Stream' section contains several configuration fields. The 'Stream name' field contains 'Stream_1'. The 'Stream type' field is a dropdown menu set to 'GSBU'. The 'Port configuration' field contains a '>>' button. The 'Channels in the stream' field contains '3'. The 'List of streamed channels' field contains a '>>' button. The 'Data frames per packet' field contains '5'. The 'CRC32 protected packets' field is a checkbox that is unchecked. The 'Number of padding bytes' field contains '0'. At the bottom, there are buttons for 'Back', 'Load from Device', 'Save Changes', and 'Apply and Restart'.

Figure 54: Edit Stream Parameters

9.4.2 Via Local Serial Console

- Press **'F'** to select the *Number of Output Streams*. One output stream can have several channels.

```
Configuration
A) Station description ..... GeoSIG Station
B) Station code ..... GSGMS
C) Location description ..... Default location
D) Seismic network code ..... GS
E) Number of Channels ..... 3
F) Number of Output Streams ..... 1
G) Number of Trigger Sets ..... 1
H) Number of Preset Triggers ..... 0
I) Channel Parameters ..... ->
J) Stream Parameters ..... ->
K) Trigger Parameters ..... ->
M) File Storage and Policy ..... ->
N) Communication Parameters ..... ->
O) Miscellaneous Parameters ..... ->
S) GeoSIG Options ..... ->
T) Time synchronization ..... ->
```

- Press **'J'** to get to the *Stream Parameters* menu to adjust the settings of the output streams. The following menu appears:

```
Configuration | Stream
A) Stream name ..... Stream_1
B) Stream type ..... GSBU
C) Port configuration ..... ->
D) Channels in the stream ..... 3
E) List of streamed channels ... ->
F) Data frames per packet ..... 5 (0x05)
G) CRC32 protected packets ..... No
H) Number of padding bytes ..... 0 (0x00)
```

- Each output stream can be adjusted according to your wishes. To change the output stream press **'+'** or **'-'**. The following parameters can be adjusted:

'+' and '-' can be used to change between the channels			
Stream name	User selectable	Name of the output stream	
Stream type	GSBU	Streaming possibly in GSBUS format only	
Port configuration	Communication Port	TCP/IP	Streaming over the network
	Protocol	TCP(SERVER)	GeoDAS software or any other client supporting the selected protocol connects to the IP address configured under 'IP Address' for data streaming
	Network Port	User selectable	Server port listening for incoming connections
	Baud Rate	1200 2400 4800 9600 19200 38400 57600 115200	Baud rate of the serial data stream. Make sure that the serial port of the computer is configured to the same baud rate.
Channels in the stream	User selectable	Number of channels which should be streamed	
List of streamed channels	'+' and '-' can be used to change the channels		
	Assigned channel name	User selectable	Depending on the number of channels, for every channel a different source can be selected; the source can be selected by pressing ' A '.
	Data frames per packet	User selectable	Specifies the packet length of the streams (one data frame is equal to 200 ms). For example if ' 5 ' is selected, then every second a packet with the last second of data will be sent.
	CRC32 protected packets	Yes No	Enable CRC32 protection for the stream Disable CRC32 protection for the stream
	Number of padding bytes	User selectable	Add the specified number of padding bytes to the stream

Table 9: Data streaming configuration menu structure

9.4.3 Set up of Data Streams

This chapter will describe how to set up an instrument for data streaming.


9.4.3.1 In the Web Interface or by GeoDAS

- Connect to the Web Interface and configure the number of the Data Streams in the field **Configuration** → **Number of Output Streams**. One output stream can have several channels.
- Go to **Configuration** → **Stream Parameters** to adjust the settings of the output streams.

9.4.3.2 Via Local Serial Console


- Connect to the instrument and press **'F'** to select the *Number of Output Streams*. One output stream can have several channels.
- Press **'J'** to get to the *Stream Parameters* menu to adjust the settings of the output streams.
- Adjust the settings according to chapter 9.4. Carefully select the settings in the *Port Configuration*. If you want to stream over Ethernet, choose **TCP/IP** and **TCP (Server)**.

```
Configuration | Stream | Port
A) Communication port ... TCP/IP
C) Protocol ..... TCP (Server)
E) Network port ..... 4001 (OxFA1)
```

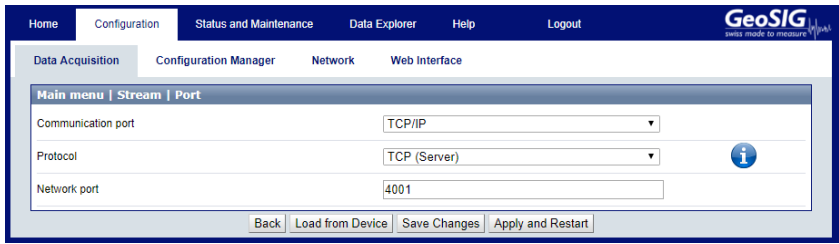

- If you want to stream over the SERIAL port on the front of the instrument, choose **ttyS03**.

```
Configuration | Stream | Port
A) Communication port ... ttyS03
B) Baud rate ..... 115200
```

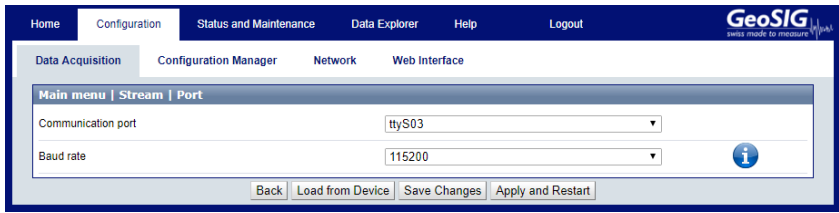

- Open **GeoDAS** and go to the menu **Settings** → **Channels of Digitizers...** The following window appears:

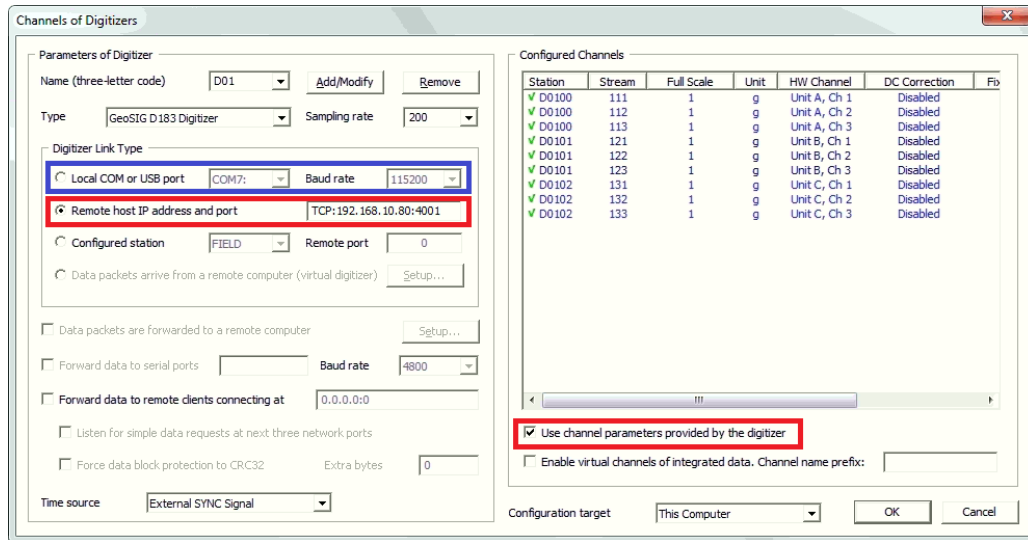


Figure 55: Channels of Digitizers

- Adjust the **Name**, choose any three-letter code for the data stream
- Select as **Type** the **GeoSIG Packet Digitizer**
- Press **Add/Modify**
- Make sure the selected **Sample rate** is the same as in the instrument.
- Choose either the **Local COM port** (if connected over RS-232) or the **Remote host IP address and port** (if connected over Ethernet). The instrument's IP address must be known.
- Check the flag **Use channel parameters provided by the digitizer**.
- Press **OK**.
- After a restart of **GeoDAS**, the window **Stations: Data Streams** appears:

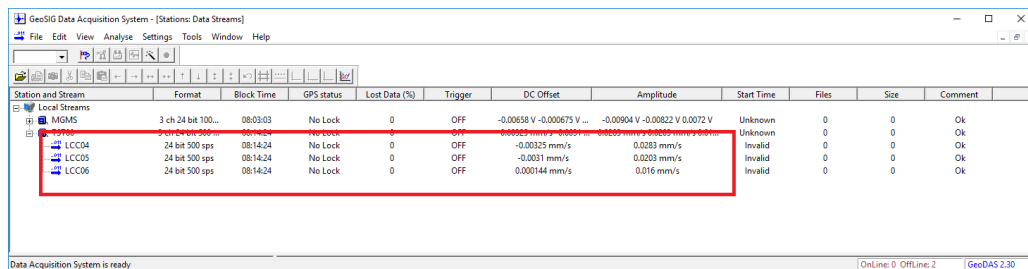


Figure 56: Stations: Data Streams

- To view the data make a right click on the station name (here TST00) and select **Data Monitor**

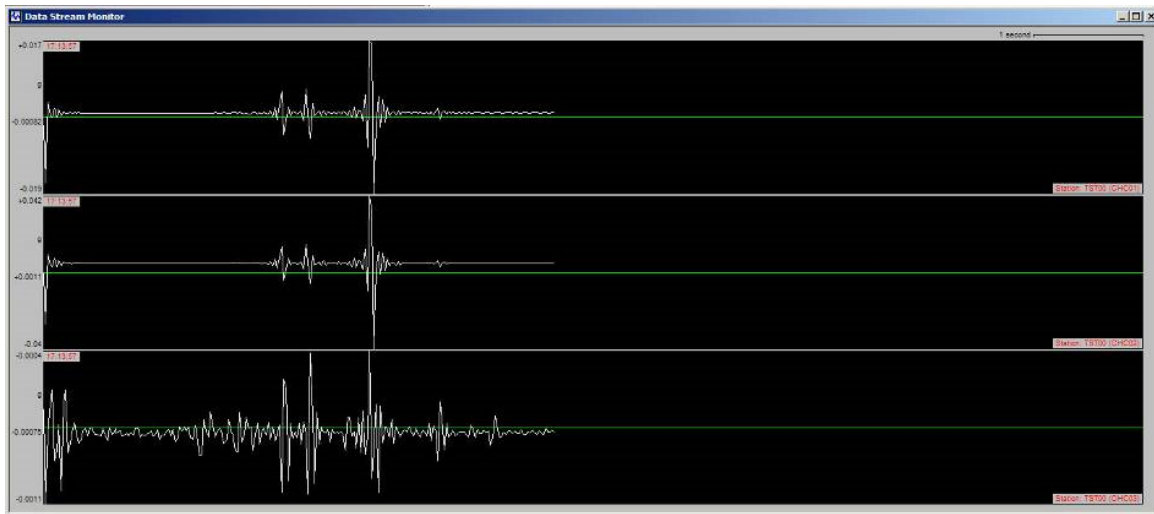


Figure 57: Data stream window

9.5 Trigger Settings

The instrument allows having several triggers with independent sources in parallel.

9.5.1 In the Web Interface or by GeoDAS

- Go to **Configuration** → **Number of Trigger Sets** and configure the number of the desired Trigger Sets.

The screenshot shows the GeoSIG web interface configuration page. The top navigation bar includes 'Home', 'Configuration', 'Status and Maintenance', 'Data Explorer', 'Help', and 'Logout'. Below this, there are tabs for 'Data Acquisition', 'Configuration Manager', 'Network', and 'Web Interface'. The main content area is titled 'Main menu' and contains a list of configuration items. The 'Number of Trigger Sets' item is highlighted with a red box, showing a value of '2'. Below it, the 'Trigger Parameters' item is also highlighted with a red box, showing a '>>' button. Other items include 'Station description', 'Station code', 'Location description', 'Seismic network code', 'Number of Channels', 'Number of Output Streams', 'Number of Preset Triggers', 'Channel Parameters', 'Stream Parameters', 'File Storage and Policy', 'Communication Parameters', 'Miscellaneous Parameters', 'Sensors and Virtual Channels', 'GeoSIG Options', and 'Time synchronization'. At the bottom of the page, there are buttons for 'Back', 'Load from Device', 'Save Changes', and 'Apply and Restart'.

Configuration Item	Value / Action
Station description	GeoSIG Station
Station code	GSGMS
Location description	Default location
Seismic network code	GS
Number of Channels	3
Number of Output Streams	1
Number of Trigger Sets	2
Number of Preset Triggers	0
Channel Parameters	>>
Stream Parameters	>>
Trigger Parameters	>>
File Storage and Policy	>>
Communication Parameters	>>
Miscellaneous Parameters	>>
Sensors and Virtual Channels	>>
GeoSIG Options	>>
Time synchronization	>>

Figure 58: Configure number of trigger sets

- To edit a trigger go to **Configuration** → **Trigger Parameters**. See Table 10 for additional information.

The screenshot shows the GeoSIG Configuration Manager interface. At the top, there are navigation tabs: Home, Configuration (selected), Status and Maintenance, Data Explorer, Help, and Logout. Below these are sub-tabs: Data Acquisition, Configuration Manager (selected), Network, and Web Interface. The main content area features a table with the following data:

No	Triggerset name	Trigger source	Trigger time frame, sec	Count trigger votes by	Event recording
1	Trigger1	Local triggers	3	Channels	Yes
2	Trigger2	Local triggers	3	Channels	Yes

Below the table, a text block states: "The above table displays several main parameters. Click a row to select it. Hold the Ctrl button to select multiple rows. The last clicked row is displayed in bold and parameters of the related item are displayed in the panel below. Modification of any parameter is applied to all selected rows".

The main configuration panel is titled "Main menu | Triggerset 1 of 2" and contains the following parameters:

- Triggerset name: Trigger1
- Trigger source: Local triggers
- Trigger time frame, sec: 3
- Count trigger votes by: Channels
- Minimum number of votes: 1
- Monitored channels: 3
- Trigger channel settings: >>
- Event recording:
- Preevent, seconds: 5
- Postevent, seconds: 5
- Maximum event duration, seconds: 30
- Stored channels: 6
- List of stored channels: >>
- Contribute to network triggers:

At the bottom of the panel, there are four buttons: Back, Load from Device, Save Changes, and Apply and Restart.

Figure 59: Edit Trigger Parameters

9.5.2 Via Local Serial Console

- Press **'G'** to select the *Number of Trigger Sets*

```
Configuration
A) Station description ..... GeoSIG Station
B) Station code ..... GSGMS
C) Location description ..... Default location
D) Seismic network code ..... GS
E) Number of Channels ..... 3
F) Number of Output Streams ..... 1
G) Number of Trigger Sets ..... 1
H) Number of Preset Triggers ..... 0
I) Channel Parameters ..... ->
J) Stream Parameters ..... ->
K) Trigger Parameters ..... ->
M) File Storage and Policy ..... ->
N) Communication Parameters ..... ->
O) Miscellaneous Parameters ..... ->
S) GeoSIG Options ..... ->
T) Time synchronization ..... ->
```

- Press **'K'** to get to the *Trigger Parameters* menu to adjust the settings of the triggers. The following menu appears. In case the number of trigger sets is set to '0' this menu can not be selected.

```
Configuration | Triggerset
A) Triggerset name ..... Trigger1
B) Event recording ..... No
D) Alarm activation ..... No
E) SMS Alarm Configuration ..... No
I) Trigger time frame, sec ..... 3 (0x03)
K) Monitored channels ..... 3
L) Trigger settings ..... ->
O) Be a source of network triggers (received from LAN) ... No
P) Activate on network triggers (received from LAN) ..... No
Q) Be a source of network triggers (Interconnection) ..... No
R) Activate on network triggers (Interconnection) ..... No
```

- Each trigger set can be adjusted according to your wishes. To change the trigger set press **'+'** or **'-'**. The following parameters can be adjusted:

'+' and '-' can be used to change between the channels				
Triggerset name	User selectable	Name of the trigger set		
Trigger time frame, sec	User selectable	See chapter 9.5.5 for details		
Trigger source	Network voting logic Local triggers	Choose the trigger source		
Support triggers through Interconnection	Yes No	This recorder will broadcast a Network Trigger Alert (in case the instrument is interconnected over RS-485 with other instruments) as soon as this triggerset becomes active. No trigger through interconnection		
Serial numbers of networked instruments	User selectable	Whitespace or comma separated list of instruments which contribute to the Network voting logic.		
Contribute to network triggers	User selectable	If this option is active, this recorder will broadcast a Network Trigger Alert		
Monitored channels	User selectable	Number of channels which will be monitored by the selected trigger set		
Count trigger votes by	Channels Channel weight Sensor Station	Choose one trigger vote in this list		
Minimum number of votes	User selectable	Define the number of incoming network triggers of the same name that have to be observed in order to make this device trigger		
Trigger channel settings	Assigned channel name	User selectable	Configure the first Data Source for this channel.	
	Trigger filter	Yes	Trigger filter is used as defined under Filter Parameters	
		No	Trigger filter is not used	
	Filter parameters	Filter type	Highpass Lowpass Bandpass	A Highpass will attenuate all frequencies below a defined frequency. A Lowpass will attenuate all frequencies above a defined frequency. A Bandpass will attenuate all frequencies below a defined frequency and above a defined frequency.
		Filter order	User selectable	Defines how much the attenuation increases per decade below the Low Frequency Corner respectively above the High Frequency Corner. The attenuation increases by the filter order multiplied with 20 dB. User can choose between these values: [2-4-6-8-10-12]
		Flow, Hz	User selectable	The Low Frequency Corner of the filter is the point where the attenuation is 3 dB. Below this frequency, attenuation will increase depending on the Filter Type
Fhigh, Hz		User selectable	The High Frequency Corner of the filter is the point where the attenuation is 3 dB. Above this frequency, attenuation will increase depending on the Filter Type	

Trigger channel settings (continued)	Level Trigger	Yes No	Level trigger is enabled Level trigger is disabled
	Threshold (channel units)	User selectable	As soon the data is above the configured threshold the trigger is activated
	Min. level exceedance, sec	User selectable	The threshold or STA/LTA ratio has to be exceeded at least for the configured time in seconds to active the trigger
	STA/LTA Trigger	Yes No	STA/LTA trigger is enabled STA/LTA trigger is disabled
	STA time frame, sec	User selectable	Length of STA time window, seconds
	LTA time frame, sec	User selectable	Length of LTA time window, seconds
	STA/LTA trigger ratio	User selectable	As soon the data is above the configured STA/LTA ratio the trigger is activated
	STA/LTA dettrigger ratio	User selectable	As soon the data is below the configured STA/LTA ratio again the trigger is deactivated
	Min. ratio exceedance, sec	User selectable	The threshold or STA/LTA ratio has to be exceeded at least for the configured time in seconds to active the trigger
	Clamp LTA during event	Yes No	As soon the data is below the configured STA/LTA ratio again the trigger is deactivated
	Channel trigger weight, %	User selectable	See chapter 9.5.4 for details
Event recording		Yes No	An event file will be recorded on a trigger No event file will be recorded on a trigger
	Pre-event	User selectable	Pre-Event time, seconds
	Post-event	User selectable	Post-Event time, seconds
	Max. event duration, sec	User selectable	Maximum duration of an event in seconds. After this time, an event file will be closed
Event Processing		PGM parameters No	An event file will be processed and a summary report will be created The event file will not be processed
Stored channels		User selectable	Number of channels, which should be stored into an event file in case of a trigger
List of stored channels	'+' and '-' can be used to change the channels		
	Assigned channel name	User selectable	Depending on the number of channels, for every channel a different source can be selected; the source can be selected by pressing 'A'.

Alarm activation (Only visible in case alarm relay card is installed)		Yes No	An alarm relay will be activated on a trigger No alarm relay will be activated on a trigger This option has an effect only in case the instrument has internal alarm relays
Alarm output to activate		AL1, AL2, AL3*, AL4*	select the alarm output you want to activate in case of a trigger. (*) Not available in all models
Alarm deactivation delay		User selectable	Time in seconds the alarm relay deactivates again after the signal falls below the trigger threshold. Can be compared to the post event time for the recording
Alarm acknowledge		User selectable	Digital input to acknowledge and reset the alarm. See appendix A
Send SOH upon alarm activation		Yes No	Defines whether a SOH information will be created and transferred to the server upon alarm deactivation
SMS Alarm		Yes No	An SMS will be sent upon a trigger No SMS will be sent upon a trigger
(This option is available only in case an external cellular modem is connected to the instrument.)			
Number of Recipients		User selectable	The number of recipients of the SMS alarm can be selected
SMS Alarm Configuration	'+' and '-' can be used to change the channels		
	Recipient	User selectable	Phone number of the recipient. Use numbers only, no '+' or any other character allowed. The recipient can be selected by pressing 'A'.

Table 10: Trigger settings configuration menu structure

9.5.3 STA/LTA trigger

The STA/LTA (Short Time Average/Long Time Average) ratio trigger computes the short term and long term averages of the input (sensor) signal. When the STA exceeds a pre-selected multiple of the LTA (STA/LTA ratio), the instrument begins to record data. The advantage of this trigger type is that the trigger sensitivity adapts to the seismic background signal. With an increasing noise level the trigger sensitivity decreases. The probability of having a false trigger due to noise will be minimised if a long STA averaging time is selected. Obviously, the STA should not be chosen longer than the shortest event of interest. In addition, the STA should be shorter than the pre-event time. If not, the initial portion of an event may not be recorded. During the steady state of the system, the STA and the LTA will be nearly equal. The shorter STA averaging period, the more quickly it will change with the input.

9.5.4 Trigger Weight

To activate a trigger the total trigger weight must be equal or bigger than 100%. By default all channels have a weight of 100%, which means if a threshold is exceeded on one channel only, then the trigger is activated. If the trigger weight were reduced on all channels to 50%, then at least on two channels the threshold would have to be exceeded to reach 100% (50% + 50%) and activate the trigger. See Figure 60 for details.

9.5.5 Trigger Time Frame

Depending on the settings, it can be that threshold must be exceeded on two or more channels to activate the trigger. The time of the threshold-exceedances might be slightly different on the channels, especially if two

sensors are connected and installed on different places. To make sure that even due to this time difference the trigger is working a *trigger time frame* can be defined. See Figure 60 for details.

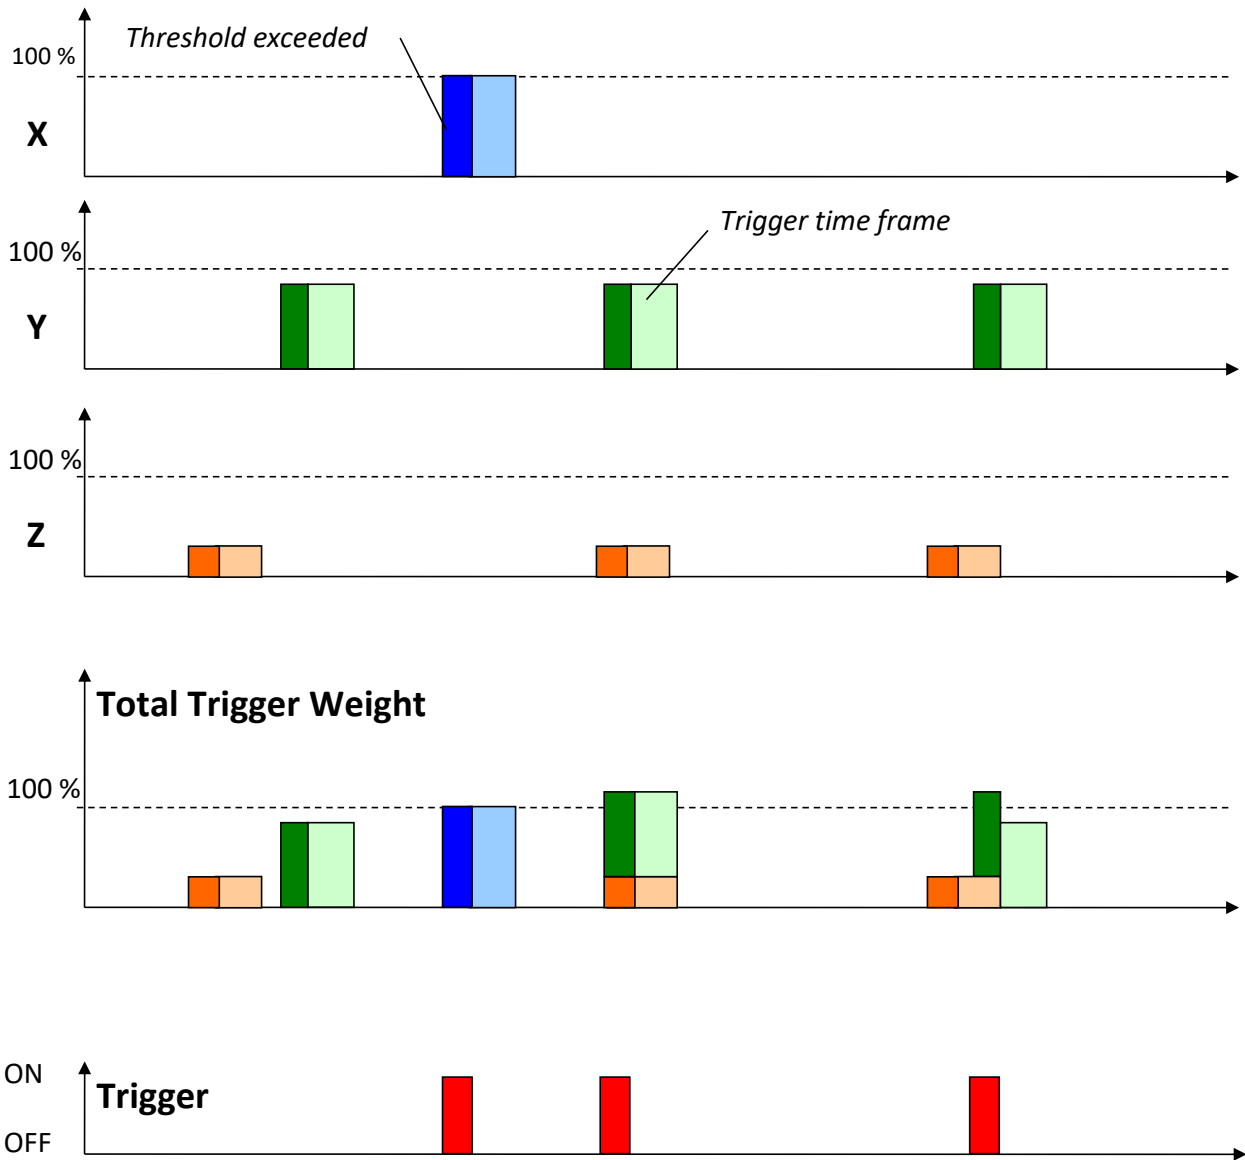


Figure 60: Overview of trigger weight and trigger time frame

9.6 Preset Trigger Settings

The instrument allows having several predefined triggers, e.g. time triggers in parallel.

9.6.1 In the Web Interface or by GeoDAS

- In the field **Configuration** → **Number of Preset Triggers** the total number of the preset triggers must be configured first so that the **Parameters of Preset Triggers** menu appears.

Main menu		
Station description	<input type="text" value="GeoSIG Station"/>	
Station code	<input type="text" value="GSGMS"/>	
Location description	<input type="text" value="Default location"/>	
Seismic network code	<input type="text" value="GS"/>	
Number of Channels	<input type="text" value="3"/>	
Number of Output Streams	<input type="text" value="1"/>	
Number of Trigger Sets	<input type="text" value="1"/>	
Number of Preset Triggers	<input type="text" value="2"/>	
Channel Parameters	<input type="button" value=">>"/>	
Stream Parameters	<input type="button" value=">>"/>	
Trigger Parameters	<input type="button" value=">>"/>	
Parameters of Preset Triggers	<input type="button" value=">>"/>	
File Storage and Policy	<input type="button" value=">>"/>	
Communication Parameters	<input type="button" value=">>"/>	
Miscellaneous Parameters	<input type="button" value=">>"/>	
Sensors and Virtual Channels	<input type="button" value=">>"/>	
GeoSIG Options	<input type="button" value=">>"/>	
Time synchronization	<input type="button" value=">>"/>	

Back Load from Device Save Changes Apply and Restart

Figure 61: Configure number of Preset Triggers

- Go to **Configuration** → **Parameters of Preset Triggers** to adjust the parameters of the preset triggers. See Table 11 for additional information.

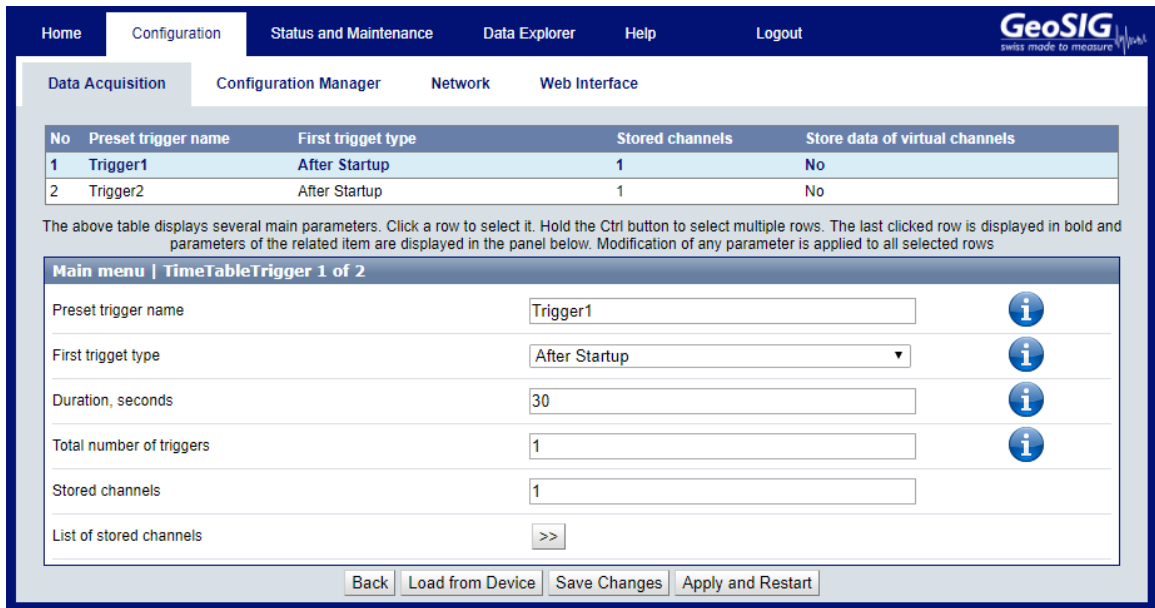


Figure 62: Edit Preset Triggers

9.6.2 Via Local Serial Console

- Press **'H'** to select the Number of Preset Triggers

```
Configuration
A) Station description ..... GeoSIG Station
B) Station code ..... GSGMS
C) Location description ..... Default location
D) Seismic network code ..... GS
E) Number of Channels ..... 3
F) Number of Output Streams ..... 1
G) Number of Trigger Sets ..... 1
H) Number of Preset Triggers ..... 1
I) Channel Parameters ..... ->
J) Stream Parameters ..... ->
K) Trigger Parameters ..... ->
L) Parameters of Preset Triggers ... ->
M) File Storage and Policy ..... ->
N) Communication Parameters ..... ->
O) Miscellaneous Parameters ..... ->
S) GeoSIG Options ..... ->
T) Time synchronization ..... ->
```

- Press **'L'** to get to the *Parameters of Preset Triggers* menu to adjust the settings of the preset triggers. The following menu appears only if the *number of preset triggers* is higher than **'0'**.

```
Configuration | TimeTableTrigger
A) Preset trigger name ..... Trigger1
B) First trigger type ..... After Startup
H) Duration, seconds ..... 30 (0x1E)
I) Total number of triggers ..... 1 (0x01)
O) Stored channels ..... 1
P) List of stored channels ..... ->
```

- Each trigger set can be adjusted according to your wishes. To change the preset trigger set press **'+'** or **'-'**. The following parameters can be adjusted:

'+' and '-' can be used to change the preset triggers			
Preset trigger name	User selectable	Name of the preset trigger set	
First trigger type	Manual Trigger	A trigger is activated/stopped by the user command TRIGGERNOW/STOPTRIGGER sent either from the console or remotely from a server	
	After Event	A trigger is activated after recording of any event file	
	After Startup	First trigger is activated after the instrument startup	
	Date and Time	First trigger is activated at the defined date/time	
	Hardware Trigger	The trigger is activated by hardware	
	Duration, sec	User selectable	The duration the scheduled trigger will be active
	Delay after event, sec	User selectable	If After Event is selected, then the time between the end of the event to the beginning of the activation of the preset trigger can be configured
	Pre-event, sec	User selectable	If After Event is selected, duration of the pre-event
	Post-event, sec	User selectable	If After Event is selected, duration of the post-event
	First trigger time, year	User selectable	Date and time of the first trigger
First trigger time, month	User selectable		
First trigger time, day	User selectable		
First trigger time, hour	User selectable		
First trigger time, minute	User selectable		
Total number of triggers	User selectable	After reaching the configured number of triggers the preset trigger will not be activated anymore	
Stored channels	User selectable	Number of channels which should be stored into an event file in case of a trigger	
List of stored channels	'+' and '-' can be used to change the preset triggers		
	Assigned channel name	User selectable	Depending on the number of stored channels different sources can be selected. Select the source by pressing 'A' .

Table 11: Preset trigger configuration menu structure

9.7 File Storage and Policy

It can be configured in the instrument how all the files should be treated.

9.7.1 In the Web Interface or by GeoDAS

- Go to **Configuration** → **File Storage and Policy**

The screenshot shows the GeoSIG web interface with the 'Configuration' menu selected. The 'Main menu' section contains various configuration options, each with a text input field and an information icon (i). The 'File Storage and Policy' option is highlighted with a red box. Below the main menu, there are buttons for 'Back', 'Load from Device', 'Save Changes', and 'Apply and Restart'.

Parameter	Value	Info Icon
Station description	GeoSIG Station	Yes
Station code	GSGMS	Yes
Location description	Default location	Yes
Seismic network code	GS	Yes
Number of Channels	3	No
Number of Output Streams	0	No
Number of Trigger Sets	1	No
Number of Preset Triggers	0	No
Channel Parameters	>>	No
Trigger Parameters	>>	No
File Storage and Policy	>>	No
Communication Parameters	>>	No
Miscellaneous Parameters	>>	No
Sensors and Virtual Channels	>>	No
GeoSIG Options	>>	No
Time synchronization	>>	No

Figure 63: File Storage Settings

- Parameters for the following file types can be configured (see Filetypes in Table 12)
 - SOH - State of health information and requested data files
 - LOG - System log files
 - TRG - Events and PGM files
 - RBF - Ringbuffer files
 - MAN - Scheduled manual recordings
 - MSC - Miscellaneous files
- See Table 12 for more information about the parameters which can be configured.

9.7.2 Via Local Serial Console

```
Configuration
A) Station description ..... GeoSIG Station
B) Station code ..... GSGMS
C) Location description ..... Default location
D) Seismic network code ..... GS
F) Number of Output Streams ..... 1
G) Number of Trigger Sets ..... 1
H) Number of Preset Triggers ..... 1
I) Channel Parameters ..... ->
J) Stream Parameters ..... ->
K) Trigger Parameters ..... ->
L) Parameters of Preset Triggers ... ->
M) File Storage and Policy ..... ->
N) Communication Parameters ..... ->
O) Miscellaneous Parameters ..... ->
S) GeoSIG Options ..... ->
T) Time synchronization ..... ->
```

- To adjust the settings of the file storage, press **'M'**; the *File Storage and Policy* menu will appear.

```
Configuration | File Storage
A) System reserved space, Mb ..... 12 (0x0C)
B) Length of one RB file, minutes ... 10 (0x0A)
C) SOH and requested data files ..... ->
D) System log files ..... ->
E) Events and PGM files ..... ->
F) Ringbuffer files ..... ->
G) Scheduled manual recordings ..... ->
H) Miscellaneous files ..... ->
```

- Parameters for the following file types can be configured (see Filetypes in Table 12)
 - SOH - State of health information and requested data files
 - LOG - System log files
 - TRG - Events and PGM files
 - RBF - Ringbuffer files
 - MAN - Scheduled manual recordings
 - MSC - Miscellaneous files
- See Table 12 for more information about the parameters which can be configured.

	System reserved space	<i>User selectable</i>	Amount of memory reserved for the operating system in [Mb]. Keep 12 Mb by default.
	Length of one RB file	<i>User selectable</i>	Permanent data will be stored in ringbuffer files; here the length of one ringbuffer file in minutes can be specified. After this time the file will be closed and a new one started.
Filetypes	Disk space quota	<i>User selectable</i>	Reserved memory on the SD/CF-Card for the SOH files in [%]
	If over quota	Delete oldest files	In case the reserved memory is full the oldest files will be deleted first
	Life time	<i>User selectable</i>	After the configured time in [days] the files will be deleted from the SD/CF-Card
	Transfer priority	Never Transfer Low Mid High Highest	In case a lot of files have to be transferred, the priority of the file upload can be configured here. If Never Transfer is configured, then no files will be uploaded.
	Transfer order	Newest first Oldest first	Most recent files are transferred first Most old files are transferred first
	Delete transferred	Yes No	Files will be deleted after upload to the server Files will be not deleted after upload to the server

Table 12: File Storage and Policies menu structure

- Additionally the system log files can be compressed. This can be separately enabled under the menu point D) *System log files*:

Compress files	Yes No	Files will be sent gzip-compressed (.gz) Original text files will be sent (default)
-----------------------	-------------------------	--

- State of health and event files have two more configuration options:

Transfer protocol	Standard (Custom)	Default option. This protocol also is used to transfer any other types of files.
	HTTPS	This option can be used to upload data files to the HTTPS servers only. Downloads are not supported.
Directory for uploads	User selectable	Name of the directory on the HTTPS server where uploaded files will be placed

9.8 Communication Parameters

This chapter explains how to set up the server parameters.

9.8.1 In the Web Interface or by GeoDAS

- Go to **Configuration** → **Communication Parameters**

The screenshot shows the GeoSIG web interface. The top navigation bar includes 'Home', 'Configuration', 'Status and Maintenance', 'Data Explorer', 'Help', and 'Logout'. Below this, there are sub-tabs: 'Data Acquisition', 'Configuration Manager', 'Network', and 'Web Interface'. The 'Configuration Manager' tab is active, displaying a 'Main menu' with various configuration options. The 'Communication Parameters' option is highlighted with a red box. Below the main menu, there are buttons for 'Back', 'Load from Device', 'Save Changes', and 'Apply and Restart'.

Parameter	Value	Info Icon
Station description	GeoSIG Station	Yes
Station code	GSGMS	Yes
Location description	Default location	Yes
Seismic network code	GS	Yes
Number of Channels	3	No
Number of Output Streams	0	No
Number of Trigger Sets	2	No
Number of Preset Triggers	0	No
Channel Parameters	>>	No
Trigger Parameters	>>	No
File Storage and Policy	>>	No
Communication Parameters	>>	No
Miscellaneous Parameters	>>	No
Sensors and Virtual Channels	>>	No
GeoSIG Options	>>	No
Time synchronization	>>	No

Figure 64: Communication Parameters

- Tick the flag **Contact remote servers** to configure a connection to a remote server.
- Configure the number of servers to contact in the field **Number of servers**
- Then go to **Server Parameters** to adjust the parameters as shown in the Table 13.
- In case the instrument should act as Server for other GMS instruments, tick the flag **Server mode for other instruments** and follow the steps as described in chapter 9.8.2.1

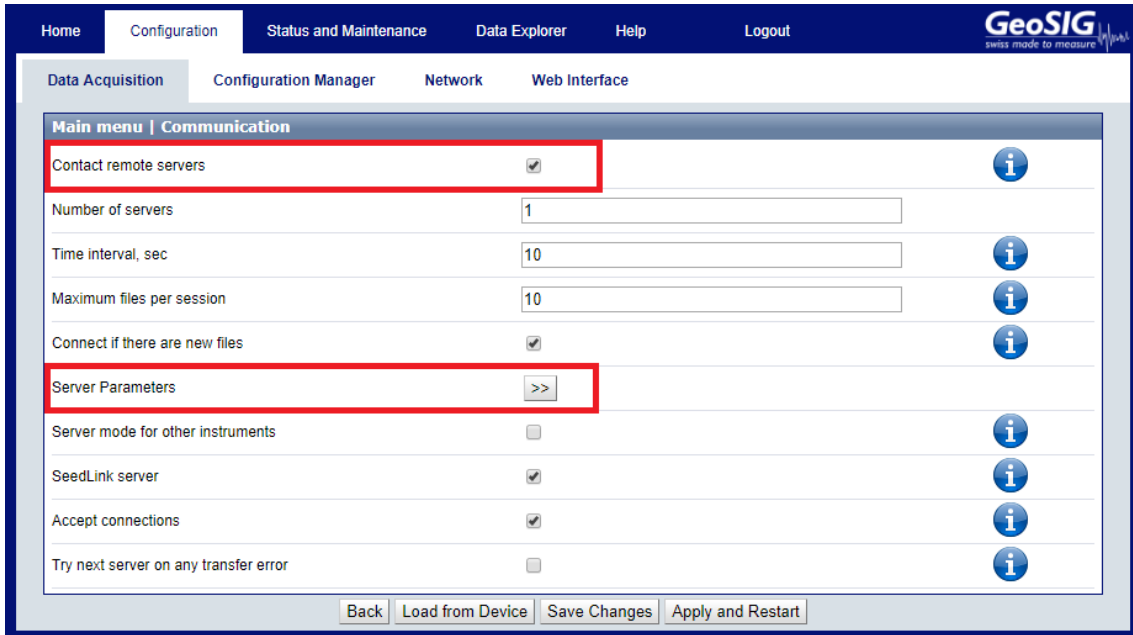


Figure 65: Edit Communication Parameters

9.8.2 Via Local Serial Console

```

Configuration
A) Station description ..... GeoSIG Station
B) Station code ..... GSGMS
C) Location description ..... Default location
D) Seismic network code ..... GS
E) Number of Channels ..... 3
F) Number of Output Streams ..... 1
G) Number of Trigger Sets ..... 1
H) Number of Preset Triggers ..... 0
I) Channel Parameters ..... ->
J) Stream Parameters ..... ->
K) Trigger Parameters ..... ->
M) File Storage and Policy ..... ->
N) Communication Parameters ..... ->
O) Miscellaneous Parameters ..... ->
S) GeoSIG Options ..... ->
T) Time synchronization ..... ->
    
```

- Press **'N'** to get to the *Communication Parameters* menu to adjust the settings of the file storage. The following menu appears:

```

Configuration | Communication
A) Contact remote servers ..... Yes
B) Number of servers ..... 1
C) Time interval, sec ..... 20 (0x14)
D) Maximum files per session ..... 10 (0x0A)
E) Connect if there are new files ..... Yes
G) Server Parameters ..... ->
H) Server mode for other instruments ... No
M) SeedLink server ..... Yes
N) Accept connections ..... Yes
    
```

- The following parameters can be adjusted:

	Contact remote servers	Yes	The instrument connects to the configured data server(s)
		No	The instrument does not connect to any data servers
	Number of servers	User selectable	Number of data servers. If the instrument cannot connect to the first data server it will connect to the second data server; if this one is down it connects to the third and so on. Scanning of servers stops after first successful connection.
	Time interval, sec	User selectable	Interval of connection to data servers in seconds
	Maximum files per session	User selectable	Maximum number of files, which will be uploaded during one session. Although data servers support concurrent connections, this parameter helps distributing the load of data processing by the server among several instruments.
	Connect if there are new files	Yes	Instrument connects to the server if there are new files recorded and ready to be transmitted.
		No	Instrument connects to the server if there are new files recorded and ready to be transmitted. Instrument does not connect to the server if there are new files. It just connects periodically as defined with the parameter Time interval .
Server Parameters	Server IP Address	User selectable	IP address of the data server
	Protocol	Custom HTTPS	Default protocol of communication This protocol can be selected only if you upload SOH and/or EVT files to HTTPS servers
	Port	User selectable	If Custom: Communication port of the data server
	Transfer timeout, sec	User selectable	Instrument gives up trying to contact the server after the configured timeout in seconds.
	Network triggers	Yes	Triggers are sent to the server for event detection as described in chapter C.2
		No	Triggers are not sent to the server
	Connect through PPP link	Yes	Instrument connects to the data through PPP link
		No	Instrument does not connect to the data server through PPP
	Number of failures to give up	User selectable	Number of trials until giving up
	Keep connected to the server	Yes	Instrument connects to the data through PPP link
		No	
	Server port for permanent links	User selectable	The port which should be used to keep the connection between the server open
Always connect to this server	Yes	Instrument will always try connecting to this server, even if a file has already been delivered to another server	
	No	Disable this function	
Connect failures before network error	User selectable	Number of failure before displays network error	

Server mode for other instruments	Yes	The instrument acts as a data server for other instruments. See chapter 9.8.2.1 for more details	
	No	The instrument does not act as a data server.	
Connect by requests from clients	Yes	Instrument connects to the server if there are new files recorded and ready to be transmitted.	
	No	Instrument doesn't connect to the server if there are new files recorded and ready to be transmitted.	
Port for incoming connections	User selectable	Port for incoming connections. Other instruments have to set the same port under Server parameters	
Secure authentication	Yes	Secure authentication (SSL encryption) enabled.	
	No	Secure authentication (SSL encryption) disabled	
Number of clients	User selectable	Number of clients that this server can used	
Clients Parameters	'+' and '-' can be used to change between the servers		
	Client IP Address	User selectable IP of the client instrument which connects to this instrument.	
	Client serial number	User selectable Serial number of the client instrument. Use 000000 to allow instruments with any serial numbers to connect.	
	Transfer timeout, sec	User selectable Network timeout in seconds.	
	Data forwarding	Yes	Data from the data server will be forwarded to the client instruments and the other way round.
		No	Data will not be forwarded.
Network triggers	Yes	Triggers are sent to the server for event detection as described in chapter C.2	
	No	Triggers are not sent to the server	
SeedLink server	Yes	SeedLink server is enabled for all data channels, and data streams can be received by any SeedLink client from the instrument's IP.	
	No	The instrument does not act as a Seedlink server.	
Accept connections	Yes	Allows GeoDAS to connect to the instrument. Works only if the IP address of the instrument is known and reachable.	
	No	Do not accept connections from new clients	
Try next server on any transfer error	Yes	If Yes, In case of communication error contact the next server out of the list of Configured Servers.	
	No	Don't try to contact the next server	

Table 13: Communication Parameters menu structure

9.8.2.1 Instrument acts in the Server Mode

The instrument can be configured to act as a server. In this case other instruments can upload their files to this instrument. The server-instrument can then forward the data to a main server by another communication medium. For example, two instruments (clients) upload their files to the instrument-server, which forwards the data to a GeoDAS server by the cellular modem.

The serial numbers and IP addresses of all client instruments must be configured in the server so that requests from GeoDAS can be correctly forwarded.



This setup is not recommended, as it creates a big load for the server instrument. Special care must be taken during design and setup. Whenever possible, all instruments shall have a direct communication path to the GeoDAS server.

Server mode		Yes	The instrument acts as a data server for other instruments
		No	The instrument does not act as a data server
Port for incoming connections		<i>User selectable</i>	Port for incoming connections. Other instruments have to set the same port under Server parameters.
Secure authentication		Yes	Secure authentication (SSL encryption) enabled
		No	Secure authentication (SSL encryption) disabled
Client Parameters	'+' and '-' can be used to change between the clients		
	Client IP Address	<i>User selectable</i>	IP address of the client instrument which connects to this instrument
	Client serial number	Custom	Serial number of the client instrument. Use 000000 to allow instruments with any serial numbers to connect
	Transfer timeout	<i>User selectable</i>	Network timeout in seconds
	Data forwarding	Yes	Data from the data server will be forwarded to the client instruments and the other way round.
		No	Data will not be forwarded
	Network triggers	Yes	Network triggers will be sent to the server
No		Network triggers will not be sent to the server	

Table 14: Server Parameters menu structure

9.9 Miscellaneous Parameters

The Baseline Correction, State of Health files, messaging and debugging can be adjusted under this menu.

9.9.1 In the Web Interface or by GeoDAS

- Go to **Configuration** → **Miscellaneous Parameters**

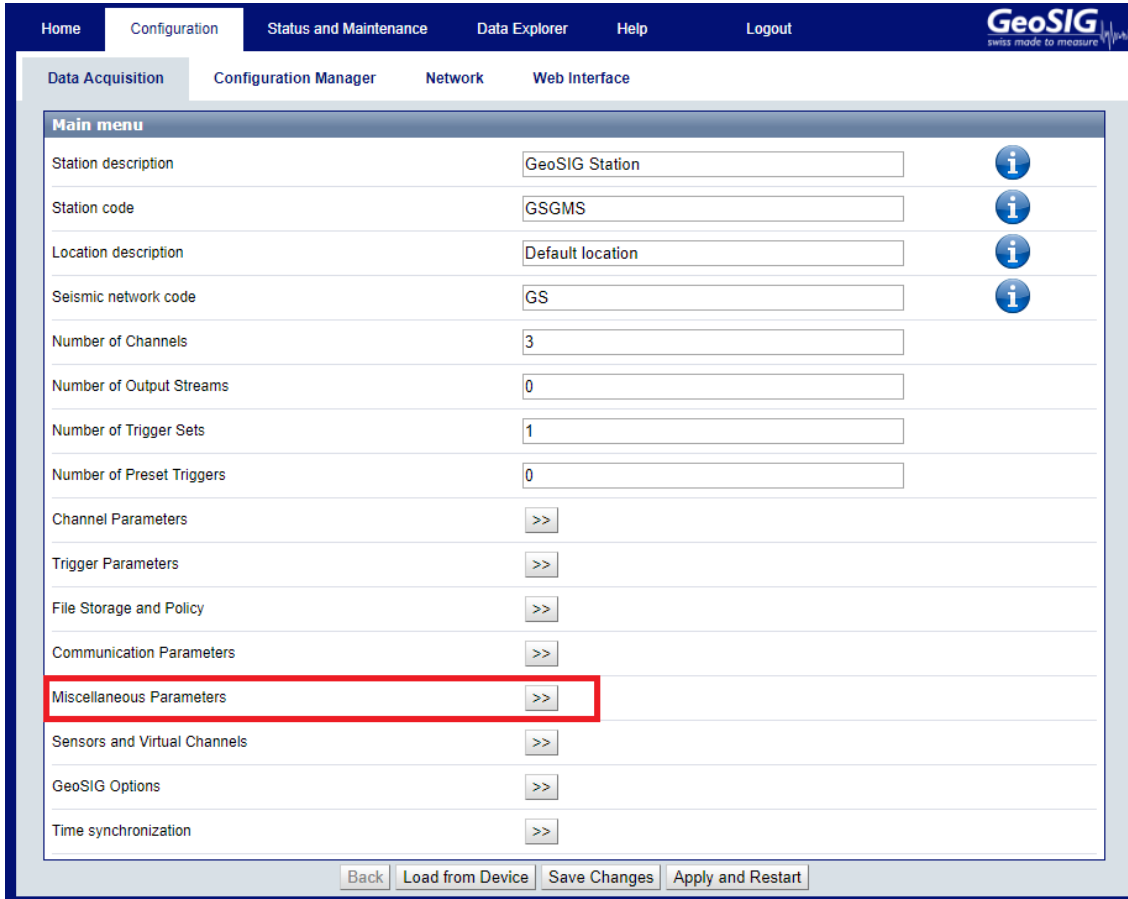


Figure 66: Miscellaneous Parameters

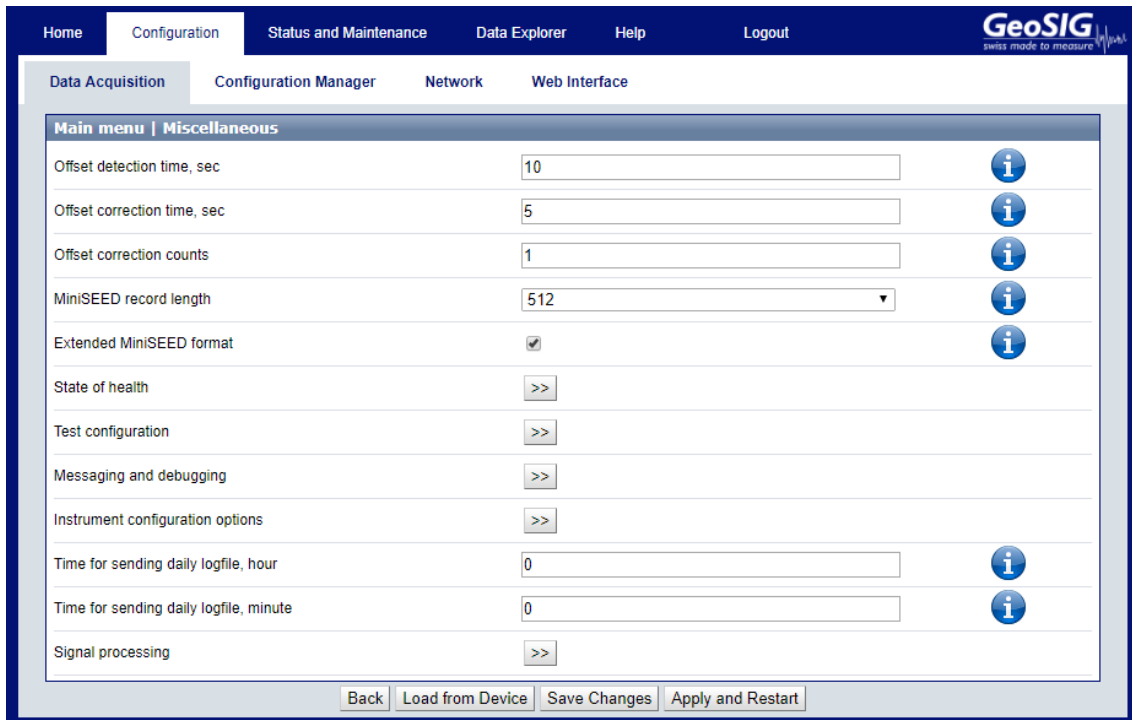


Figure 67: Edit Miscellaneous Parameters

Adjust the parameters as shown in the Table 15.

9.9.2 Via Local Serial Console

```

Configuration
A) Station description ..... GeoSIG Station
B) Station code ..... GSGMS
C) Location description ..... Default location
D) Seismic network code ..... GS
E) Number of Channels ..... 3
F) Number of Output Streams ..... 1
G) Number of Trigger Sets ..... 1
H) Number of Preset Triggers ..... 1
I) Channel Parameters ..... ->
J) Stream Parameters ..... ->
K) Trigger Parameters ..... ->
L) Parameters of Preset Triggers ... ->
M) File Storage and Policy ..... ->
N) Communication Parameters ..... ->
O) Miscellaneous Parameters ..... ->
S) GeoSIG Options ..... ->
T) Time synchronization ..... ->
    
```

- Press 'O' to get to the *Miscellaneous Parameters* menu to adjust time synchronisation, offset detection, and other settings. The following menu appears:

```

Configuration | Miscellaneous
A) Offset detection time, sec ..... 10 (0x0A)
B) Offset correction time, sec ..... 5 (0x05)
C) Offset correction counts ..... 1 (0x01)
D) MiniSEED record length ..... 512
E) Extended MiniSEED format ..... Yes
H) State of health ..... ->
I) Test configuration ..... ->
J) Messaging and debugging ..... ->
K) Instrument configuration options ..... ->
L) Time for sending daily logfile, hour ..... 0 (0x00)
M) Time for sending daily logfile, minute ... 0 (0x00)
S) Signal processing ..... ->
    
```

- The following parameters can be adjusted:

Offset detection time, sec	User selectable	Time in seconds, which the input values is measured after startup to define the offset. This 'static' offset will then compensate all channels with activated offset compensation.
Offset correction time, sec	User selectable	The instrument continuously takes the average over the number of seconds specified. If this value is positive it will subtract the number of Offset Correction Counts defined below. If the value is negative, the Offset Correction Counts will be added to the signals. This is only active for channels where the offset compensation is activated and is used to compensate 'dynamic' offset which changes over time (E.g. because of temperature changes).
Offset correction counts	User selectable	The number of counts which will be added to the signal, respectively removed from the signal, depending on the signum of the continuously calculated average over the Offset Correction Time
MiniSEED record length	User selectable	Length of one data block inside the miniSEED file. In most applications, the default value 512 shall be kept.
Extended MiniSEED format	No Yes (default)	MiniSEED files do not include any additional information. This option shall be used only if you face any problems in reading extended format of miniSEED files with your customized software. MiniSEED files include configuration and state of health information, which is encapsulated into the blockettes 2000. When you open such files with GeoDAS, there is no need to enter LSB factors and units. This feature is supported from GeoDAS version 2.21.
Include SOH information in miniSEED	Yes	Include SOH information in each MiniSEED file as Blockette 2000 record.
	No (default)	Do not include SOH information in each MiniSEED file as Blockette 2000 record.
Include configuration in miniSEED	Yes	Include current config.xml information in each MiniSEED file as Blockette 2000 record
	No (default)	Do not include current config.xml information in each MiniSEED file as Blockette 2000 record

State of health	SOH report type	None Standard	No SOH file will be created SOH files will be created and uploaded to the server according to the settings in chapter 9.7
	SOH reporting interval, days	User selectable	If Standard selected, defines the interval between the SOH reports in days, hours and minutes
	SOH reporting interval, hours	User selectable	
	SOH reporting interval, minutes	User selectable	
	Time of the first SOH report	Startup Random User defined	First SOH report will be created at startup Time of the first SOH is random. This is to avoid all instruments using the network at the same time. First SOH report will be created at the user defined time.
	First SOH report time, hours	User selectable	If <i>User defined</i> is selected, defines the hour and minute of the first SOH report
	First SOH report time, minutes	User selectable	
	Activate alarm on errors or	Yes No	Activates an alarm relay in case of an error. Alarm relay will not be activated in case of an error.
	Activate alarm when system is inactive	Yes No	Alarm relay is activated in case armdas is not running. Alarm relay will not be activated.
	Error and inactivity alarm output	AL1 AL2 AL3 AL4	Select the alarm relay if at least one of the condition above is Yes

State of health (continued)	Activate alarm on errors	Yes	Alarm relay is activated in case armdas is not running.
		No	Alarm relay will not be activated.
	Activate alarm on selected error only	Yes	Selected alarm relay is activated on selected errors only. See below options
		No	Selected alarm relay is activated on all errors.
	Alarm on file-system errors	Yes	Enable the alarm of filesystem errors
		No	Disable the alarm of filesystem errors
	Alarm on memory errors	Yes	Enable the alarm of memory errors
		No	Disable the alarm of memory errors
	Alarm on timing errors	Yes	Enable the alarm of timing errors
		No	Disable the alarm of timing errors
	Alarm on DSP errors	Yes	Enable the alarm of DSP errors
		No	Disable the alarm of DSP errors
	Alarm on network errors	Yes	Enable the alarm of network errors
		No	Disable the alarm of network errors
Alarm on disk errors	Yes	Enable the alarm of disk errors	
	No	Disable the alarm of disk errors	
Alarm on aux errors	Yes	Enable the alarm of aux errors	
	No	Disable the alarm of aux errors	
Alarm on processing errors	Yes	Enable the alarm of processing errors	
	No	Disable the alarm of processing errors	
Alarm on misc hardware errors	Yes	Enable the alarm of misc hardware errors	
	No	Disable the alarm of misc hardware errors	
Monitor state of current loop sensors	Yes	It monitors the sensor offset for its valid range. If sensor offset is outside of its valid range a sensor failure error message will be issued.	
	No	Disable the monitor state of the current loop sensor	
Send SOH on changing error state	Yes	Enable send SOH on changing error state.	
	No	Disable send SOH on changing error state	
Send SOH on changing warning state	Yes	Enable send SOH on changing warning state	
	No	Disable send SOH on changing warning state	

Test Configuration	Type of periodic sensor test	None Pulse	No test pulse is generated Test pulse is generated periodically and automatically, depending on the following settings
	Sensor test interval, days	User selectable	Interval between two sensor tests
	Time of the first test	Startup	First test will be done at start-up, next after the defined interval.
		Random	Time of the first test is random. This is to avoid, that all instruments in a network are doing the test in exactly the same moment and are not able to record events normally at the same time.
		User defined	First test will be done at the user defined time.
	First test report time, hours	User selectable	If <i>User defined</i> is selected, defines the hour and minute of the first test report
	First test report time, minutes	User selectable	
	Activate alarms on sensor test	Normal	An alarm is activated only if an amplitude of the test pulse is above the related threshold.
		Never	The alarms are not activated on tests
		Always	An alarm is activated upon every test.
Record test files	Normal	A file is recorded only if an amplitude of the test pulse is above the trigger threshold.	
	Never	Test files are not recorded	
	Always	A file is recorded upon every test.	
Prefix for names of test files	CAL_ TRG_	Test files will be created with this prefix	

	Console messages	Yes	Enable console message
		No	Disable console message
	Debug: memory allocation	Yes	Enable debug message: memory allocation
		No	Disable debug message: memory allocation
	Debug: system and processes	Yes	Enable debug message: system and processes
		No	Disable debug message: system and processes
Messaging and debugging	Debug: flash memory	Yes	Enable debug message: flash memory
		No	Disable debug message: flash memory
	Debug: configuration	Yes	Enable debug message: configuration
		No	Disable debug message: configuration
	Debug: network links	Yes	Enable debug message: network links
		No	Disable debug message: network links
	Debug: data streams	Yes	Enable debug message: data streams
		No	Disable debug message: data streams
	Debug: data sources	Yes	Enable debug message: data sources
		No	Disable debug message: data sources
	Debug: ring buffers	Yes	Enable debug message: ring buffers
		No	Disable debug message: ring buffers
	Debug: event triggers	Yes	Enable debug message: event triggers
		No	Disable debug message: event triggers
	Debug: time synchronisation	Yes	Enable debug message: time synchronisation
	No	Disable debug message: time synchronisation	
Debug: file manager	Yes	Enable debug message: file manager	
	No	Disable debug message: file manager	
Debug: cryptographic info	Yes	Enable debug message: cryptographic info	
	No	Disable debug message: cryptographic info	
Debug: hardware related info	Yes	Enable debug message: hardware related info	
	No	Disable debug message: hardware related info	
Debug: external hardware	Yes	Enable debug message: external hardware	
	No	Disable debug message: external hardware	
Debug: JMA early warning	Yes	Enable debug message: JMA early warning	
	No	Disable debug message: JMA early warning	
Instrument configuration options	Enable autodetection of the instrument	Yes	Instrument can automatically be found by GeoDAS in the LAN.
		No	Instrument can not automatically be found by GeoDAS.

	Time for sending daily logfile, hour	User selectable	If transfer is activated as described in chapter 8.7, the daily logfile will be sent to the server at this hour of the day. This can be adjusted to avoid that all instruments send the logfile at exactly the same time
	Time for sending daily logfile, minute	User selectable	
	Keep modem always powered	Yes	Keep the external cell modem always powered
		No	Turning it on only when required
	Startup time for cellular modem	User selectable	Time the system will wait for the Cellular modem to start up
	Connect time for cellular modem	User selectable	Time the system will wait for the Cellular modem to connect to the provider
Signal processing	DSP mode set delay [s]	User selectable	After startup, the instruments internal clock is roughly synchronized against a foreign network time source (NTP) and time is pushed to the DSP. During this initial time period the DSP will use this foreign time to do sampling while synchronizing to an external time-source such as GPS. After this initial time period the DSP will be switch to the external time-source.
	DSP sync behaviour	Dilate	The DSP is supposed to drift against to correct time, i.e., an offset of the reported and actual time is noted in each record of the mini-seed file. No interruptions of waveform processing occurs but it can take some hours until synchronization has been completed. This mode is ideal for building monitoring.
		Wrap	Upon switchinhg the time-source, the DSP stops waveform processing, re-synchronizes the ADC clocks and restarts waveform processing. This mode is only recommended when long drift times are undesirable.
	DSP snap window [ms]	User selectable	Specifies the maximum allowed time difference the DSP can drift to obtain synchronization with an external time-source, in case the instrument was running for a long period of time on its internal RTC, e.g., after GPS failure. If the time difference between the DSPs internal clock and the external time source is larger than the specified amount, the DSP will perform a time-warp and waveform processing will be restarted.
	Waveform processing style	Slow	Once per second waveform processing is executed which allows sampling rates as low as 1 SPS.
		Standard	This is the default mode on all GeoSIG instruments and supports sampling rates as low as 5 SPS.
		Real-time	The scheduler guarantees an execution rate of 50 times per second for waveform processing making this mode ideal for applications in the early warning field.

Table 15: Miscellaneous Parameters menu structure

9.10 Time synchronization

9.10.1 In the Web Interface or by GeoDAS

- Go to **Configuration** → **Time synchronization**

The screenshot shows the GeoSIG web interface with the 'Configuration' menu selected. The 'Main menu' section contains the following configuration items:

Parameter	Value	Info Icon
Station description	GeoSIG Station	Yes
Station code	GSGMS	Yes
Location description	Default location	Yes
Seismic network code	GS	Yes
Number of Channels	3	No
Number of Output Streams	0	No
Number of Trigger Sets	1	No
Number of Preset Triggers	0	No
Channel Parameters	>>	No
Trigger Parameters	>>	No
File Storage and Policy	>>	No
Communication Parameters	>>	No
Miscellaneous Parameters	>>	No
Sensors and Virtual Channels	>>	No
GeoSIG Options	>>	No
Time synchronization	>>	No

At the bottom of the configuration area, there are four buttons: Back, Load from Device, Save Changes, and Apply and Restart.

Figure 68: Time synchronization Parameters

Adjust the parameters as shown in the Table 16.

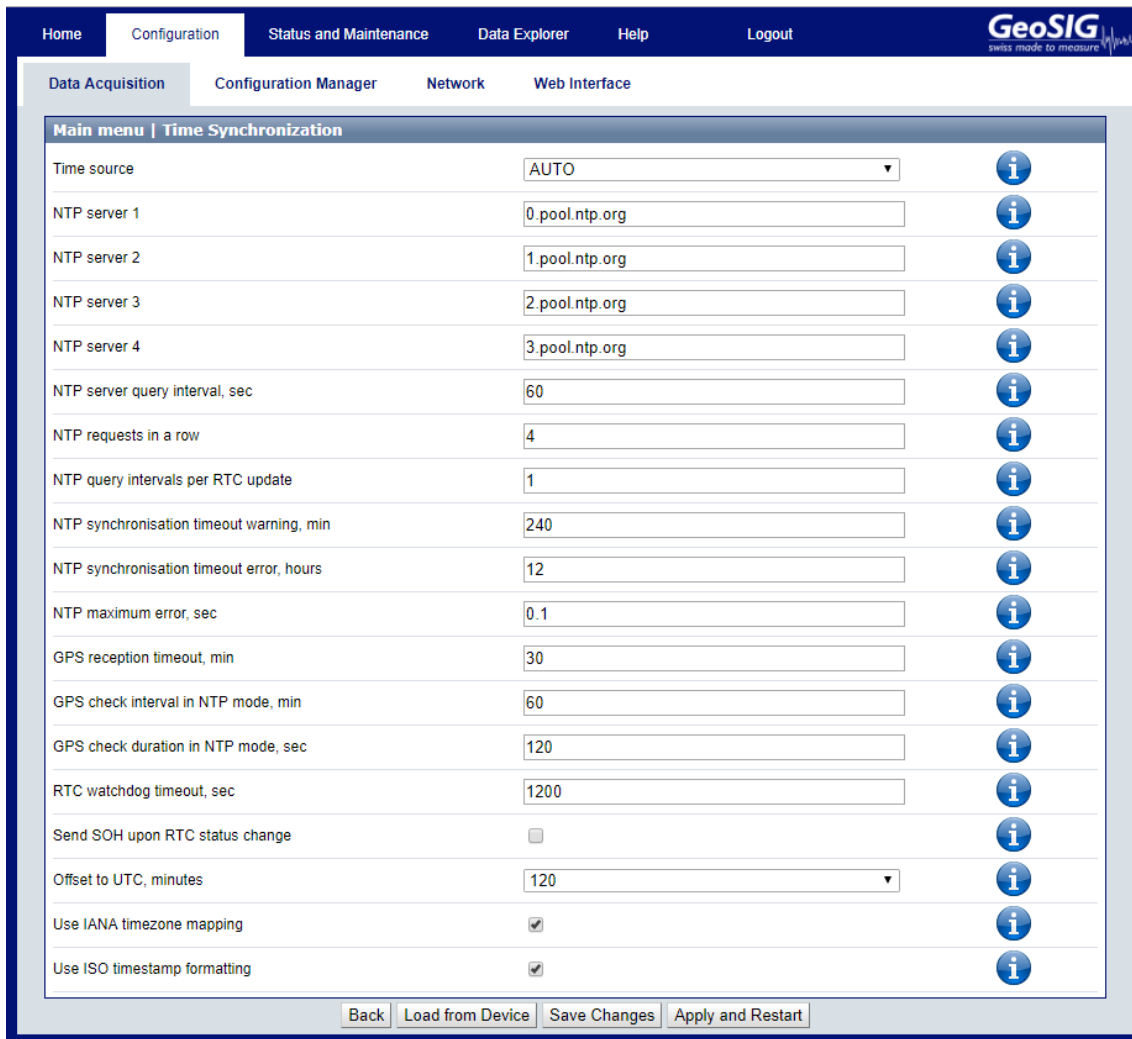


Figure 69: Edit Time synchronization Parameters

9.10.2 Via Local Serial Console

```

Configuration
A) Station description ..... GeoSIG Station
B) Station code ..... GSGMS
C) Location description ..... Default location
D) Seismic network code ..... GS
E) Number of Channels ..... 3
F) Number of Output Streams ..... 1
G) Number of Trigger Sets ..... 1
H) Number of Preset Triggers ..... 1
I) Channel Parameters ..... ->
J) Stream Parameters ..... ->
K) Trigger Parameters ..... ->
L) Parameters of Preset Triggers ... ->
M) File Storage and Policy ..... ->
N) Communication Parameters ..... ->
O) Miscellaneous Parameters ..... ->
S) GeoSIG Options ..... ->
T) Time synchronization ..... ->
    
```

- Press **'T'** to get to the *Time synchronization* menu to adjust the time synchronisation parameters. The following menu appears:

Configuration Time Synchronization	
A) Time source	AUTO
B) NTP server 1	0.pool.ntp.org
C) NTP server 2	1.pool.ntp.org
D) NTP server 3	2.pool.ntp.org
E) NTP server 4	3.pool.ntp.org
F) NTP server query interval, sec	60 (0x3C)
G) NTP requests in a row	4 (0x04)
H) NTP query intervals per RTC update	1 (0x01)
I) NTP synchronisation timeout warning, min	240 (0xF0)
J) NTP synchronisation timeout error, hours	12 (0x0C)
K) NTP maximum error, sec	0.1
L) GPS reception timeout, min	30 (0x1E)
M) GPS check interval in NTP mode, min	60 (0x3C)
N) GPS check duration in NTP mode, sec	120 (0x78)
O) RTC watchdog timeout, sec	1200 (0x4B0)
P) Send SOH upon RTC status change	No
S) Offset to UTC, minutes	120
T) Use IANA timezone mapping	Yes
U) Use ISO timestamp formatting	Yes

Time source	RTC	RTC is not synchronizing itself to any source. It will keep it's own time which might differ from other devices or the actual time.
	GPS	RTC is synchronising to the, optionally, connected GPS, which allows very good time synchronisation between devices with other GPS enabled devices.
	NTP	RTC is synchronising to a NTP server.
	AUTO	RTC synchronises to NTP in case GPS is not available. This is a good option for GPS and Ethernet enabled devices, where the GPS reception might be lost from time to time.
	NET1PPS	RTC is synchronizing to the 1PPS signal. This signal can be received by the optional 433 MHz wireless module or the interconnection network. (This option needs a device which is broadcasting its time by 433 MHz.)
NTP server 1	User selectable	IP of the primary NTP Server.
NTP server 2	User selectable	IP of the secondary NTP Server.
NTP server query interval, sec	User selectable	Interval time in seconds the NTP server is contacted by the instrument.
NTP requests in a row	User selectable	Every time the instrument is contacting the NTP server the configured number of requests will be sent. For service and advanced user only, only change the default value if you know what you are doing.
NTP query intervals per RTC update	User selectable	Specifies the number of NTP synchronizations until the RTC is updated. The default is to update the RTC after each synchronization with a NTP server.
NTP synchronisation timeout warning, min	User selectable	Raise a warning if synchronization with the NTP server was not possible for the given amount of time. Default is 240minutes.

<i>NTP synchronisation timeout error, hours</i>	User selectable	Raise an error if synchronization with the NTP server was not possible for the given amount of time. Default is 12hours.
<i>NTP maximum error, sec</i>	User selectable	If the current RTC time differs more than this time limit in [seconds] from the NTP time, the RTC time will make a time jump to the NTP time. Otherwise the time will be tuned slowly. For service and advanced user only, only change the default value if you know what you are doing
<i>GPS reception timeout, min</i>	User selectable	If GPS signal is lost, after this time in [minutes] the RTC will change its synchronisation method to NTP
<i>GPS check interval in NTP mode, min</i>	User selectable	If the time synchronisation is in the 'Auto" mode, and the RTC is synchronized to the NTP (because the GPS signal has been lost) the instruments checks in the configured interval if the GPS is available again (minutes)
<i>GPS check interval in NTP mode, sec</i>	User selectable	If the time synchronisation is in the 'Auto" mode, and the RTC is synchronized to the NTP (because the GPS signal has been lost) the instruments checks for the configured time duration if the GPS is available again (seconds))
<i>RTC watchdog timeout, sec</i>	User selectable	If armdas is not running for this amount of time, there will be a hard reset of the device. Only change this setting if you really know what you are doing! Wrong settings could render your device unusable without GeoSIG support. The value of 0 disables the Watchdog.
<i>Send SOH upon RTC status change</i>	Yes	In case RTC status changes, a SOH message will be uploaded to the server.
	No	In case RTC status changes, no SOH will be send
<i>Offset to UTC, minutes</i>	User selectable	Difference between the local time and Coordinated Universal Time (UTC). The default is to use UTC as time reference.
<i>Use IANA timezone mapping</i>	Yes	Use Time Zone to set instrument time
	No	Don't use Time Zone to set instrument time
<i>Use ISO timestamp formatting</i>	Yes	Use ISO 8601 in all files name including offset
	No	Don't use ISO 8601 in all files name including offset

Table 16: Time Synchronization Parameters Menu Structure

The system has a Real Time Clock (RTC) that maintains internal time when the unit is turned off. During normal operation the RTC is responsible for providing the most accurate time possible to the system and performing time synchronization with other available external time sources as:

- GPS time code receiver on the GPS interface
- NTP (Network Time Protocol) server from the wired or wireless Ethernet interface

It also keeps under control the sampling clock of the ADCs and self-calibrates its oscillator against temperature and aging when it is connected with an accurate external time signal.

The DSP receives a continuous 1 PPS signal from the RTC with the best possible accuracy of the RTC, including temperature compensation, based on the saved coefficients. The DSP will sync the sampling clock with this 1 PPS signal to have accurate sample timing.

9.10.2.1 Temperature compensation

RTC uses the internal temperature sensor of the micro-controller to define the current operating temperature. When good time synchronization occurs, typically using a GPS, the RTC checks its own drift against the signal of the GPS and adds the correction coefficients in a trim table. With a NTP time source, the accuracy is worse but the same process occurs with more averaging and on longer period of time.

During factory test, all the coefficients are initialized to the room temperature coefficient using a GPS. After installation on site, the unit will learn the correction parameters according to the ambient conditions at site and also according to the aging of the oscillator.

9.11 GeoSIG Options



This menu and the functions under it are subject to change. The user should not use or rely on any features under this menu without consulting GeoSIG.

9.11.1 Via Local Serial Console

```

Configuration
A) Station description ..... GeoSIG Station
B) Station code ..... GSGMS
C) Location description ..... Default location
D) Seismic network code ..... GS
E) Number of Channels ..... 3
F) Number of Output Streams ..... 1
G) Number of Trigger Sets ..... 1
H) Number of Preset Triggers ..... 1
I) Channel Parameters ..... ->
J) Stream Parameters ..... ->
K) Trigger Parameters ..... ->
L) Parameters of Preset Triggers ... ->
M) File Storage and Policy ..... ->
N) Communication Parameters ..... ->
O) Miscellaneous Parameters ..... ->
S) GeoSIG Options ..... ->
T) Time synchronization ..... ->
    
```

- Press ‘**S**’ to get to the *GeoSIG Options* menu to enter Product key for EEW applications, enable/disable and configure waveform injection and other GeoSIG specific features.

```

Main Menu | GeoSIG Options
A) Enable real-time waveform message queue .... No
B) Product Key (required for early warning) ... XXXXX-XXXXX-XXXXX-XXXXX-XXXXX
C) Waveform Simulator ..... ->
    
```

- The following parameters can be adjusted:

	Enable real-time waveform message queue	Yes No	Enable the real-time waveform message queue. Disable the real-time waveform message queue.
	Product Key (required for early warning)	User selectable	If purchased, enter the product key for early warning options. The product key is of the form XXXXX-XXXXX-XXXXX-XXXXX.
Waveform Simulator	Enable waveform source	User selectable	Enable waveform inject from files (0...disable, 1...first file, 2...second file, 3...third file.
	Source 1	User selectable	Path for first waveform source.
	Source 2	User selectable	Path for second waveform source.
	Source 3	User selectable	Path for third waveform source.

Table 17: GeoSIG options menu structure

9.12 Other Options in the Instrument Main Menu

Next to the edit of the instrument configuration, there are other actions possible from the main menu shown below:

```

Main menu:
C - Configuration ->
M - Messages ->
X - Display errors (0) and warnings (0)
W - Clear errors and warnings
T - File statistics
I - System information ->
S - Shell command
U - Control requests ->
R - Restart firmware
Z - Reboot instrument
Q - Quit
    
```

	Action or command	Description
C	Configuration →	Change of the configuration of the instrument. See chapter 9 for details.
M	Messages →	Possible to configure what kind of messages are shown in the console.
X	Display errors (n) and warnings (m)	Shows present errors and warnings.
W	Clear errors and warnings	Clears all errors and warnings.
T	File statistics	Displays information about files and the memory usage.
I	System information →	Displays information about the status of the instrument.
S	Shell command	Allows executing a Linux shell command from <i>armdas</i> . For advanced users only.
U	Control requests →	See chapter 9.12.1 for details.
R	Restart	Restarts the instrument, e.g. after a change of the configuration.
Z	Restart	Reboots the instrument.
Q	Quit	Stops <i>armdas</i> data acquisition and exits to the Linux console. For advanced users only.

Table 18: Other options in the main menu

9.12.1 Control Requests

Several actions can be initiated by the user:

- In the main menu press **'U'** to enter the Control requests menu.

```
Main menu:  
C - Configuration ->  
M - Messages ->  
X - Display errors (0) and warnings (0)  
W - Clear errors and warnings  
T - File statistics  
I - System information ->  
S - Shell command  
U - Control requests ->  
R - Restart firmware  
Z - Reboot instrument  
Q - Quit
```

- Type the letter of the request you want to execute from the list below:

```
Data requests, triggering:  
A - Request N seconds of ringbuffer data, starting from the indicated date and time  
B - Activate manual trigger to start recording  
C - Deactivate manual trigger  
  
Status and information:  
D - Generate SOH file with the current state-of-health information  
E - Force uploading current logfile to a server  
F - Enable debug log messages, see the manual for details  
G - Disable debug log messages, see the manual for details  
  
Service and recovery:  
H - Set date and time of the last transferred file to the indicated ones  
I - Erase the entire data storage. Use it as a last resort!  
J - Make hardware reboot of the instrument  
K - Reset errors and warnings of the instrument  
L - Retrieve trim table values  
M - Reset trim table  
N - Calibrate temperature correction using current temperature Tcur in C  
O - Make current configuration as the user default one  
P - Reset to the user default configuration  
Q - Delete one group of files or all files  
R - Date and time settings  
  
Sensor test and calibration:  
V - Generate a sensor test pulse  
W - Remove offsets from signals  
  
Direct request:  
X - Exit, run the package manager, upgrade and reboot  
Y - Initiate hotswap of storage media  
Z - Send user request  
  
Simulation and testing:  
[ - Run pre-configured seismic event  
  
Select <A>...<W>. <Esc> to exit
```

- See details in Table 19

Letter	Request	Description
Data requests, triggering:		
A	GETEVT YYYY-MM-DD HH:MM:SS N	The instrument creates an event with the length of N seconds from the ringbuffer data, starting from the indicated date and time and uploads the data to the server if configured (see chapter 9.8).
B	TRIGGERNOW [trigger_name]	Activate a manual trigger to start recording, the manual trigger must be configured as described in the chapter 9.6
C	STOPTRIGGER [trigger_name]	Deactivates the manual trigger
Status and information:		
D	GETSOH	The instrument generates a SOH file with the current state-of-health information and uploads to the server if configured (see chapter 9.8).
E	GETLOG	The instrument uploads today's logfile to the server.
F	SETMSG flags	Enables/disables debug log messages. For service only, do not change
G	CLRMSG flags	
Service and recovery:		
H	LASTDT YYYY-MM-DD HH:MM:SS	Set date and time of the last transferred file The instrument saves the date and time of the latest uploaded file and will not upload any file which is created before this date and time. Under normal conditions this will be never the case. But if the time is changed backwards by the user - e.g. from 10:00 to 06:00 - the instrument will not upload any data till 10:00 again. So the time of the last transferred file can be adjusted here and should be set to 06:00 in this example.
I	FORMAT	Formats the data storage media. All data will be lost, and instrument will be restarted.
J	REBOOT	Performs full reboot of the instrument
K	RESETERR	Reset errors and warnings of the instrument
L	GETTRIM	The instrument will upload a SOH file containing the actual values from the RTC trim table. The latest SOH file can be found under <code>\\Geo-DAS_DATA\\StatusFiles\\InfoSOH.xml</code>
M	CLEARTRIM	The instrument will clear the RTC trim table
N	TCAL <Tcur>	Calibration of the internal temperature sensor by applying the actual temperature in °C. The RTC uses temperature to learn.

O	SETDEF CFG	Makes the current instrument configuration as user default one. Whenever you change parameters of the instrument, they are saved in the non-volatile instrument memory as Current Configuration, and used to set all parameters of the data acquisition at startup. But if due to some reason the current configuration gets corrupted, and GMS cannot load or cannot process it, the Default Configuration file, which is created by this command, will be used instead. Note that Default Configuration is compiled from the actual parameters of the running system, and therefore it is already approved by GMS and is supposed to be correct. Thus, we recommend sending this command to the instrument after you are sure that your GMS is started with the latest configuration correctly and everything works as expected. The default configuration can also be set and restored in the Web Interface, see chapter 8.3.2
P	RSTUSRDEF	Reset the instrument to its user default configuration.
Q	DELETE <file_prefix or ALL> [YYYY-MM-DD [HH:MM]]	Delete one group of files or all groups of files from the compact flash card. One can request to delete only files that are older than the specified date (and optionally time).
R		Enter the Date and time settings. The Main battery installation date and the current RTC date and time can be changed from this submenu.
8	Halt the system	Halt the instrument for the manual device power off .
Sensor test and calibration:		
V	TSTSENSOR 1 [REC=TRG YES NO] [ALARM=TRG YES NO]	The instrument generates a sensor test pulse. Optional parameters REC and ALARM specify whether a file will be recorded during test and whether an alarm will be generated in case an alarm board is present. Parameters TRG, YES and NO correspond to the modes Normal, Always and Never described in the section 9.9.2
W	REMOVEDC	Remove offsets from signals
Direct request:		
X		For service and advanced user only.
Y		For service and advanced user only.
Z		For service and advanced user only.
Simulation and testing:		
[For service and advanced user only.

Table 19: Control requests

In case the instrument has a Seismometer Control Board installed, then additionally the following user requests are possible under *Sensor test and calibration*:

SLOCK	Performs a mass locking of the connected seismometer
SUNLOCK	Performs a mass unlocking of the connected seismometer
SCENTRE	Perform a mass centring of the seismometer



The above requests can also be sent from GeoDAS by choosing 'Send a Request' from the 'GMS Communication Interface' or from Web Interface from the menu State of Health → Requests . See chapters [C.3.4](#) and [8.4.5](#) for details.

10 Test and Configuration Menu

The test and configuration menu can only be accessed locally at the instrument over the serial cable.

- Switch on the instrument by pressing and holding the POWER button for 2 seconds.
- Press **<Ctrl> + 'Z'** as soon as the following message appears on the console to enter the test and configuration mode:

```
Press Ctrl+Z to enter the test mode.....
```

- The test and configuration menu has three access levels.

Level	Shortcut	Password	Description
User	Ctrl+U	None	Basic operations only
Powerful User	Ctrl+W	None	Also hardware options and pre-selected tests
Administrator	Ctrl+A	None	Also manual tests and altering the FLASH memory content

Your level [U/W/A] or press B to boot now:

The test and configuration menu has three access levels as outlined above: User, Powerful User and Administrator, and each level can be protected by a password. Instead of pressing **<Ctrl>+'Z'**, one can press **<Ctrl>+'U'**, **<Ctrl>+'W'** or **<Ctrl>+'A'** to bypass the above messages and to proceed directly to a menu of the desired level. The Administrator has access to the most complete menu but the majority of functions are not used for the standard instrument operation, and therefore they are not described here in detail. The useful options are highlighted and described below.

```
Access level: User

--- Flash Images and Boot Options ---
L - List flash images
Q - Reset instrument configuration to the user default
V - Reset instrument configuration to the factory default
5 - Boot now
X - Reboot the instrument
Y - Power off

--- Hardware Setup and Monitor ---
N - Network settings

--- Security ---
O - Set password

-->
```

Access level: **Powerful User**

```
--- Flash Images and Boot Options ---  
L - List flash images  
Q - Reset instrument configuration to the user default  
V - Reset instrument configuration to the factory default  
5 - Boot now  
X - Reboot the instrument  
Y - Power off  
  
--- Hardware Setup and Monitor ---  
K - Instrument hardware parameters  
N - Network settings  
T - Battery installation dates  
  
--- Security ---  
O - Set password  
J - Reset all passwords  
  
-->
```

Access level: **Administrator**

```
--- Flash Images and Boot Options ---  
L - List flash images  
Q - Reset instrument configuration to the user default  
V - Reset instrument configuration to the factory default  
5 - Boot now  
X - Reboot the instrument  
Y - Power off  
  
--- Hardware Setup and Monitor ---  
K - Instrument hardware parameters  
N - Network settings  
T - Battery installation dates  
  
--- Test Functions ---  
P - Test RTC  
M - Test GPS  
  
--- Security ---  
O - Set password  
J - Reset all passwords  
  
-->
```


10.1 Flash Images and Boot Options

L	List flash images	Lists all the current firmware in the image
Q	Reset instrument configuration to the user default	Forces the instrument to load the user default configuration. See description of the command SETDEF CFG in the chapter 9.12.1
V	Reset instrument configuration to the factory default	Forces the instrument to load the factory default settings
5	Boot from the default image	Exits the test and configuration menu and starts the instrument normally
X	Reboot the instrument	Forces the watchdog to completely restart the instrument
Y	Power off	Forces the watchdog to switch off the instrument

10.2 Hardware Setup and Monitor

K	Instrument hardware parameters	Checks what HW is installed in the instrument and adjust the number of sensors
N	Network settings	Enters the menu to adjust the network settings (dynamic or fixed IP, subnet and gateway, DNS servers), the PPP settings, enable/disable the SSH and Web Interface and configure the backup server. For details see chapter 5.2
T	Battery installation dates	Whenever you install a new battery, you must set the installation dates using this menu.

10.3 Test Functions

P	Test RTC	Runs an automatic check of the RTC
M	Test GPS	Allows user to see the NMEA messages of the GPS and to initialise the GPS receiver.

10.4 Security

O	Set password	Sets the password to prevent unauthorised access to the current level of the test and configuration menu.
J	Reset all passwords	Resets all passwords below the levels of access

- Leave the test and configuration menu by pressing '5' or 'Y'

10.5 Comparison of User Permissions

	User	Powerful User	Administrator
Flash Images and Boot Options			
List Flash images	X	X	X
Reset instrument configuration to the user default	X	X	X
Reset instrument configuration to the factory default	X	X	X
Boot now	X	X	X
Reboot the instrument	X	X	X
Power off	X	X	X
Hardware Setup and Monitor			
Instrument hardware parameters		X	X
Network settings	X	X	X
Battery installation dates		X	X
Test Functions			
Test RTC			X
Test GPS			X
Security			
Set password	X	X	X
Reset passwords		X	X

Table 20: Comparison of test and configuration menu users

11 Firmware Upgrade

All the firmware for

- Linux operating system
- armdas firmware
- DSP
- SUP

can be upgraded by the user by using GeoDAS as described in the following chapters. The firmware will be released only as a complete package, containing all the firmware listed above. Please see www.geosig.com → **Support** → **Downloads** to download the latest firmware release package.

- 👉 *Even if there is no known case of data loss during the upgrade, we recommend backing up all recorded data and the configuration before starting the upgrade.*
- 👉 *After any firmware upgrade, the configuration and the correct function of the instrument should be fully verified.*

If the instruments are configured to contact a server, it is possible to upgrade all or specific instruments remotely using GeoDAS. Before trying to upgrade remotely, be sure the instruments have a working network connection to the server. To proceed with the firmware upgrade, please take the following steps:

- Make a right click on the Station in the GeoDAS main window and select **Instrument Control...**

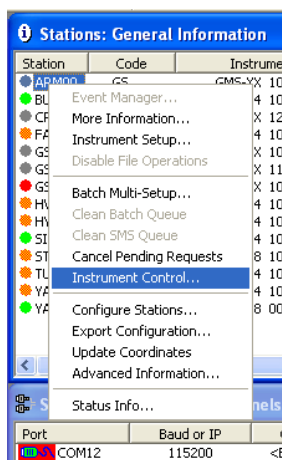


Figure 70: Select Instrument Control

- A list box will appear.


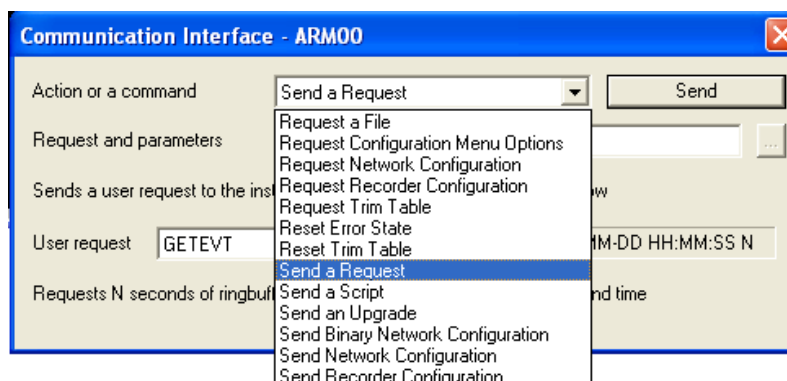


Figure 71: instrument Communication Interface

- Select the item Send an Upgrade
- Press on the button Browse ... to select the required firmware. Select a firmware container with the extension *.*gsfw* or a *.*zip* archive containing several update packages.
- If the file is selected, press the **Send** button. GeoDAS identifies the firmware and asks for confirmation. Please double check that the correct firmware has been selected.

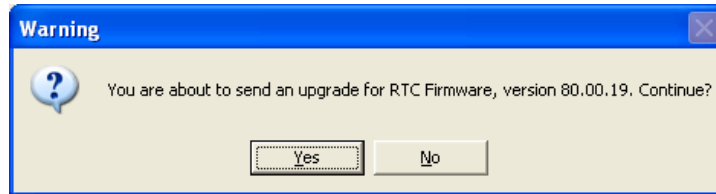

- Upon pressing the **Yes** button, the firmware will be placed in the Outgoing directory, so that it can be collected by the instrument(s) upon next connection.

Station	Code	Instrument	Channel Type	Status Updated	Files	Free Memory	Last Event	Voltage	Current Activity
SS000	DEMO_	GMS-XX	TCP: 192.168.10.80	13.10.2010 at 19:08:38	0 (0)	971940K (98...	27.09.2010...	AC, DC...	Not connected. Pending: DSP_100210_20101014_072658.hex

Figure 72: Pending upgrade on the server

- As soon as the instrument has downloaded the new firmware, the text *Pending: xxx.gsfw* disappears. The instrument will verify the firmware and once the upgrade process is finished, the instrument will restart.

When the instrument software receives such a file it checks the actual version and, only if the file contains more recent firmware than the existing one, it will start the upgrade. After the upgrade, the new firmware will be in “trial” mode and a reboot is done. If the reboot and instrument operation is correct, the new firmware will be accepted. If the instrument reboots through its watchdog because the firmware was faulty, the previous firmware version will be used and the system will be restored to its state before the upgrade.


Downgrades to the older firmware versions might be required in some specific cases. This is possible, too. Please contact GeoSIG support for the exact procedure of such downgrade.

Appendices

Appendix A Connector Pinouts

A.1 Binder Connectors


A.1.1 POWER Connector

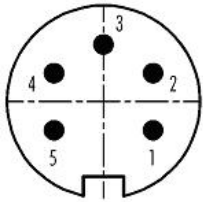

Pin	Description	Function
1	_EXT_SUP+	External power supply, 9 to 48 VDC
2	EXT_GND	Power return
3	_EXT_BAT+	External battery ¹ , 12 VDC
4	EXT_GND	Power return
5	GND	Power return

Mating Type: Binder Series 423, cable connector female, 5 pole


A.1.2 MULTICOM Connector

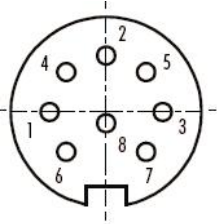

Pin	Description	Function
1	CONS TXDE	External console transmit data
2	CONS RXDE	External console receive data
3	N/C	Not connected
4	GND	External device power return
5	USB HOST0-	USB data -
6	USB HOST0+	USB data +
7	EXT_DEV_PWR	External device power supply, 5 or 9 - 15 VDC

Mating Type: Binder Series 423, cable connector male, 8 pole

A.1.3 ETHERNET Connector

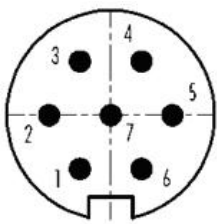

Pin	Description	Function
1	N/C	Not connected
2	_ETH_RX_P	Ethernet receive data +
3	_ETH_RX_N	Ethernet receive data -
4	_ETH_TX_P	Ethernet transmit data +
5	_ETH_TX_N	Ethernet transmit data -
6	_ETH_POE_P	Power over Ethernet
7	_ETH_POE_N	Power over Ethernet

Mating Type: Binder Series 423, cable connector female, 7 pole

¹ Cannot be used together with an internal battery

A.1.4 ALARM Connector

	Pin	Description	Function
	A	RELAY_4_NO	ALARM4 Normally opened
	B	RELAY_4_CMN	ALARM4 Common
	C	RELAY_4_NC	ALARM4 Normally closed
	D	ACKNOWLEDGE_A	ACKNOWLEDGE Signal A input (0 - 15 VDC)
	E	GND	Power Return Path
	F	ACKNOWLEDGE_B	ACKNOWLEDGE Signal B input (0 - 15 VDC)
	G	RELAY_1_NO	ALARM1 Normally opened
	H	RELAY_2_NO	ALARM2 Normally opened
	J	RELAY_2_CMN	ALARM2 Common
	K	RELAY_2_NC	ALARM2 Normally closed
	L	RELAY_3_NO	ALARM3 Normally opened
	M	RELAY_3_CMN	ALARM3 Common
	N	RELAY_3_NC	ALARM3 Normally closed
	O	V_RELAY	Power Supply 9 - 15 VDC
	P	RELAY_1_CMN	ALARM1 Common
	R	RELAY_1_NC	ALARM1 Normally closed

Mating Type: Binder Series 423, cable connector female, 16 pole



The contacts are suitable for a low voltage control. In case large load must be switched then external relays must be implemented. Max rating of the internal relay is 60 VAC / 500 mA.


A.1.5 GPS Connector

	Pin	Description	Function
	1	GPS_RX	GPS receive data
	2	GPS_TX	GPS transmit data
	3	N/C	Not connected
	4	GND	GPS power return
	5	GPS_1PPS	GPS one pulse per second
	6	GPS_PWR	GPS power, 12 VDC
	7	GND	GPS power return

Mating Type: Binder Series 423, cable connector male, 7 pole

A.1.6 SENSOR Connectors


A.1.6.1 Connector Standard for Sensor

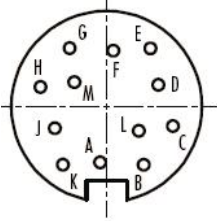

Pin	Description	Function
1	SENSA1+	First channel positive analogue input
2	SENSA1-	First channel negative analogue input
3	SENSA2+	Second channel positive analogue input
4	SENSA2-	Second channel negative analogue input
5	SENSA3+	Third channel positive analogue input
6	SENSA3-	Third channel negative analogue input
7	CAL_SIG0	Calibration test signal output
8	GND	Sensor power return
9	V_SENSOR	Sensor power supply, 15 or 24 VDC
10	GND	Sensor power return
11	AGND	Analogue ground
12	CAL_EN0	Calibration enable signal output

Mating Type: Binder Series 423, cable connector male, 12 pole

A.1.6.2 Connector special for Arolla Sensor

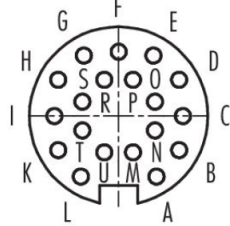	Pin	Description	Function
	A	V+	Vertical channel: velocity, analog positive input ¹
	B	E+	West-East channel: velocity, analog positive input ¹
	C	AGND	Analog ground reference voltage
	D	GND	Sensor power return
	E	DC_SUPPLY	Sensor power supply, 9 - 36 VDC
	F	RS485-B	RS485 serial communication lines, B line ⁵
	G	RS485-A	RS485 serial communication lines, A line ⁵
	H	AGND	Analog ground reference voltage
	I	V-MAS	Vertical channel: mass position, input, single ended ²
	K	CAL+	Calibration signal: velocity, analog, positive output ⁴
	L	N+	North-South channel: velocity, analog positive input ¹
	M	V-	Vertical channel: velocity, analog negative input ¹
	N	E-	West-East channel: velocity, analogue negative input ¹
	O	CALIB_EN	Command line for calibration output ³
	P	CENTER_EN	Command line for centering and wakeup output ³
	R	E-MAS	West-East channel: mass position, analog input ²
	S	N-MAS	North-South channel: mass position, analog input ²
	T	CAL-	Calibration signal: velocity, analog, negative output ⁴
	U	N-	North-South channel analogue negative input ¹

Mating Type: Binder Series 423, cable connector male, 19 pole

¹ ±10VSE max, ±40V peak max differential

² ±10VSE max, ground reference is AGND.


³ TTL compatible, 5V limited, ground reference is GND

⁴ Single-ended ±10VSE max, differential

⁵ Ground reference is GND

A.2 MIL Connectors


A.2.1 POWER Connector

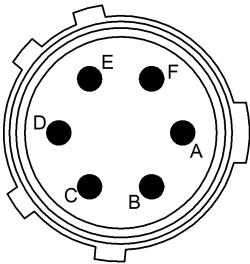

Pin	Description	Function
A	N/C	Not connected
B	EXT_SUP+	External power supply, 9 - 48 VDC
C	EXT_GND	Power return
D	EXT_BAT+	External battery, 12 VDC
E	N/C	Not connected
F	EXT_GND	Power return

Mating Type: Amphenol PT Series, cable connector female, 6 pole


A.2.2 ETHERNET Connector

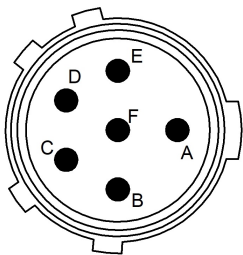

Pin	Description	Function
A	PoE_A	Power over Ethernet
B	ETH_RX-	Ethernet receive data -
C	ETH_RX+	Ethernet receive data +
D	ETH_TX+	Ethernet transmit data +
E	ETH_TX-	Ethernet transmit data -
F	POE_B	Power over Ethernet

Mating Type: Amphenol PT Series, cable connector female, 6 pole


A.2.3 MULTICOM Connector

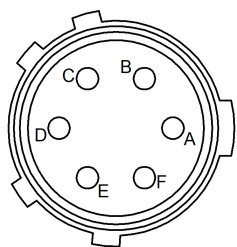

Pin	Description	Function
A	CONS_TXDE	External console transmit data
B	CONS_RXDE	External console receive data
C	EXT_DEV_PWR	External device power supply, 5 or 12 VDC
D	GND	External device power return
E	USB_HOST0_D+	USB data +
F	USB_HOST0_D-	USB data -

Mating Type: Amphenol PT Series, cable connector male, 6 pole


A.2.4 GPS Connector

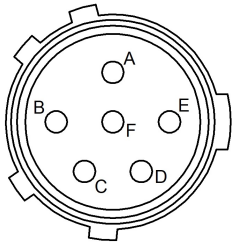

Pin	Description	Function
A	GPS_ TX	GPS transmit data
B	GPS_ RX	GPS receive data
C	N/C	Not connected
D	GND	GPS power return
E	GPS_ 1PPS	GPS one pulse per second
F	GPS_ PWR	GPS power, 12 VDC

Mating Type: Amphenol PT Series, cable connector male, 6 pole

A.2.5 SENSOR Connectors

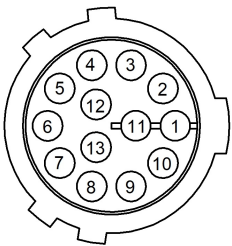

Pin	Description	Function
1	SENSOR_ 2-	Second channel negative analogue input
2	SENSOR_ 2+	Second channel positive analogue input
3	SENSOR_ 1-	First channel negative analogue input
4	SENSOR_ 1+	First channel positive analogue input
5	CAL_ EN0	Calibration enable signal
6	AGND	Analogue ground
7	CAL_ SIG0	Calibration test signal
8	V_ SENSOR	Sensor power supply, 15 or 24 VDC
9	SENSOR_ 3+	Third channel positive analogue input
10	SENSOR_ 3-	Third channel negative analogue input
11	GND	Sensor power return
12	N/C	Not connected
13	GND	Sensor power return

Mating Type: Amphenol PT Series, cable connector male, 13 pole

Appendix B Remote Access to the Instrument over SSH



**The following chapter is for advanced users only.
Warranty will be void if something is damaged by user during changes in the root file system.**

Secure Shell (SSH) is a network protocol for secure data communication, remote shell services or command execution and other secure network services between two networked computers that it connects via a secure channel over an insecure network: a server and a client (running SSH server and SSH client programs, respectively).



The armdas console cannot be shown through the SSH. This is a limitation of the armdas firmware.

The instrument supports all types of remote access through SSH. User can connect from his PC by SSH client program to the SSH server of the instrument. Simple SSH client program can be used for this purpose. Use root as login and swiss as the password, as shown:

Login: **root**
Password: **swiss**

Sign '#' is a command prompt where you can type console commands.

The password can be changed by **passwd** command.



Warranty will be void in case password is changed and forgotten.

B.1 SSH Clients for Linux OS

For the Ubuntu or other Debian-like GNU/Linux OS, SSH client program, with command line interface, can be installed by command

```
$ sudo apt-get install openssh-client
```

To login into the instrument console, "ssh root@192.168.1.10" command can be issued from any terminal emulator as following figure shows:

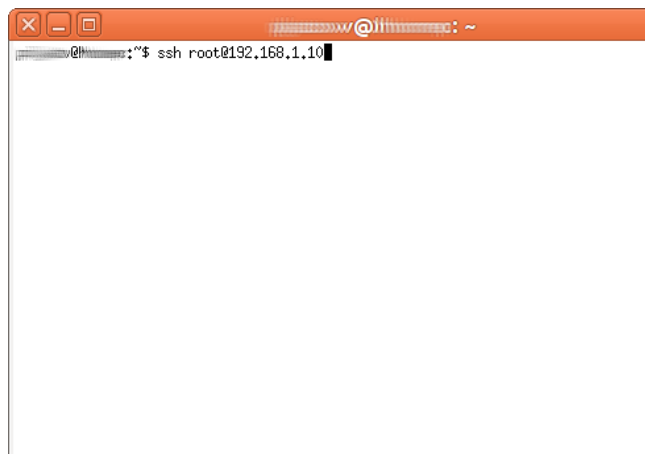


Figure 73: Command line SSH client at terminal emulator

Alternatively, the PuTTY SSH client with GUI interface can be installed by command

```
$ sudo apt-get install putty
```

This software can be found in a menu **Applications** → **Internet** → **PuTTY SSH Client** and its configuration dialog looks like:

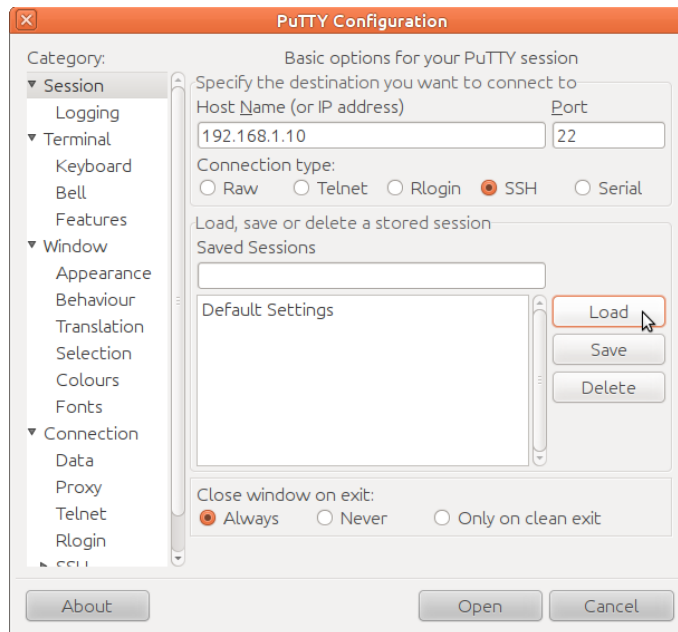


Figure 74: Configuration window of PuTTY

IP address 192.168.1.10 from examples above should be changed to the real IP address of the instrument.

B.2 SSH Clients for Windows OS

The same PuTTY as for GNU/Linux OS or alternatively TeraTerm software can be used for Windows OS to have remote access to the instrument by means of SSH.

Its connection window is shown below

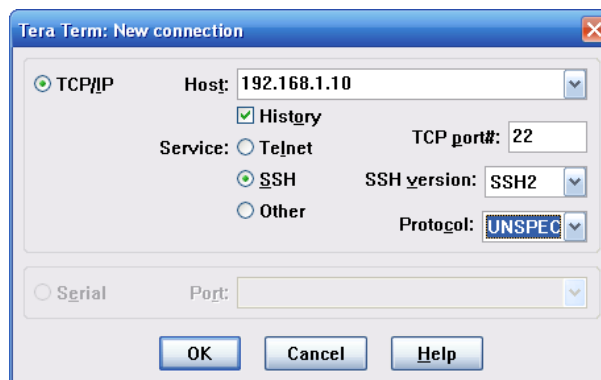


Figure 75: TeraTerm Connection Window

The PuTTY software for Windows OS operates the same as PuTTY for Linux OS.

The PuTTY software can be downloaded from <https://www.chiark.greenend.org.uk/~sgtatham/putty/>

The TeraTerm software can be downloaded from <http://tssh2.osdn.jp/>

B.3 SFTP access for Windows OS

WinSCP is an open source free SFTP client for Windows. Its main function is the easy file transfer between a local computer and the instrument.

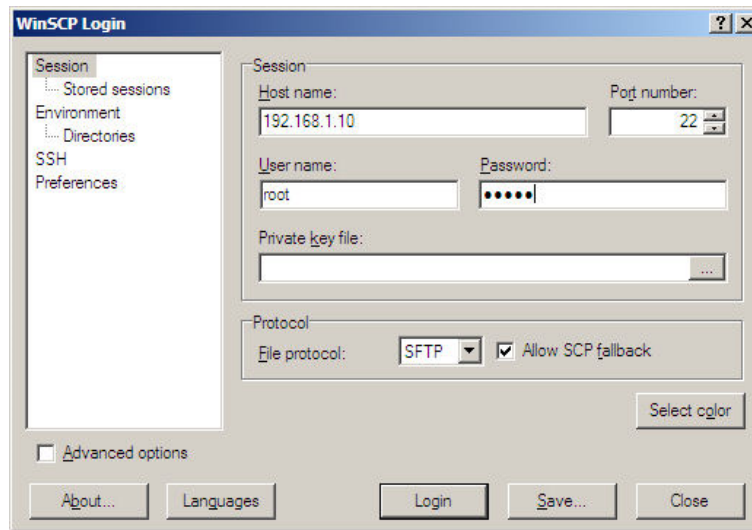


Figure 76: WinSCP login window

To connect to the instrument put the IP address of the GMS-scai and enter the following user name and password:

Login: **root**
Password: **swiss**

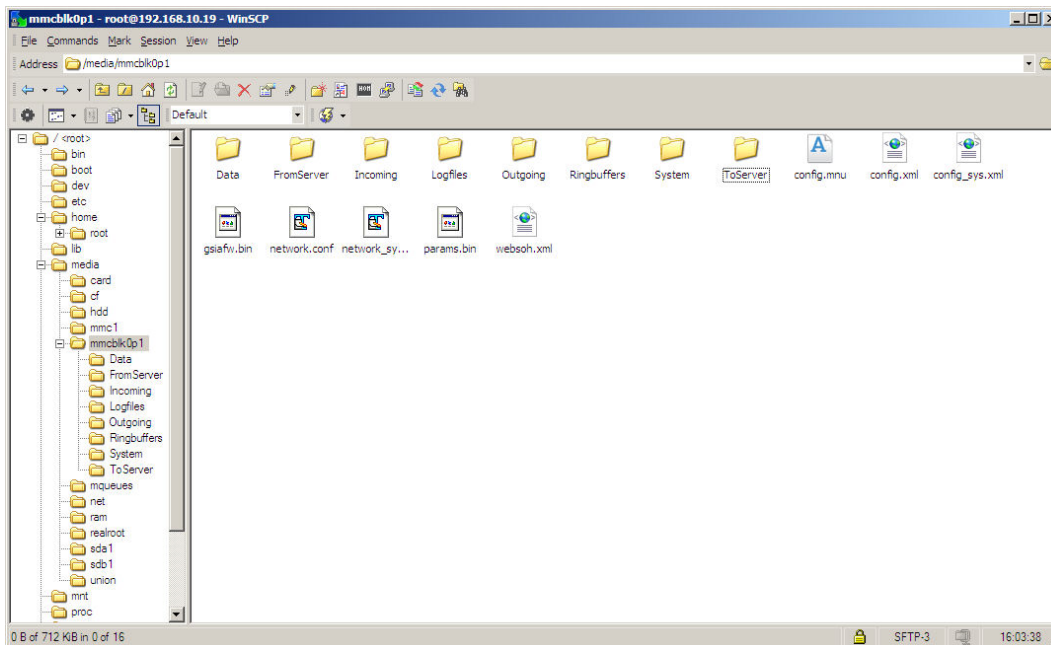


Figure 77: Explorer mode of WinSCP when connected to the instrument

It is then possible to browse through the available data on the instrument and copy files from or to the computer. The file structure is described in the following chapter.

The WinSCP can be downloaded from here: <https://winscp.net/eng/download.php>

B.4 File Structure of the Instrument

On the instrument the files are organized as following

\media\mmcblk01\...	in case an SD card is installed
... Data\	Event files
... Ringbuffers\	Permanent recording files
... Logfiles\	Log files of armdas

The filenames contain the following information

XXX_SNSNSN_YYYYMMDD_HHMMSS.ext		
	Extension	.ext Depending on file type
		.msd MiniSEED containing waveform data
		.xml SOH and PGM information
		.txt LOG and ERR files
		.bin MMA packets (special for Korean market)
	Time	HH Hour
		MM Minutes
		SS Seconds
	Date	YYYY Year
		MM Month
		DD Day
	S/N	SNSNSN Six digit serial number of instrument
	Type	XXX Depending on file type
		TRG Event trigger
		USR User request
		TTT Time table trigger
		CAL File with test pulse
		MAN Manual trigger
		RBF Permanent recording
		LOG Log files
		SOH State of Health information
		PGM PGM information of event
		ERR Error messages

Appendix C GeoDAS Settings

C.1 Configuration of Stations

To be able to communicate with the instrument, GeoDAS must act as a server. This chapter should help to find the correct settings.

- Open GeoDAS and Go to the menu **Settings** → **Configure Stations...** , the following window will appear:

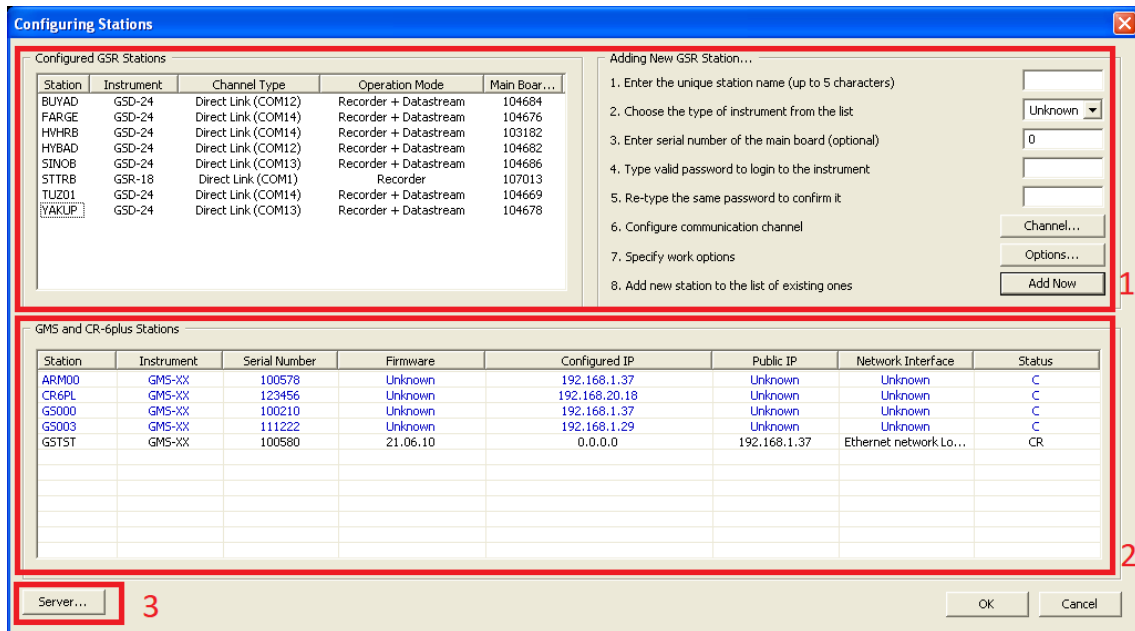


Figure 78: Configuration Stations

Area	Topic	Description
1	Configured GSR Stations	Details about the configured GSR-xx and GCR-xx stations. Check separate <i>GeoDAS Manual</i> for details.
2	Instrument Stations	<p>Details about the configured instruments. All instruments connected to the same network will be listed in grey.</p> <p>Station name can be changed by a double click on the field you want to change.</p> <p>The column Instrument and Serial Number shows the instrument type and its serial number.</p> <p>The Firmware column shows the firmware version of the main data acquisition firmware.</p> <p>The Public IP shows from where the instrument is connected to the server. In case the instrument is behind a router or firewall, then this IP address will be shown. Network settings can be done according to chapter 7. If one wants to connect manually to the instrument, then GeoDAS will try the address and port listed under Address.</p> <p>The last column in the table is Status, which is indicated by one or more letters, which are the following:</p> <ul style="list-style-type: none"> • N - New instrument • C - already Configured earlier • A - Altered parameters • R - actual settings were Received from the instrument
3	Server Settings	For configuration of the Server, see chapter C.2

C.1.1 Add a new Instrument

All instruments connected to the same network will be listed in grey. To add one of these stations into the current configuration do the following:

- Select the instrument and make a **right click**
- Click on **Add Station to Current Configuration**
- Press **OK**

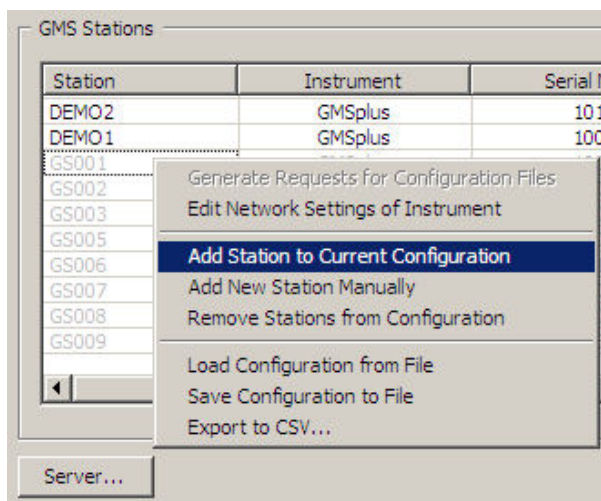


Figure 79: Add Station to Current Configuration

If the instrument is not in the local network and cannot directly be accessed, then press **Add New Station Manually** and enter the serial number of the instrument.

C.1.2 Remove an Instrument

To remove one of the stations of the current configuration do the following:

- Select the instrument and make a **right click**
- Click on **Remove Station from Configuration**
- Press **OK**

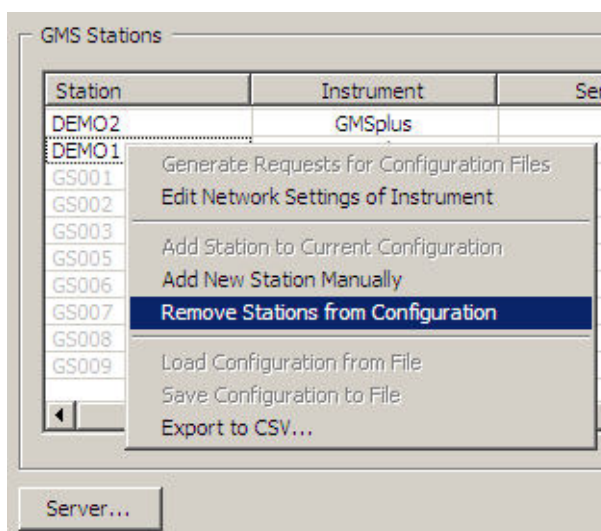


Figure 80: Remove Station from Current Configuration

For more details please see *GeoDAS Manual*.

C.2 Configuration of Server Parameters

- Press the button **Server...**, the window below appears:

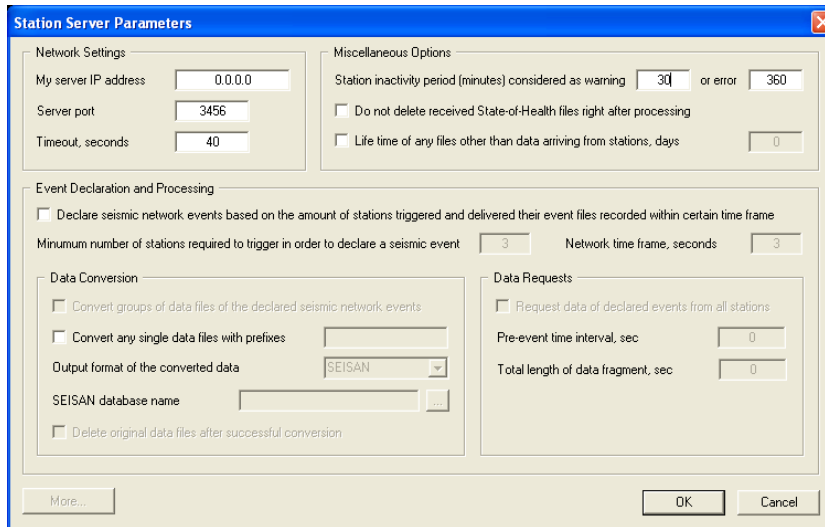


Figure 81: Station server parameters

Group of Controls	Description
Network Settings	IP address and port of the server, i.e. computer which GeoDAS is running on as well as the network Timeout in seconds. If server has several network interfaces but connections from instruments are expected from only one of them, then its IP address must be specified. Otherwise, leave it zero, which means that GeoDAS accepts incoming connection at any interface. The timeout is used to decide when to terminate current network connection if the remote party does not respond within the indicated time interval.
Miscellaneous Options	Network error is declared if an instrument did not communicate with GeoDAS within the indicated period of time. Make sure that this parameter is higher than the communication interval set in the instrument as described in chapter 9.8 If State-of-health forwarding interval is set to nonzero value, then SOH reports are collected within this period of time and only then are forwarded. You can also choose not to delete SOH reports after processing. If this option is selected, all received state of health reports remain in the directory <code>\\GeoDAS_DATA\\StatusFiles\\InfoSOH</code>
Event Detection	GeoDAS can be instructed to analyse event data files received from configured instruments to see if they belong to the same earthquake and to declare an event if it is so. You need to enable the option Declare and process triggers of seismic network in order to do so. A network event is declared if at least Minimum number of stations triggered within the Network time frame . Received event files can be converted to Seisan format and stored in Seisan database on the same computer.
Customised Data Processing	This is not a standard feature of GeoDAS. Therefore please check the GeoDAS Manual and contact GeoSIG for further details if you need to use this functionality.

C.3 Instrument Control in GeoDAS

By making a right click on the station name in the window *Stations: General Information*, several options become available to control and check the instrument. See the figure below:

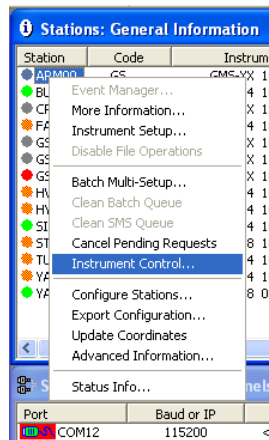


Figure 82: Instrument control of the station in GeoDAS

C.3.1 More Information... (State of Health of the Instrument)

The status of the instruments can be easily checked if the instrument is set up to transfer periodically the SOH file to the server. (See details about SOH configuration in chapter 8.4 and 9.8).

- Make right click on the Station in the GeoDAS main window and select **More Information...**, the following window will appear:

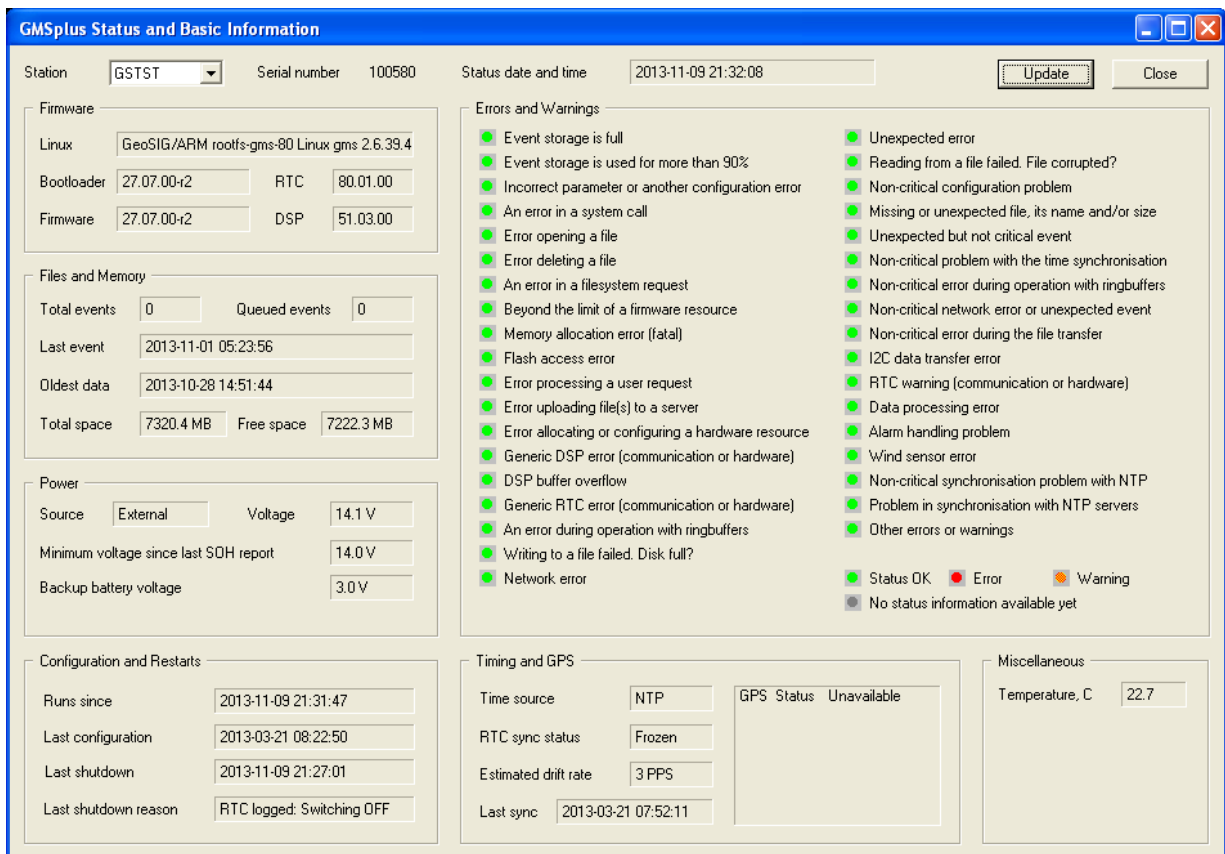


Figure 83: SOH information in GeoDAS

Information Area	Description
Status date and time	Before analysing the SOH data always make sure that the SOH files are current ones by checking the time and date here.
Firmware	Here the firmware versions of all components can be viewed.
File and Memory	Information about events and available memory
Configuration and Restarts	Date and time of the last restart, the last configuration change and the last shutdown are shown. Additionally the reason of the last shutdown is indicated.
Miscellaneous	Ambient temperature, measured inside the instrument. Other information may appear here, depending on the firmware version of the instrument.
Errors and Warnings	List of all errors and warnings of the instrument
Timing and GPS	Status of the RTC and the related GPS information if a GPS receiver is connected and configured
Power	Status of the power supply and the battery voltages

C.3.2 Instrument Setup...

See chapter 9.2.2 for details.

C.3.3 Cancel Pending Request

The pending requests on the server, as shown in the Figure 72, can be canceled by the user.

C.3.4 Instrument Communication Interface

- Make a right click on the Station in the GeoDAS main window and select **Instrument Control...**; the following window will appear:

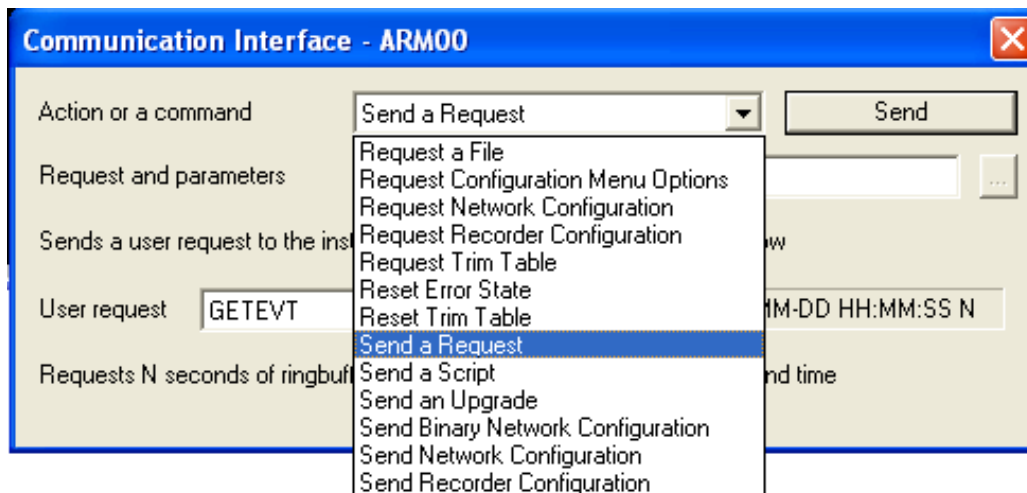


Figure 84: Instrument Communication Interface

Action or command	Description
Request a File	Request a file from the instrument (the full path to the file must be specified)
Request Configuration Menu Options	The instrument uploads the structure of the configuration menu and saves the file in <code>\\GeoDAS_DATA\Config\Stationname.mnu</code> . This file is needed for offline configuration of the instrument as described in chapter 9.2.1
Request Network Configuration	The instrument uploads the network settings of the instrument and saves the file in <code>\\GeoDAS_DATA\Config\Stationname.net</code>
Request Recorder Configuration	The instrument uploads the configuration of the instrument and saves the file in <code>\\GeoDAS_DATA\Config\Stationname.xml</code> . This file is needed for offline configuration of the instrument as described in chapter 9.2.1
Request Trim Table	The instrument will upload a SOH file containing the actual values from the RTC trim table. The latest SOH file can be found under <code>\\GeoDAS_DATA>StatusFiles\InfoSOH.xml</code>
Reset Error State	The instrument will clear all errors and warnings.
Reset Trim Table	The instrument will clear the RTC trim table.
Send a Request	Sends a user request to the instrument. For details see chapter 9.12.1
Send a Script	The instrument will download and execute the attached script. This function is for advanced users only, as it can seriously damage the instrument if the script is not written correctly.
Send an Upgrade	The instrument will download the attached file, which can be any type of the firmware, namely: Bootloader, RTC, DSP, main firmware and or the entire Linux image. For more details about the upgrade of the firmware, see chapter 11.
Send Binary Network Configuration	The instrument will download binary network configuration file from the server.
Send Network Configuration	The instrument will download the attached manually adjusted network configuration file from the server.
Send Recorder Configuration	The instrument will download the attached manually adjusted recorder configuration from the server.

C.4 Open recorded miniSEED files in GeoDAS

The system is recording miniSEED files (.MSD). For viewing such files, GeoDAS can be used. As the signal is stored inside the miniSEED file in counts, a scaling factor has to be applied when opening the data. If an **Extended format of MiniSEED** files is used (see the chapter 9.9), scaling factors are applied by GeoDAS automatically, and you may skip the information below.

- Open GeoDAS
- Open recorded mini-seed file from the menu **File** → **Open...**



Event files are stored under: `\\GeoDAS_DATA\Data\STATION_NAME`
Ringbuffer files are stored under: `\\GeoDAS_DATA\DataStreams\STATION_NAME`
Testpulses are stored under: `\\GeoDAS_DATA \Incoming\NNNNNN`

- When you open a '.MSD' file with *GeoDAS*, the following dialog box for scaling factor appears:

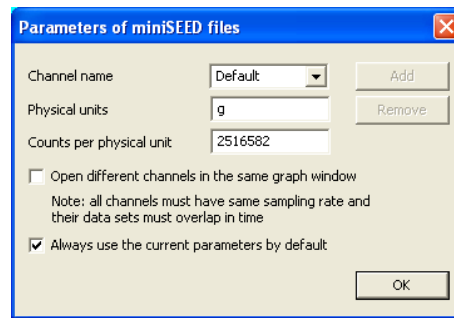


Figure 85: GeoDAS miniSEED parameters

- The values *Physical unit* and *Counts per physical unit* must be set for correct display data in GeoSIG software GeoDAS. The values can be calculated as described in chapter [C.4.2](#).



The user has the possibility to tick "Always use the current parameters" because the unit gets send with the miniseed file

- Press **OK**
- If instead of the scale prompt you get directly the graph, to get back the prompt each time you open a miniSEED file, use menu: *Analyse* → *Parameters...* → *Parameters of miniSEED files* and press **Edit**:

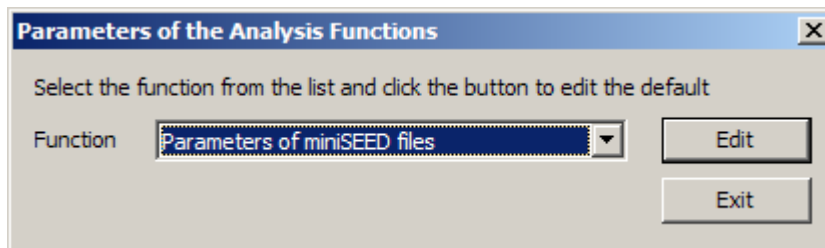


Figure 86: GeoDAS analysis parameters

- Now the dialog box for scaling factor should be seen. Enter the correct values, close and reopen the file you want to see. You will be prompted again for scale; just press OK as the scale is now correct.

C.4.1 Save predefined Scaling Factors

The scaling factor set under Counts per physical unit is always valid for all channels in the same miniSEED file. If the channels have different physical units (e.g. if a six-channel instrument with two different types of sensors is used) a scaling factor for each channel separately can be defined.

To define a scaling factor for a specific channel, enter the full channel name (e.g. LCAX1) in the *filed Channel* name and press **Add**

All channels which are not specifically defined are converted with the scaling factor saved under *Default*.

C.4.2 Calculation of the Scaling Factors

The scaling factor is the inverse of the LSB value.

$$\textit{Scalingfactor} = \frac{1}{\textit{LSB}}$$

See section [9.3.3](#) for details about how to calculate the LSB factor.